

General Description

VEHICLE DYNAMICS CONTROL (VDC)


1. General Description

A: SPECIFICATION

Item			Specification or identification	
ABS wheel speed sensor	ABS wheel speed sensor gap (for reference)	Front		0.77 — 1.43 mm (0.030 — 0.056 in)
		Rear		0.64 — 1.56 mm (0.025 — 0.061 in)
Identifications of harness (marks, color)	Front	RH		K1 (White)
		LH		K2 (Yellow)
	Rear	RH		K5 (White)
		LH		K6 (Yellow)
VDCCM&H/U Identification	AT			T3
	MT			T4

B: COMPONENT

1. ABS WHEEL SPEED SENSOR

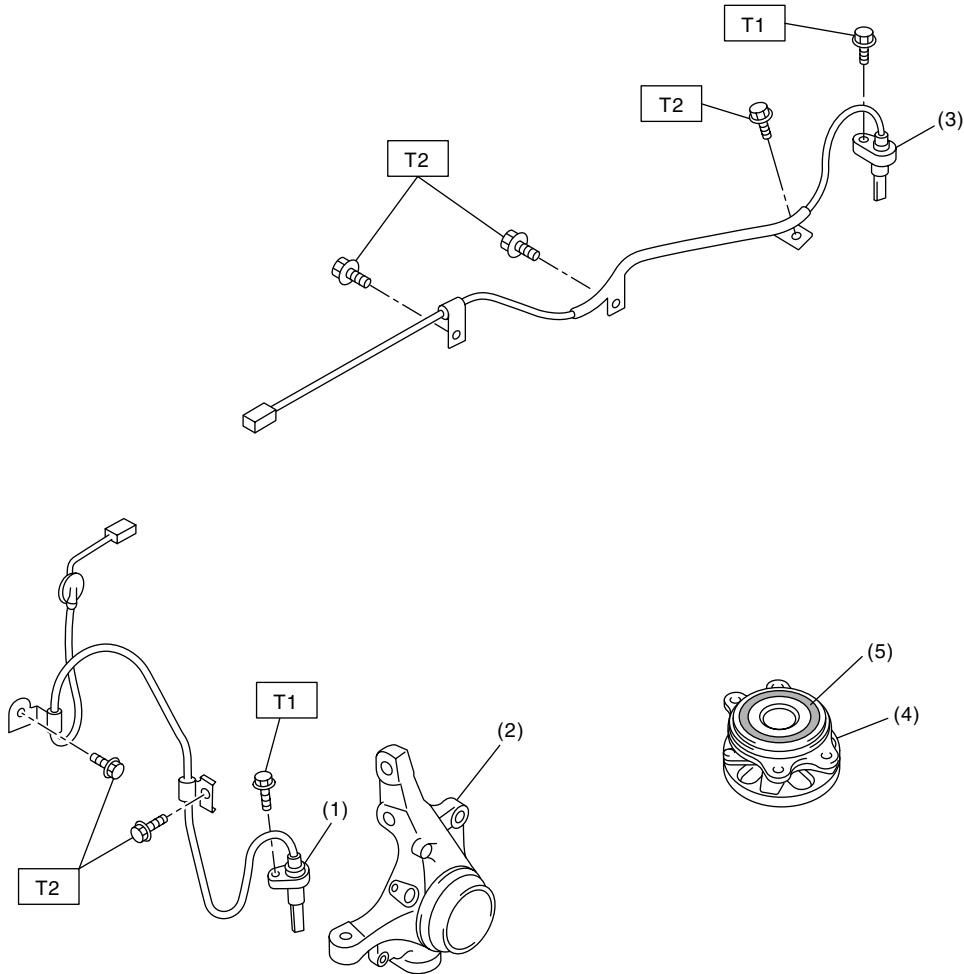

VDC00194

(1) Front ABS wheel speed sensor
(2) Front housing
(3) Rear ABS wheel speed sensor


(4) Hub unit bearing
(5) Magnetic encoder

Tightening torque: N·m (kgf·m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 33 (3.4, 24)

General Description

VEHICLE DYNAMICS CONTROL (VDC)

2. YAW RATE & LATERAL G SENSOR

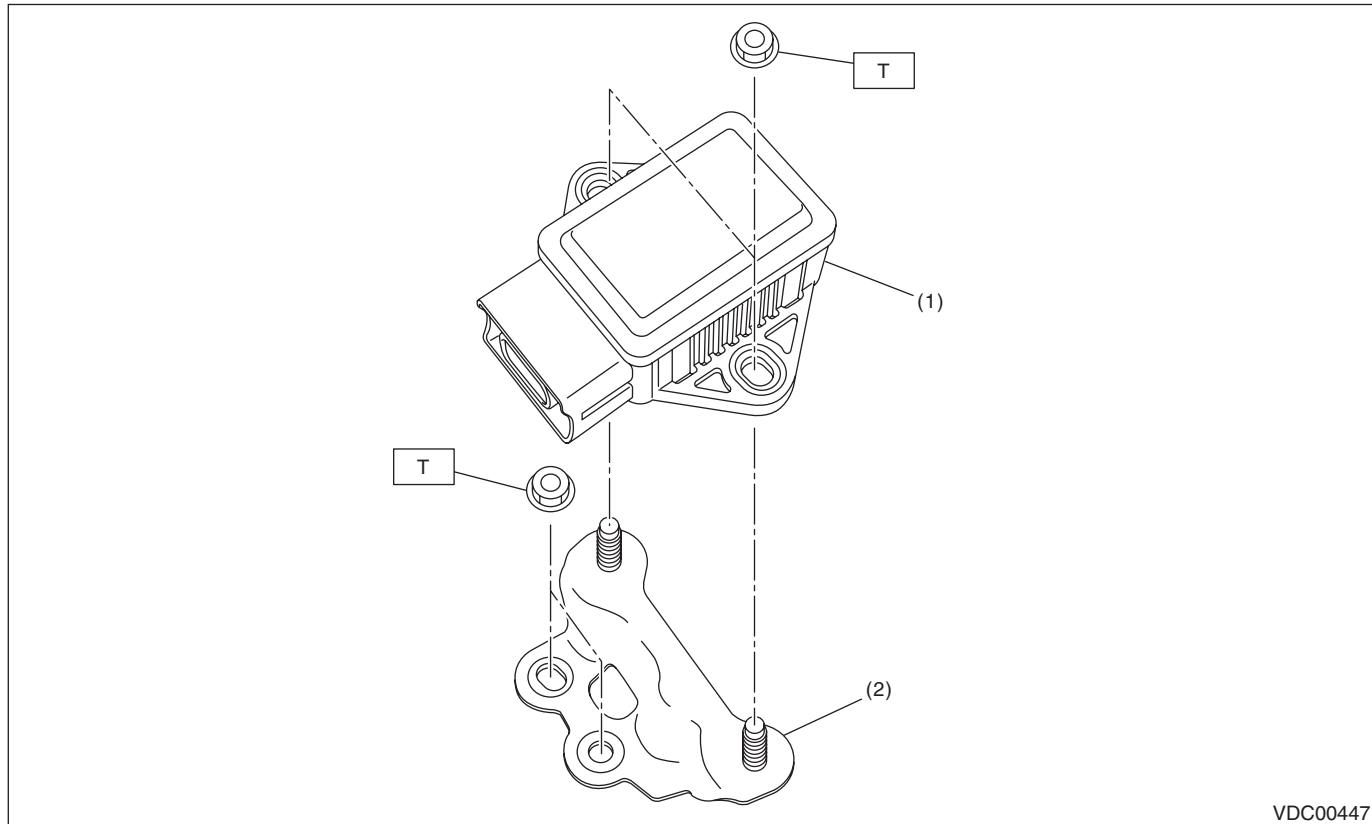


(1) Yaw rate & lateral G sensor

(2) Bracket

Tightening torque:N·m (kgf·m, ft-lb)


$T: 7.5 (0.76, 5.5)$

3. STEERING ANGLE SENSOR

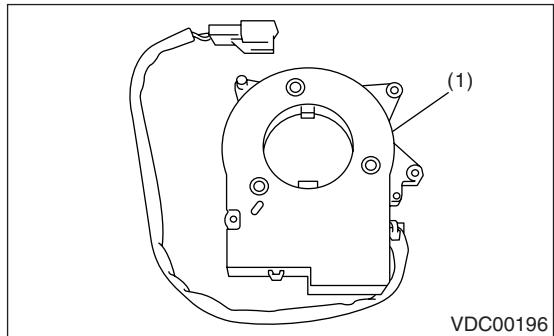

(1) Steering angle sensor

4. VDC CONTROL MODULE & HYDRAULIC CONTROL UNIT (VDCCM&H/U)

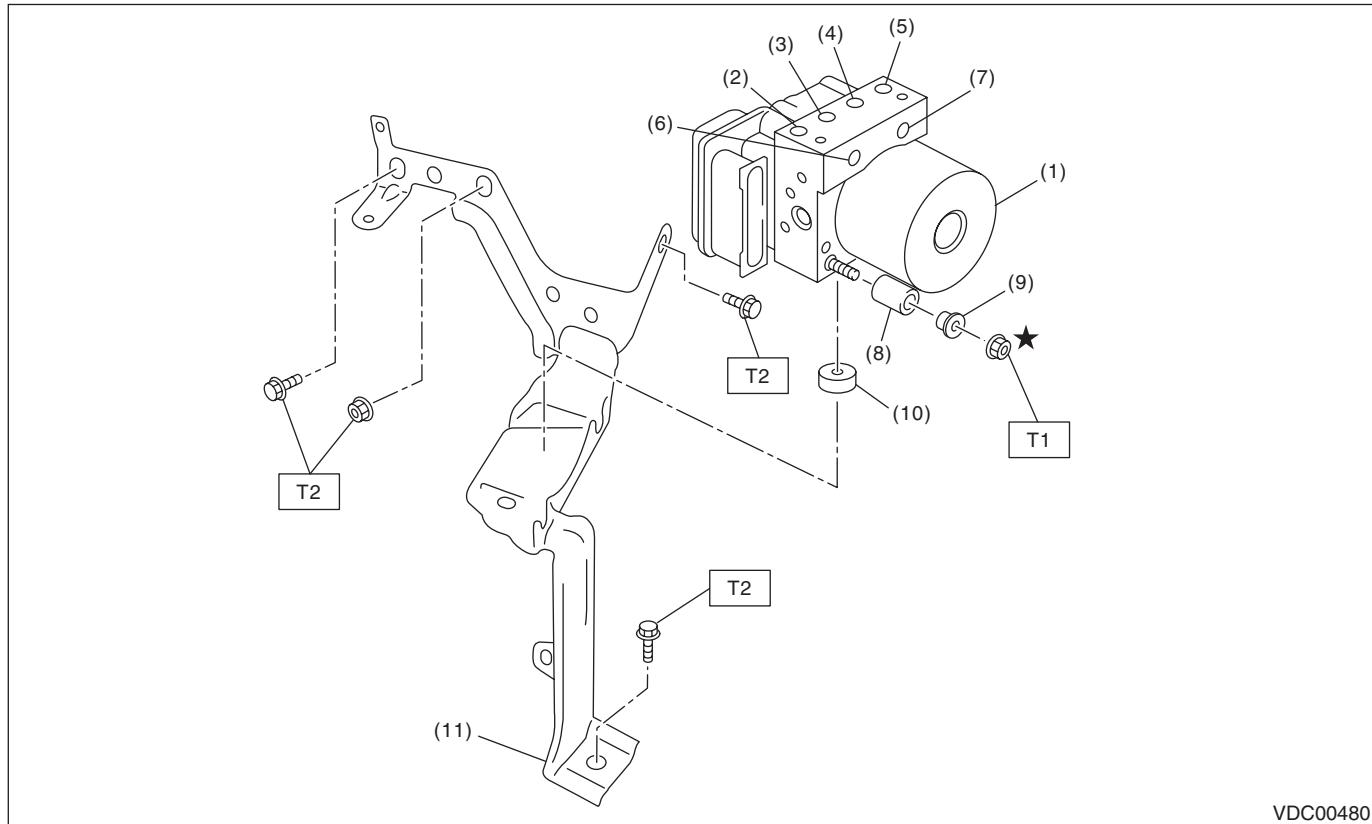

(1)	VDC control module & hydraulic control unit (VDCCM&H/U)	(6)	Primary inlet
(2)	Front RH outlet	(7)	Secondary inlet
(3)	Rear LH outlet	(8)	Damper
(4)	Rear RH outlet	(9)	Spacer
(5)	Front LH outlet	(10)	Damper

Tightening torque:N·m (kgf·m, ft-lb)
T1: 7.5 (0.76, 5.5)
T2: 33 (3.4, 24)

C: CAUTION


- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.

General Description

VEHICLE DYNAMICS CONTROL (VDC)

D: PREPARATION TOOL

1. SPECIAL TOOL

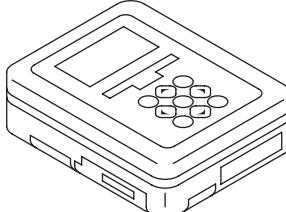ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST1B020XU0	1B020XU0	SUBARU SELECT MONITOR KIT	Used for troubleshooting for electrical system.

2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance, voltage and current.
Pressure gauge	Used for measuring oil pressure.
Oscilloscope	Used for measuring the sensor.