


11.VDC OFF Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover.
- 2) Remove the screws, and then remove the VDC OFF switch.

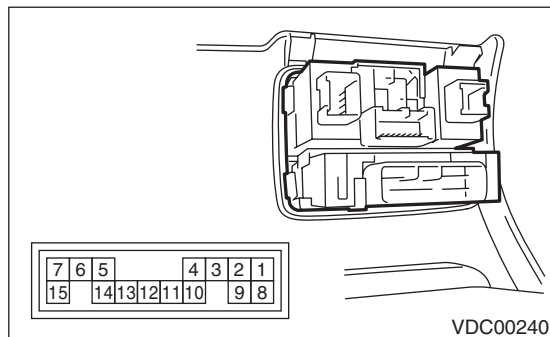

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between the VDC OFF switch terminals.

Switch position	Terminal No.	Standard
OFF	2 — 15	1 M Ω or more
ON	2 — 15	Less than 1 Ω

If NG, replace the VDC OFF switch.

VDC OFF Switch

VEHICLE DYNAMICS CONTROL (VDC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

VDC(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	4
3. General Description	8
4. Electrical Component Location	9
5. Control Module I/O Signal	11
6. Subaru Select Monitor	14
7. Read Diagnostic Trouble Code (DTC)	21
8. Inspection Mode	22
9. Clear Memory Mode	23
10. Warning Light Illumination Pattern	24
11. List of Diagnostic Trouble Code (DTC)	34
12. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	39
13. General Diagnostic Table	97