

## 4. Aluminum Wheel

### A: REMOVAL

Refer to "Steel Wheels" for removal procedure of aluminum wheels. <Ref. to WT-6, REMOVAL, Steel Wheel.>

### B: INSTALLATION

Refer to "Steel Wheels" for installation procedure of aluminum wheels. <Ref. to WT-6, INSTALLATION, Steel Wheel.>

### C: INSPECTION

Refer to "Steel Wheels" for inspection procedure of aluminum wheels. <Ref. to WT-6, INSPECTION, Steel Wheel.>

#### *Rim runout:*

Axial runout limit	Vertical run out limit
1.0 mm (0.039 in)	

### D: CAUTION

Aluminum wheels are easily scratched. To maintain their appearance and safety, be careful of the following:

- 1) Do not damage the aluminum wheels during removal, installation, wheel balancing, etc. After removing aluminum wheels, place them on a rubber mat etc.
- 2) When washing the aluminum wheel, use neutral synthetic detergent and water. Avoid using cleaners containing abrasives, hard brushes or an automatic car washer.