

### 8. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

For details concerning DTC reading procedure, refer to "Subaru Select Monitor". <Ref. to AB(diag)-31, Subaru Select Monitor.>