

4. Horn Switch

A: REMOVAL

CAUTION:

Before servicing, be sure to read the notes in the AB section for proper handling of the driver's airbag module. <Ref. to AB-4, CAUTION, General Description.>

NOTE:

Horn switch is a unit with the driver's airbag module.


- 1) Disconnect the ground cable from battery.
- 2) Remove the driver's airbag module. <Ref. to AB-15, REMOVAL, Driver's Airbag Module.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the resistance between horn switch terminal and airbag module bracket.

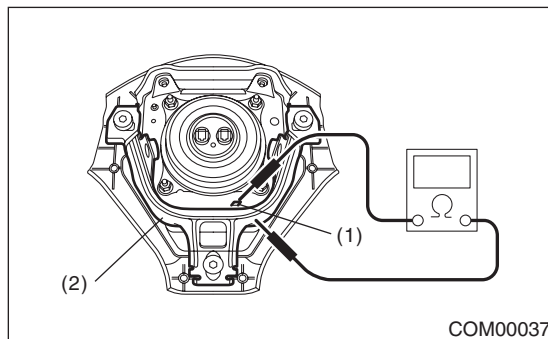

- (1) Airbag module bracket
(2) Horn switch terminal

Switch position	Terminal No.	Resistance
When horn switch is pushed.	Horn switch terminal and airbag module bracket	Less than 1 Ω
When horn switch is not pushed.		1 M Ω or more

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Power Window System	8
3. Power Window Control Switch	9
4. Front Door Glass	11
5. Front Regulator and Motor Assembly	16
6. Remote Control Mirror System	17
7. Scalp Cap	18
8. Outer Mirror Assembly	19
9. Outer Mirror	20
10. Remote Control Mirror Switch	21
11. Rear Door Glass	22
12. Rear Regulator and Motor Assembly	24
13. Windshield Glass	25
14. Rear Gate Glass	28
15. Rear Window Glass	29
16. Rear Window Defogger System	30
17. Rear Window Defogger	31
18. Rear Quarter Glass	33
19. Sunroof Glass	34
20. Rearview Mirror	35
21. Wiper Deicer System	36
22. Wiper Deicer Switch	37