

2. Cruise Control Unit

A: NOTE

The control of cruise control system is carried out in engine control module (ECM).

B: REMOVAL

<Ref. to FU(H4SO)-35, REMOVAL, Engine Control Module (ECM).>

<Ref. to FU(H4DOTC)-44, REMOVAL, Engine Control Module (ECM).>

<Ref. to FU(H6DO)-33, REMOVAL, Engine Control Module (ECM).>

C: INSTALLATION

<Ref. to FU(H4SO)-35, INSTALLATION, Engine Control Module (ECM).>

<Ref. to FU(H4DOTC)-44, INSTALLATION, Engine Control Module (ECM).>

<Ref. to FU(H6DO)-33, INSTALLATION, Engine Control Module (ECM).>