


### 3. Cruise Control Command Switch

#### A: REMOVAL


**CAUTION:**

Before servicing, be sure to read the notes in the "AB" section for proper handling of the driver's airbag module. <Ref. to AB-4, CAUTION, General Description.>


- 1) Set the front wheels in straight ahead position.
- 2) Turn the ignition switch to OFF.
- 3) Disconnect the ground cable from battery and wait for at least 20 seconds before starting work.
- 4) Using TORX® bit T30 (1), loosen two TORX® bolts which secure the driver's airbag module.

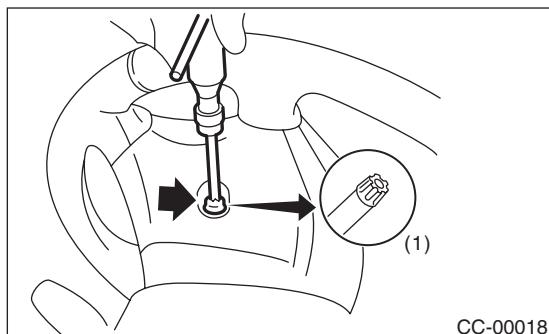

- 5) Disconnect the airbag module connector on back of the airbag module.
- 6) Remove the steering wheel. <Ref. to PS-14, REMOVAL, Steering Wheel.>
- 7) Remove the four screws to remove the lower cover from steering wheel.

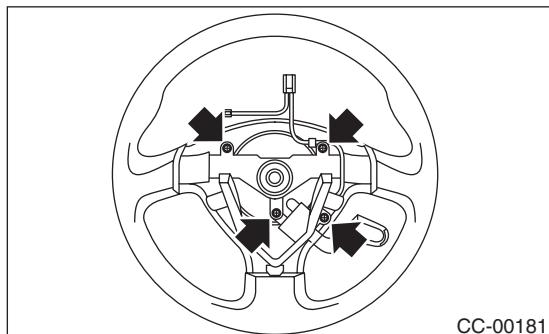

- 8) Remove one screw to remove the cruise control command switch from lower cover.

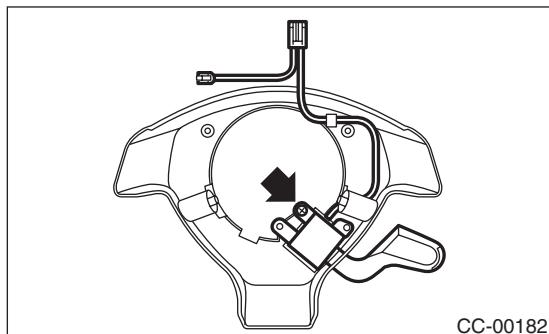


#### B: INSTALLATION

Install in the reverse order of removal.

#### C: INSPECTION

Measure the cruise control command switch resistance.

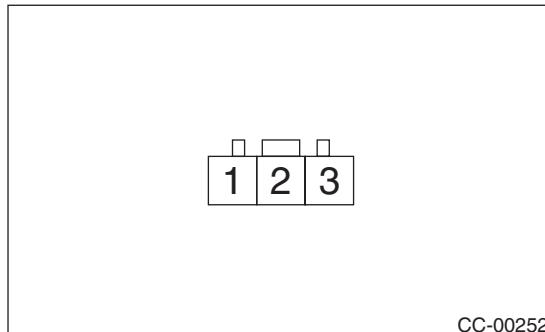

CC-00252

| Switch                                  | Position | Terminal No. | Standard       |
|---|----------|--------------|----------------|
| CANCEL<br>SET/COAST<br>RESUME/<br>ACCEL | All OFF  | 2 and 3      | Approx. 4 kΩ   |
| CANCEL                                  | ON       | 2 and 3      | Less than 1 Ω  |
| SET/COAST                               | ON       | 2 and 3      | Approx. 250 Ω  |
| RESUME/<br>ACCEL                        | ON       | 2 and 3      | Approx. 1500 Ω |
| MAIN                                    | OFF      | 1 and 2      | 1 MΩ or more   |
|   | ON       | 1 and 2      | Less than 1 Ω  |

If NG, replace the cruise control command switch.