

5. Clutch Switch

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from the clutch switch, and then remove the switch. <Ref. to CL-31, DIS-ASSEMBLY, Clutch Pedal.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the clutch switch resistance.

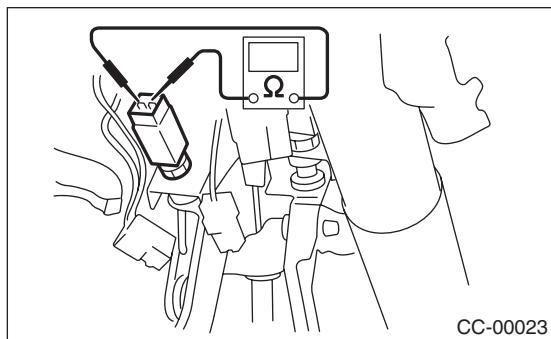

Switch	Pedal	Terminal No.	Standard
Clutch	Released	1 and 2	Less than 1 Ω
	Depressed	1 and 2	1 $M\Omega$ or more

If NG, replace the clutch switch.