

2. Audio System

A: WIRING DIAGRAM

<Ref. to WI-149, WIRING DIAGRAM, Audio System.>

B: INSPECTION

Symptom	Repair order
No power coming in. (No display and no sound from speakers)	<ol style="list-style-type: none">1. Check the fuse and power supply for audio.2. Check the audio ground.3. Remove the audio and repair them.
A specific speaker does not operate.	<ol style="list-style-type: none">1. Check the speaker.2. Check the output circuit between audio and speaker.
Audio generates noise with engine is running.	<ol style="list-style-type: none">1. Check the audio ground.2. Check the generator.3. Check the ignition coil.4. Remove the audio and repair them.
Volume is low in AM and FM modes or interference noise occurs.	<ol style="list-style-type: none">1. Check the antenna.2. Check the antenna amplifier.3. Check the noise suppressor.4. Check the audio ground.5. Remove the audio and repair them.