


2. Front Hood

A: REMOVAL

1. FRONT HOOD INSULATOR


- 1) Open the front hood.
- 2) Release the clips to remove the front hood insulator.

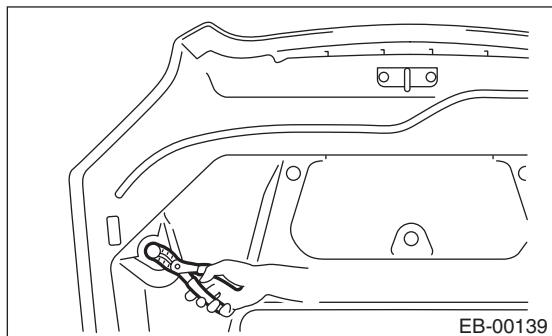

EB-00139

2. FRONT HOOD WEATHER STRIP

- 1) Open the front hood.
- 2) Remove the clips, and remove the front hood weather strip (A) and intake duct weather strip (B).

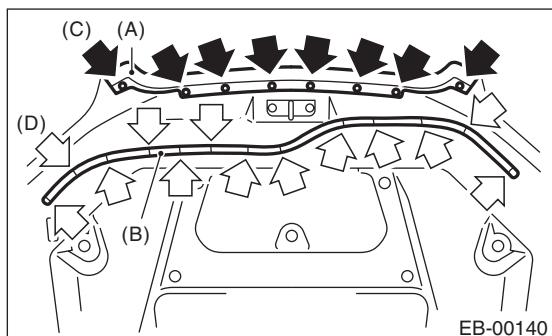


EB-00140

(C) Clip

(D) Weather strip clip

NOTE:


If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

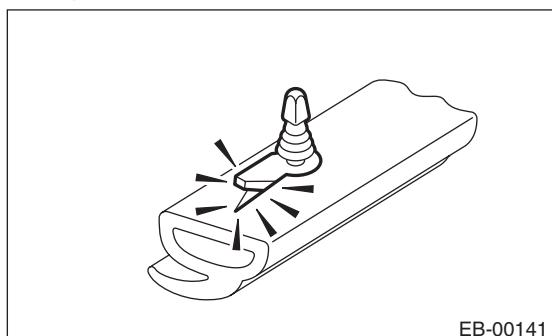

EB-00141


3. FRONT HOOD HINGE

- 1) Remove the bolt, and remove the front hood panel. <Ref. to EB-14, FRONT HOOD PANEL, REMOVAL, Front Hood.>

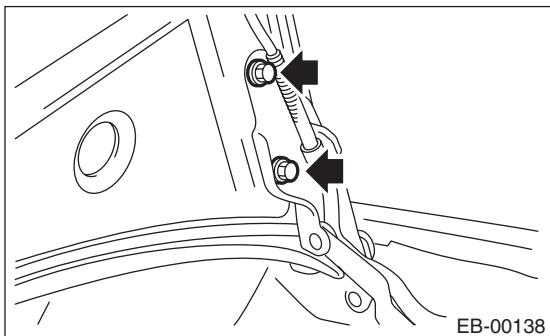


EB-00138

- 2) Remove the clip, and remove the cowl side panel front.

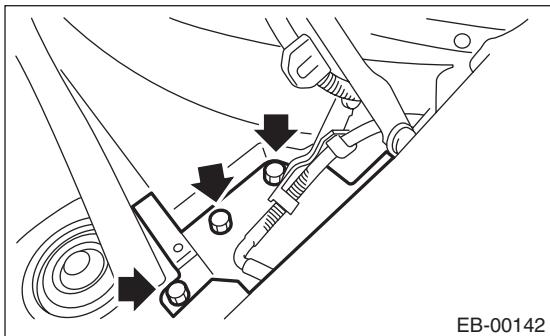

EB-00142


- 3) Remove clamp (A) of the window washer hose, and remove the bolt of the hinge.

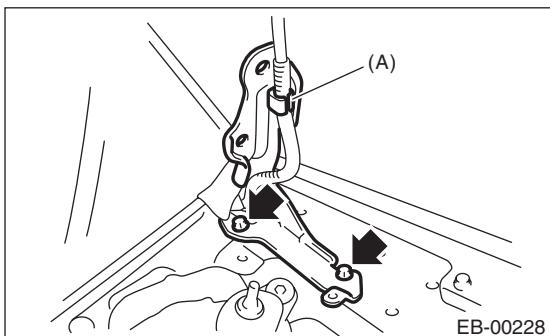

EB-00228

4. FRONT HOOD STRIKER

- 1) Open the front hood.
- 2) Remove the bolt, and remove the front hood striker.

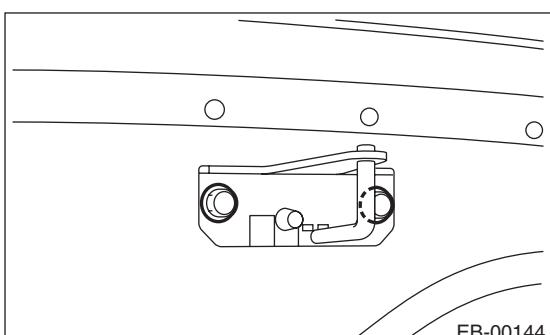


EB-00144

EXTERIOR BODY PANELS

5. FRONT HOOD PANEL

- 1) Open the front hood to remove the window washer hose.

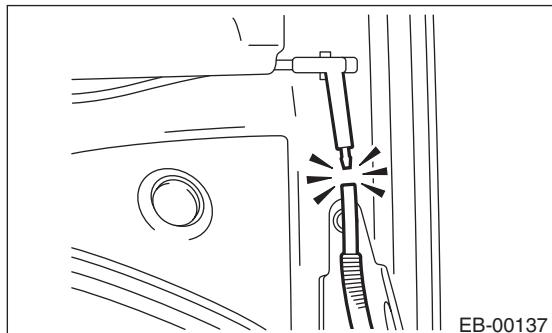

- 2) Remove the front hood insulator.

<Ref. to EB-13, FRONT HOOD INSULATOR, REMOVAL, Front Hood.>

- 3) Remove the front hood weather strip.

<Ref. to EB-13, FRONT HOOD WEATHER STRIP, REMOVAL, Front Hood.>

- 4) Remove the front hood striker.

<Ref. to EB-13, FRONT HOOD STRIKER, REMOVAL, Front Hood.>


- 5) Remove the front hood duct. (Turbo model)

<Ref. to EI-25, REMOVAL, Front Hood Grille.>

- 6) Remove the window washer hose and nozzle.

<Ref. to WW-14, REMOVAL, Front Washer Nozzle.>

- 7) Remove the bolt, and remove the front hood panel from the front hood hinge.

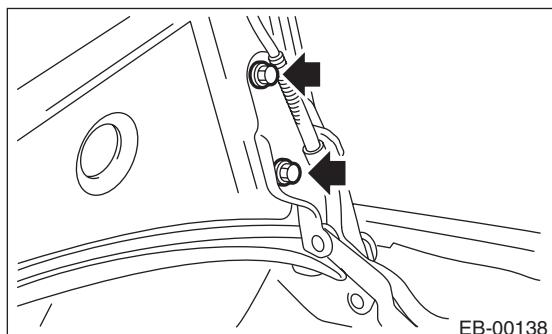

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Be careful not to catch the window washer hose in when installing the front hood insulator.


Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to EB-6, FRONT HOOD, COMPONENT, General Description.>

C: ADJUSTMENT

- 1) Adjust the clearance between front hood panel and front fender panel. Clearance must be equal at both sides. For the dimension of clearance, refer to "SPECIFICATION" in "General Description". <Ref. to EB-2, SPECIFICATION, General Description.>

- 2) Use the hinge mounting bolts to align the front hood longitudinal and lateral position.

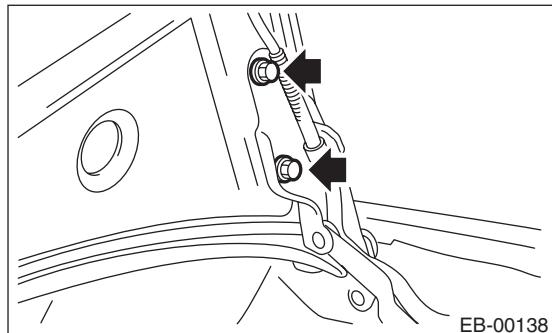

- 3) Adjust the height at the front end of hood. <Ref. to SL-44, ADJUSTMENT, Front Hood Lock Assembly.>

- 4) Rotate the hood buffer to adjust lateral height.

