


### 6. Rear Door


#### A: REMOVAL

##### 1. REAR DOOR PANEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the rear door trim. <Ref. to EI-47, REMOVAL, Door Trim.>
- 3) Remove the rear speaker. <Ref. to ET-13, REMOVAL, Rear Speaker.>
- 4) Remove the sealing cover. <Ref. to EB-23, REMOVAL, Rear Sealing Cover.>
- 5) Remove the rear door glass. <Ref. to GW-22, REMOVAL, Rear Door Glass.>
- 6) Remove the door sash and rear door regulator and motor assembly. <Ref. to GW-24, REMOVAL, Rear Regulator and Motor Assembly.>
- 7) Remove the rear door latch. <Ref. to SL-38, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 8) Remove the rear outer handle. <Ref. to SL-37, REMOVAL, Rear Outer Handle.>
- 9) Remove the screw to remove the door trim bracket.

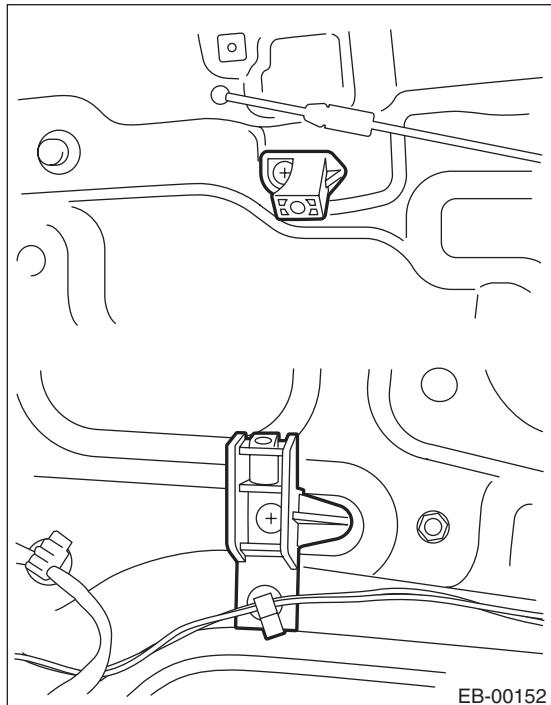


- 10) Remove the rear door inner weather strip.

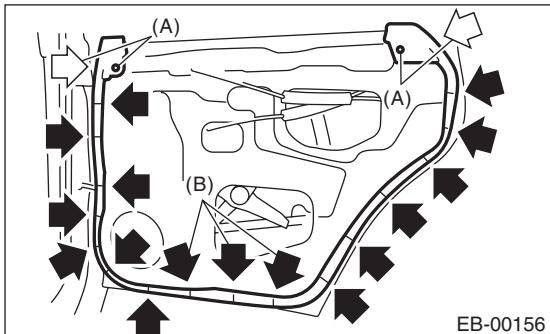


(A) Pin clip  
(B) Weather strip clip

#### NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use clip remover to remove.

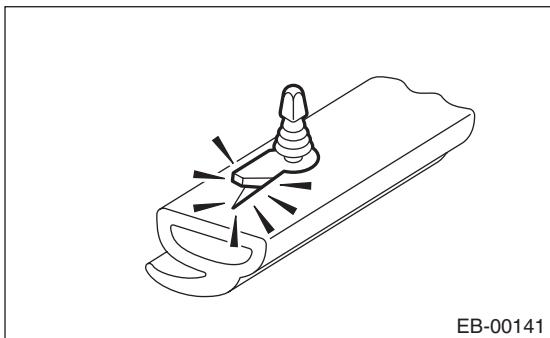


- 11) Remove the bolts and nuts to remove the door checker.

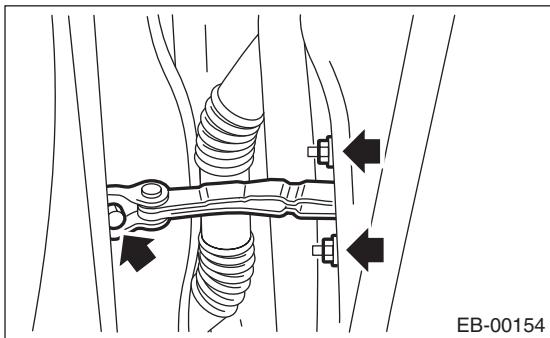

- 12) Remove the rear door. <Ref. to EB-21, REAR DOOR ASSEMBLY, REMOVAL, Rear Door.>


## 2. REAR DOOR ASSEMBLY

- 1) Disconnect the ground cable from the battery.
- 2) Pull the door harness connector inside the center pillar, then disconnect the connector.

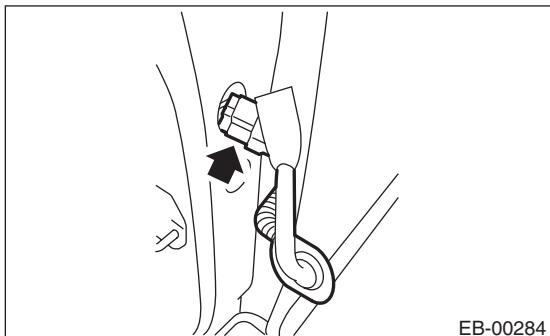


EB-00284

- 3) Put a wooden block on jack and place jack under the rear door. Support the rear door with the jack to protect it from damage.

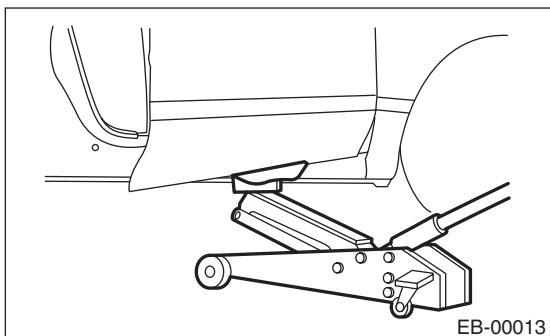


EB-00013

- 4) Remove the bolt from the door checker.

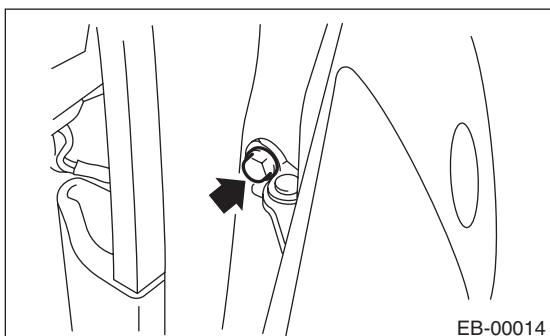

EB-00014

- 5) Remove the door-side bolts for upper and lower hinges to remove the rear door panel.

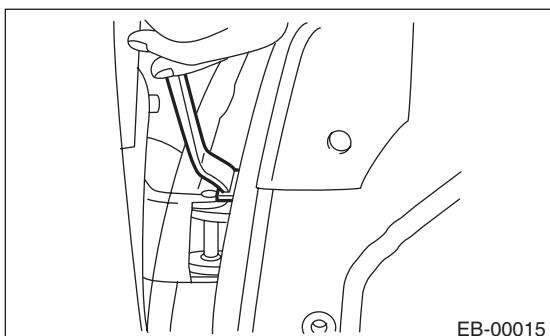

EB-00015

- 6) Remove the door hinge from vehicle.

## B: INSTALLATION

### 1. REAR DOOR PANEL

Install in the reverse order of removal.


#### **Tightening torque:**

Refer to "COMPONENT" of "General Description".

<Ref. to EB-9, REAR DOOR PANEL, COMPONENT, General Description.>

### 2. REAR DOOR ASSEMBLY

- 1) Put a wooden block on jack and place the rear door on that.

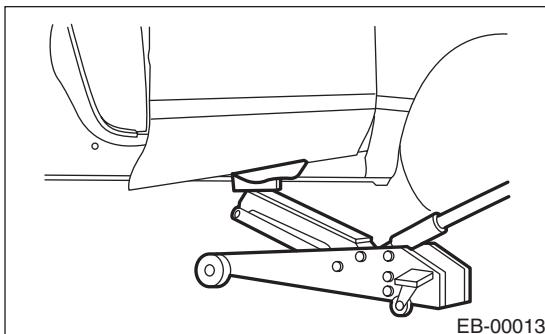

EB-00013

- 2) Apply grease to the moving part of door hinges.
- 3) Install the rear door to upper hinge and lower hinge adjusting by jack.
- 4) Tighten bolt of door checker.
- 5) Connect the door harness connector, and install the center pillar inner protector.
- 6) Install the center pillar lower trim.


#### **Tightening torque:**

Refer to "COMPONENT" of "General Description".

<Ref. to EB-9, REAR DOOR PANEL, COMPONENT, General Description.>

### C: ADJUSTMENT

- 1) Open the rear door, loosen the door-side bolts of upper and lower hinges to align the position for vertical and horizontal direction of rear door panel.

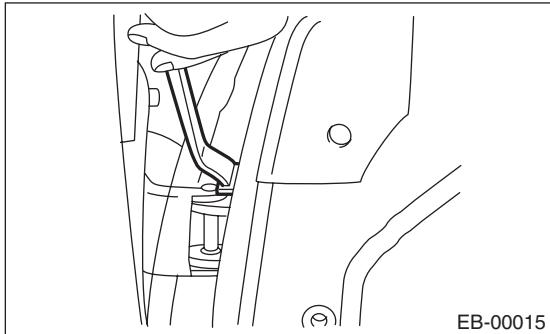

- 2) Loosen the screw (A) and tap striker (B) using plastic hammer to adjust the gap between rear end surface of rear door panel and body surface.

**CAUTION:**

**Do not use an impact wrench. Welding area on the striker nut plate is easily broken.**

