


General Description

EXTERIOR/INTERIOR TRIM

1. General Description

A: COMPONENT

1. FRONT GRILLE

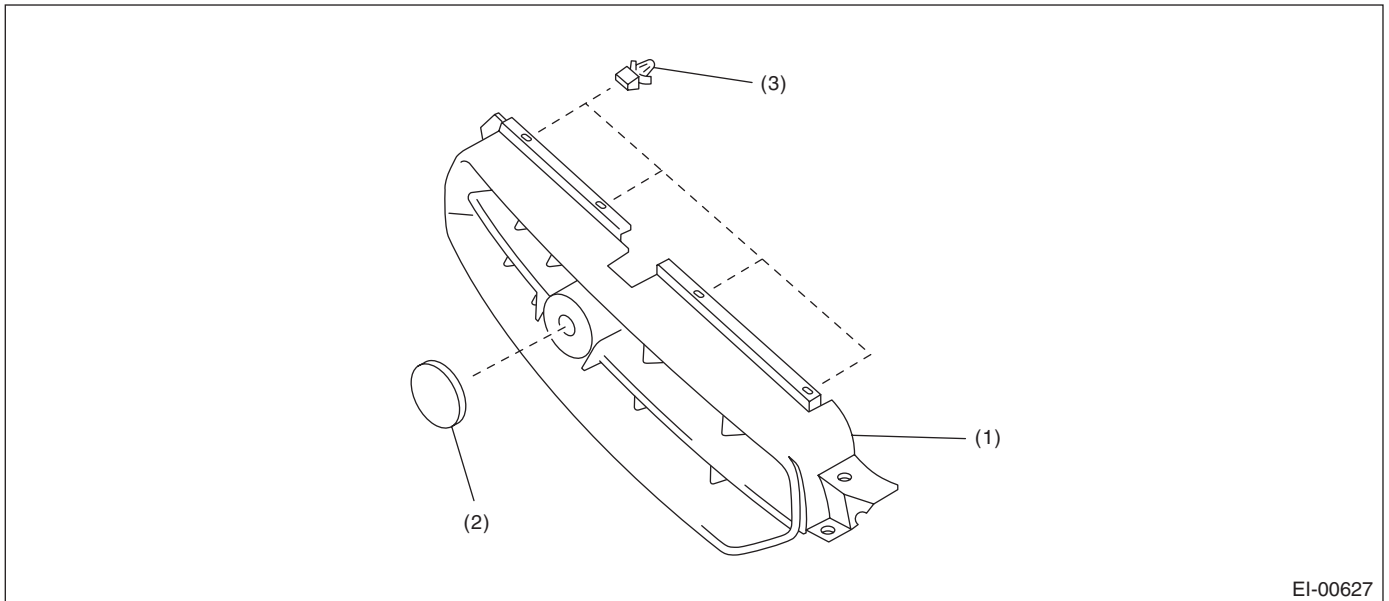


(1) Front grille

(2) Front grille emblem

(3) Front grille clip


2. UNDER COVER

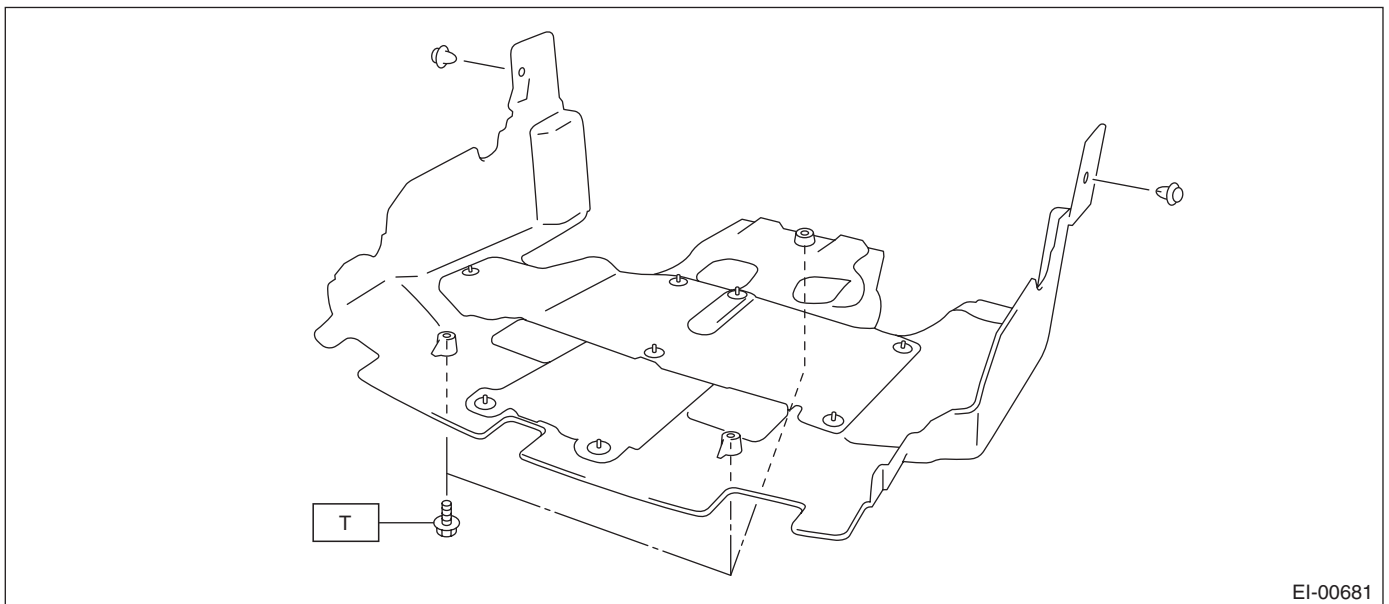

Tightening torque:N·m (kgf-m, ft-lb)

T: 14 (1.42, 10.3)

3. UNDER PROTECTOR

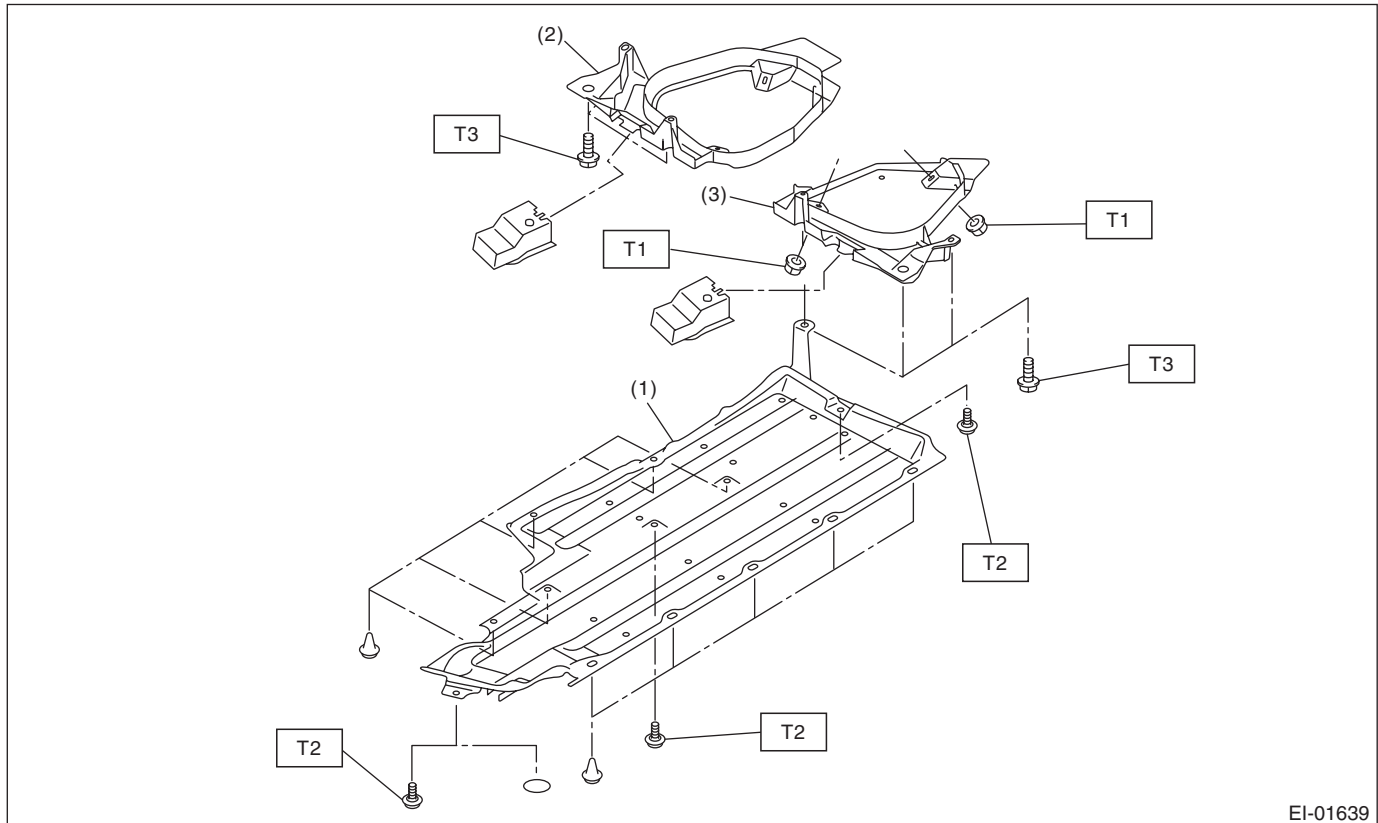

EI-01639

- (1) Floor under protector
(2) Fuel tank protector RH
(3) Fuel tank protector LH

Tightening torque: N·m (kgf-m, ft-lb)

T1: 9 (0.92, 6.5)


T2: 14 (1.42, 10.3)

T3: 17.5 (0.92, 12.9)

General Description

EXTERIOR/INTERIOR TRIM

4. FRONT HOOD GRILLE

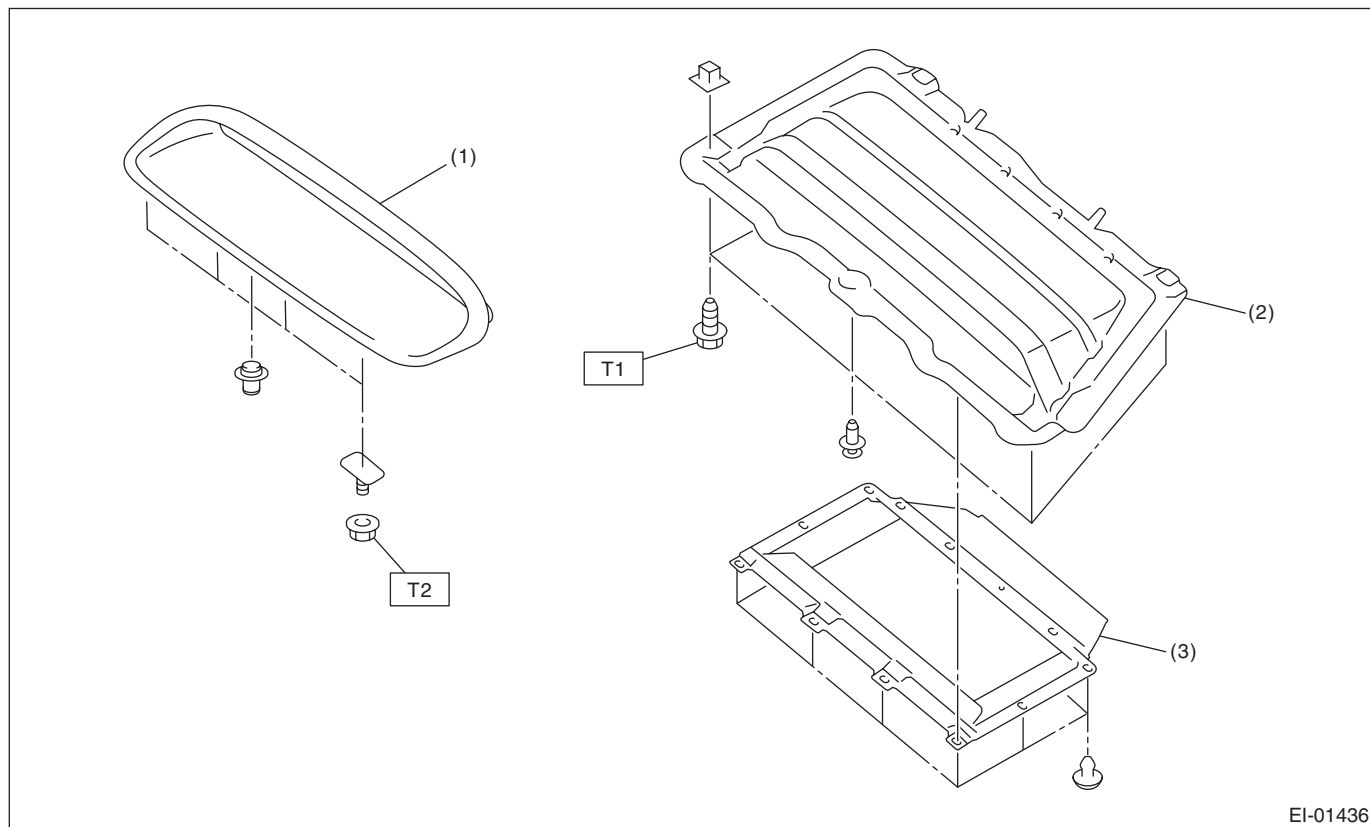


- (1) Front hood grille
- (2) Grille duct upper
- (3) Grille duct lower

Tightening torque: N·m (kgf-m, ft-lb)

T1: 1.0 (0.1, 0.72)

T2: 4.4 (0.45, 3.18)

5. FRONT BUMPER

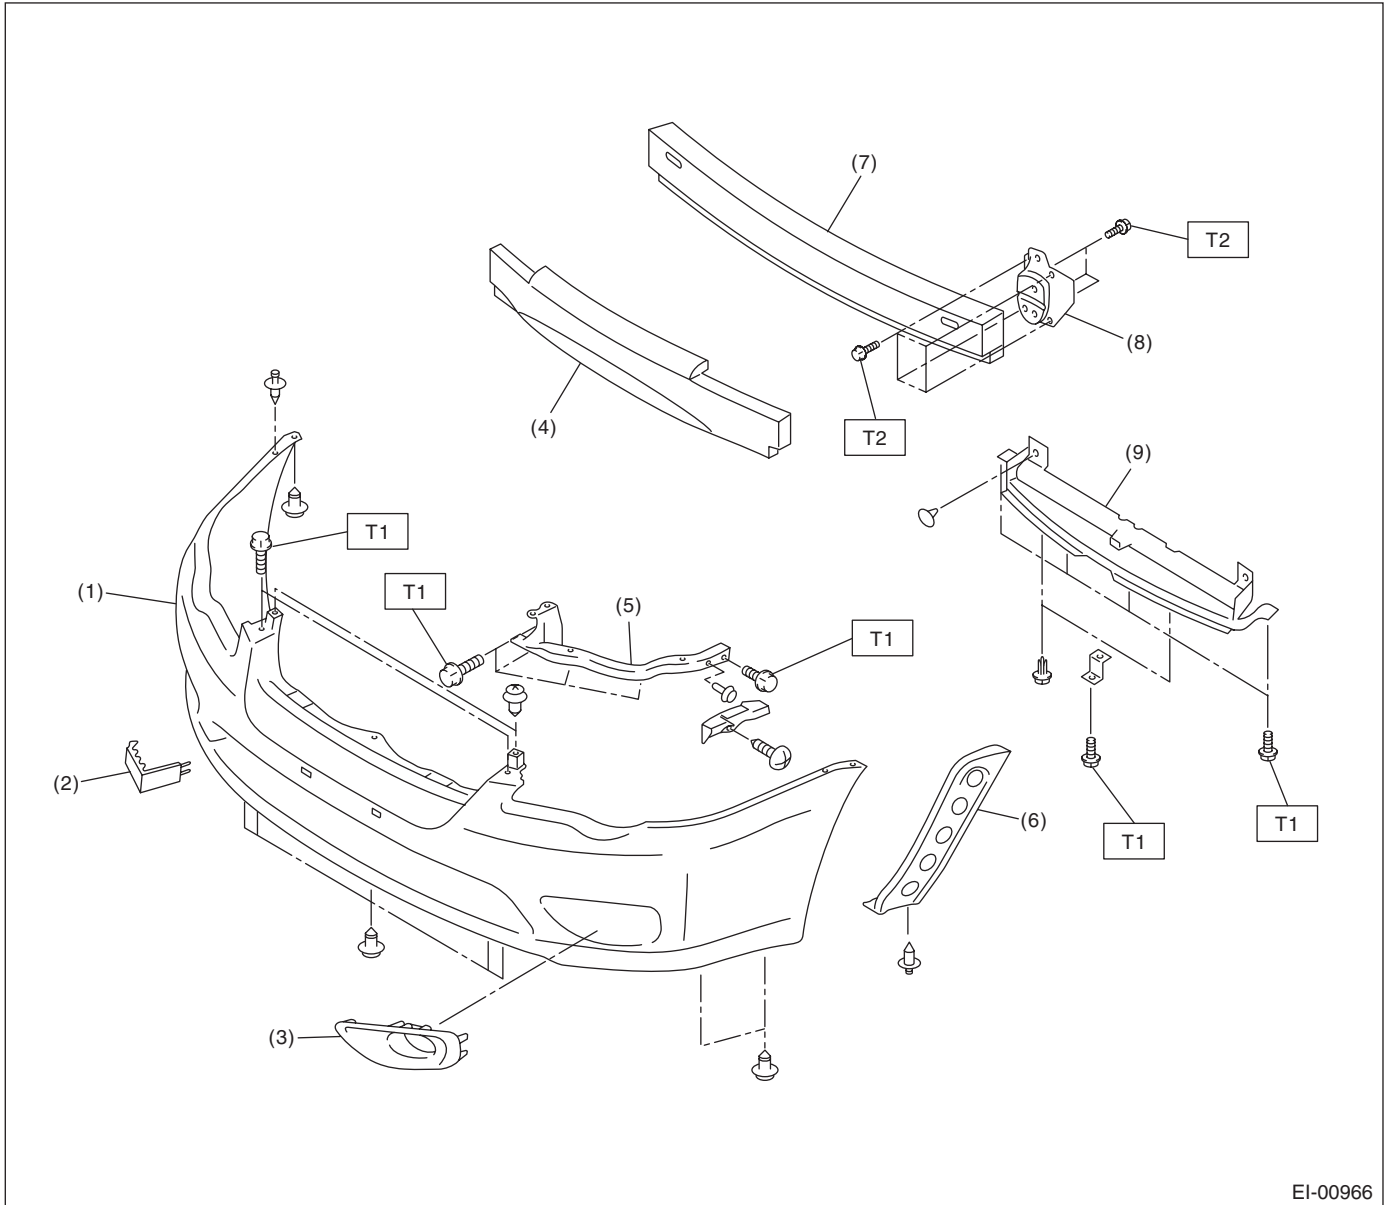

EI-00966

- | | |
|--------------------------|-------------------------------|
| (1) Bumper face | (6) Side bracket |
| (2) Towing hook cover | (7) Bumper beam reinforcement |
| (3) Fog light cover | (8) Bumper beam bracket |
| (4) Energy absorber foam | (9) Radiator guide |
| (5) Upper bracket | |

Tightening torque: N·m (kgf-m, ft-lb)


T1: 7.5 (0.77, 5.53)

T2: 33 (3.4, 24)

General Description

EXTERIOR/INTERIOR TRIM

6. REAR BUMPER (SEDAN MODEL)

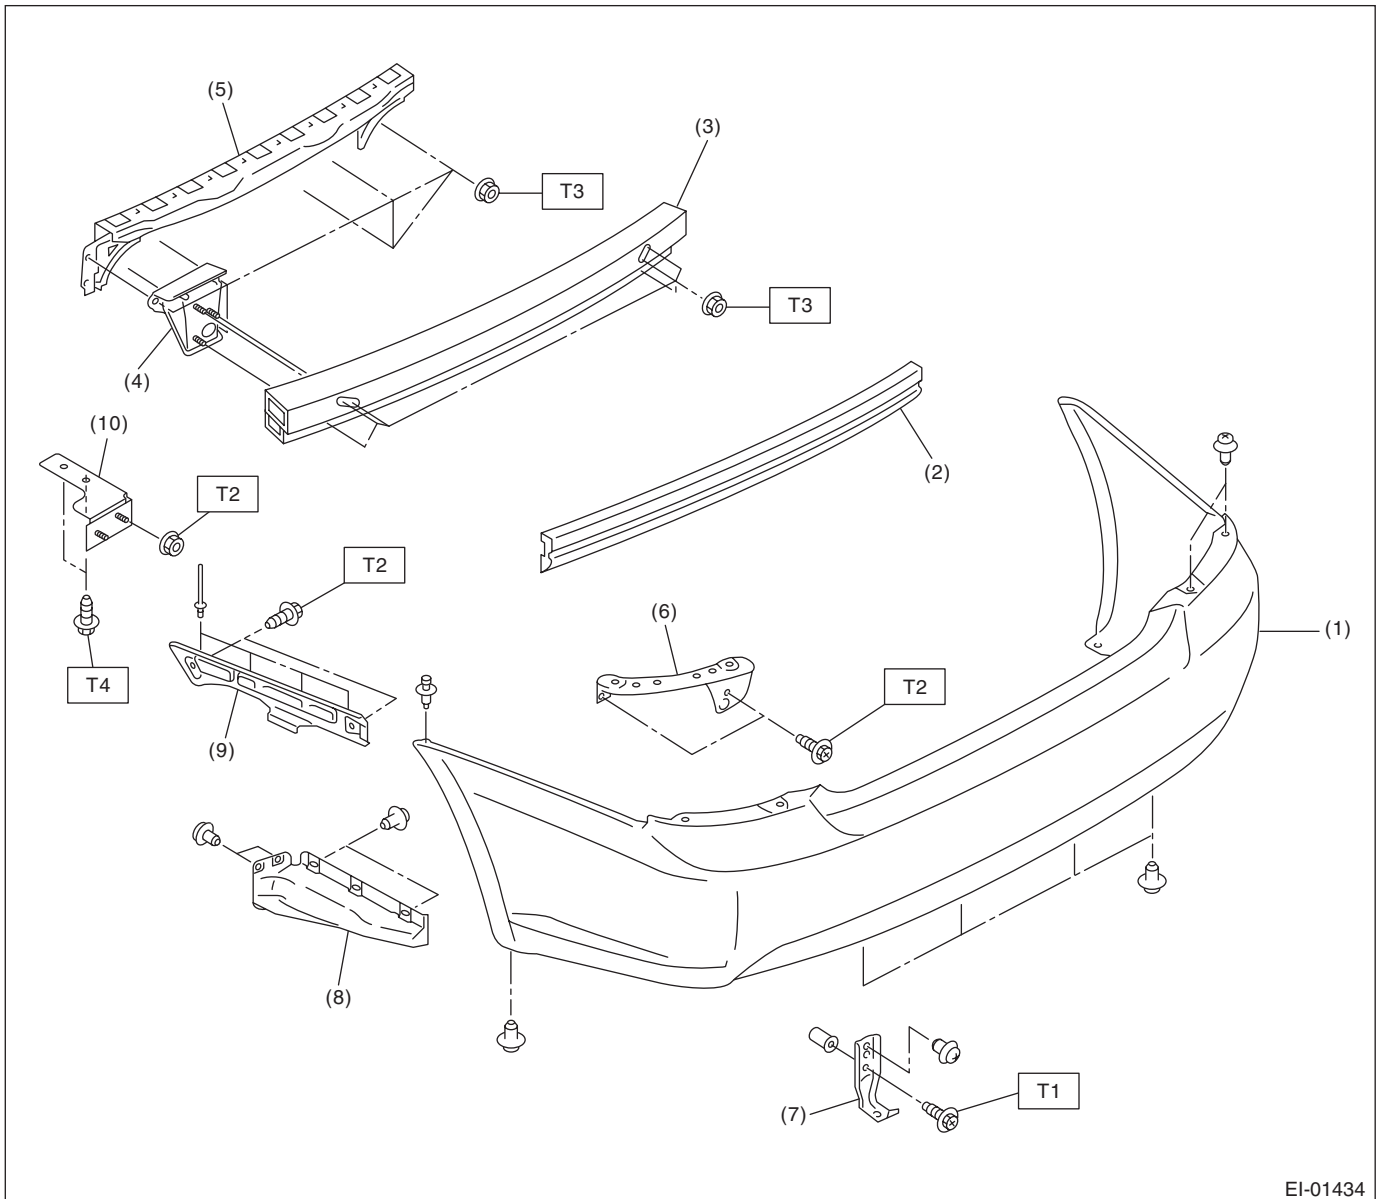

EI-01434

- | | |
|-------------------------------|--|
| (1) Bumper face | (7) Lower bracket |
| (2) Energy absorber foam | (8) Bumper side support lower |
| (3) Bumper beam reinforcement | (9) Bumper side support upper |
| (4) Bumper beam bracket | (10) Rear bumper gusset (for installing trailer hitch, OUTBACK only) |
| (5) Beam upper rear | |
| (6) Bracket corner | |

Tightening torque: N·m (kgf-m, ft-lb)

T1: 2 (0.2, 1.48)

T2: 7.5 (0.77, 5.53)

T3: 33 (3.4, 24)

T4: 72 (7.3, 53.1)

This exploded view diagram illustrates the assembly of a vehicle bumper. The components are numbered as follows:

- (1)**: Bumper cover
- (2)**: Bumper reinforcement bar
- (3)**: Upper mounting bracket
- (4)**: Lower mounting bracket
- (5)**: Upper mounting rail
- (6)**: Bumper cover to reinforcement bar bracket
- (7)**: Bumper cover to reinforcement bar bracket (alternative view)
- (8)**: Bumper cover to reinforcement bar bracket (alternative view)
- (9)**: Bumper reinforcement bar to lower mounting bracket bracket
- (10)**: Bumper reinforcement bar to lower mounting bracket bracket (alternative view)

The torque specifications for the fasteners are indicated by labels T1, T2, T3, and T4:


- T1**: Torque for the fasteners securing the bumper cover to the reinforcement bar (parts 7 and 8).
- T2**: Torque for the fasteners securing the bumper reinforcement bar to the lower mounting bracket (parts 6 and 9).
- T3**: Torque for the fasteners securing the upper mounting bracket to the reinforcement bar (part 3).
- T4**: Torque for the fasteners securing the bumper reinforcement bar to the lower mounting bracket (part 10).

- Tightening torque:N·m (kgf-m, ft-lb)**
T1: 2 (0.2, 1.48)
T2: 7.5 (0.77, 5.53)
T3: 33 (3.4, 24)
T4: 72 (7.3, 53.1)

General Description

EXTERIOR/INTERIOR TRIM

8. MUD GUARD

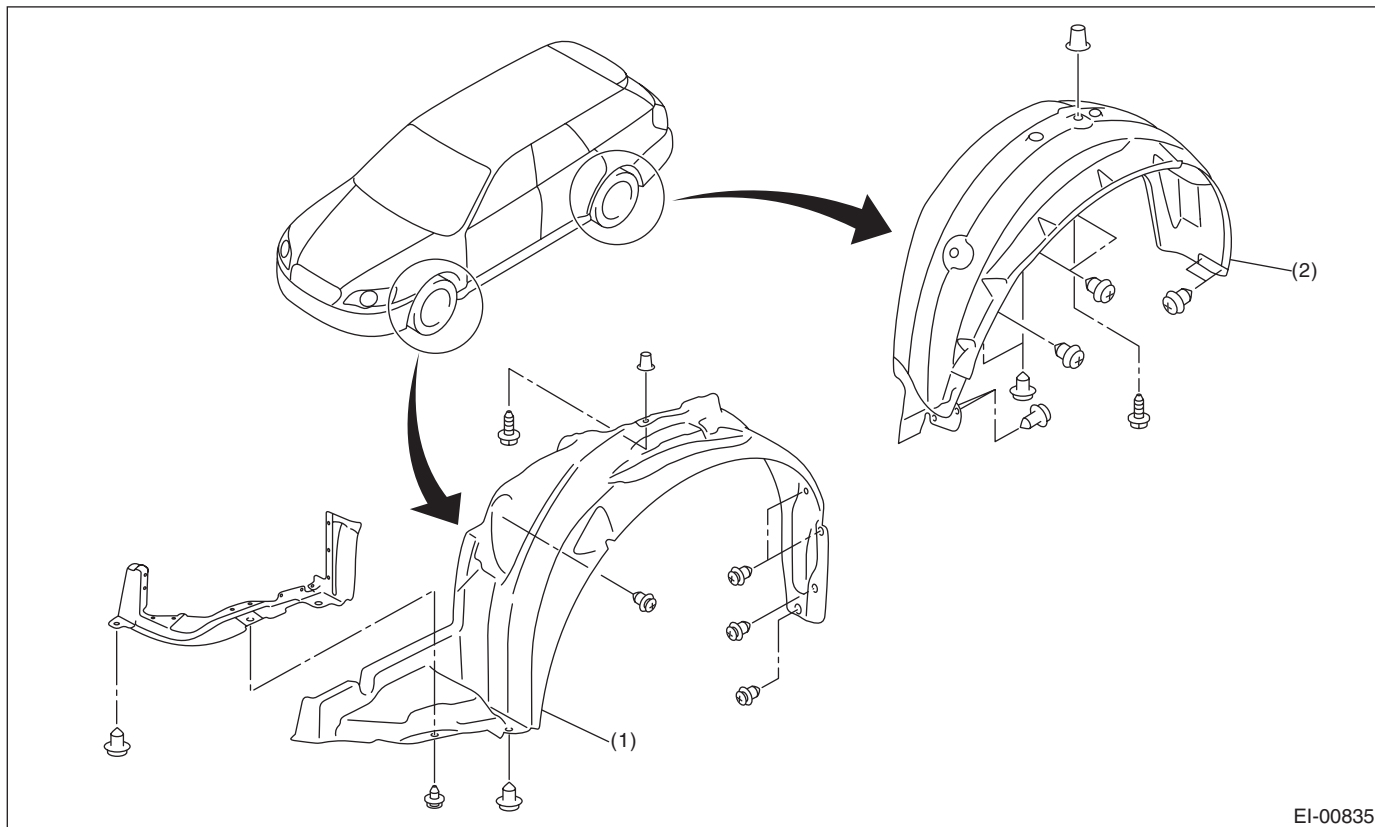


EI-00835

(1) Front mud guard

(2) Rear mud guard

9. COWL PANEL

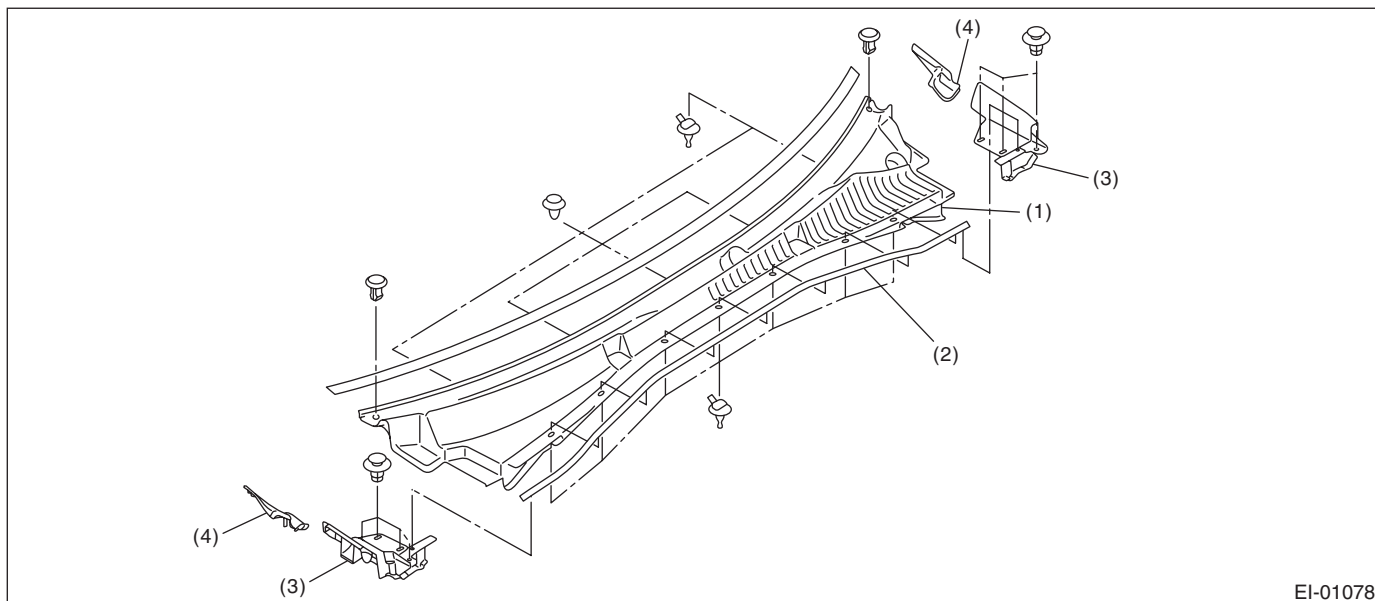

EI-01078


(1) Cowl panel

(3) Cover cowl panel

(4) Cowl side panel

(2) Weather strip

10.ROOF SPOILER

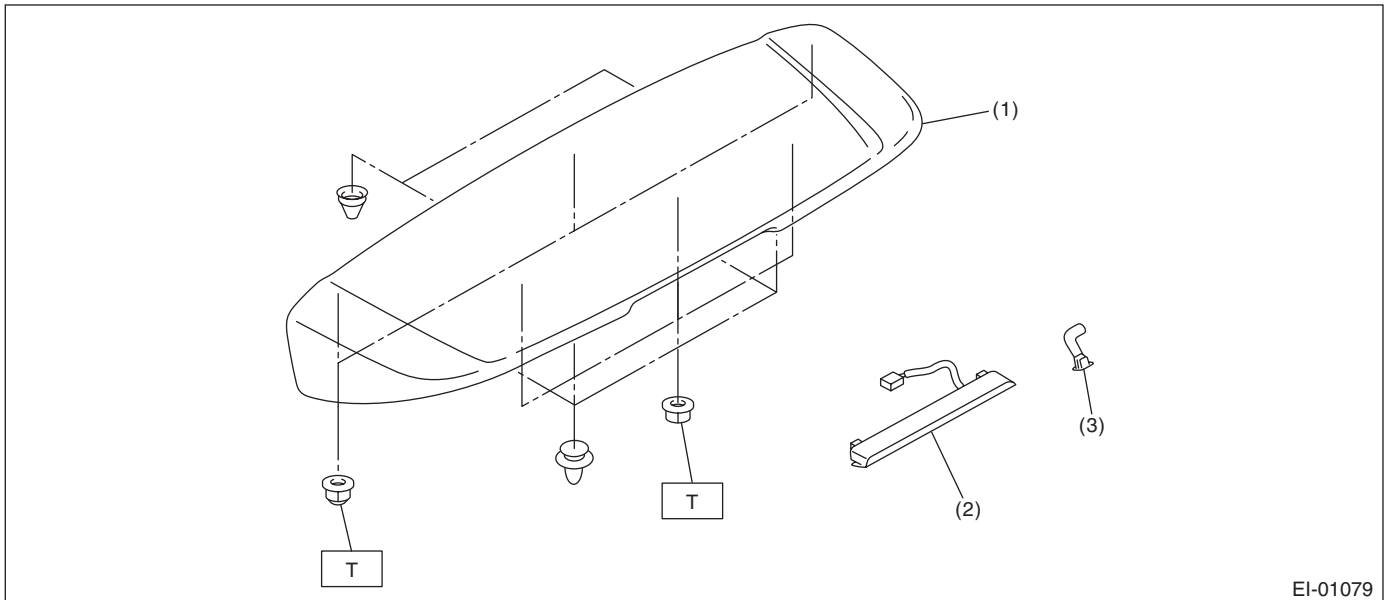


EI-01079

- (1) Roof spoiler
- (2) High-mounted stop light

- (3) Washer nozzle

Tightening torque:N-m (kgf-m, ft-lb)
T: 4.5 (0.46, 3.32)

11.SIDE SILL SPOILER

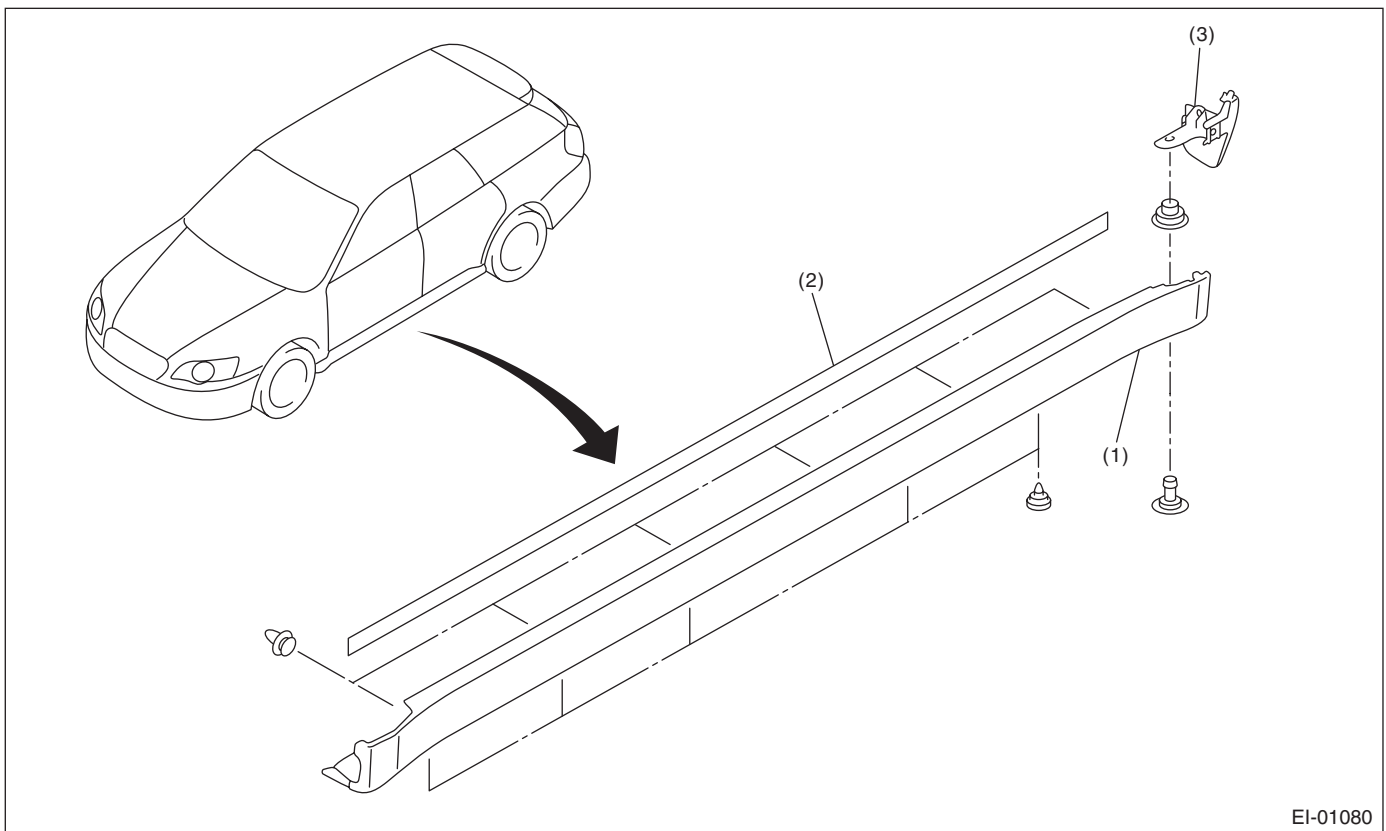

EI-01080

- (1) Side sill spoiler


- (2) Double-sided tape

- (3) Air flap side sill end

General Description

EXTERIOR/INTERIOR TRIM

12.ROOF RAIL

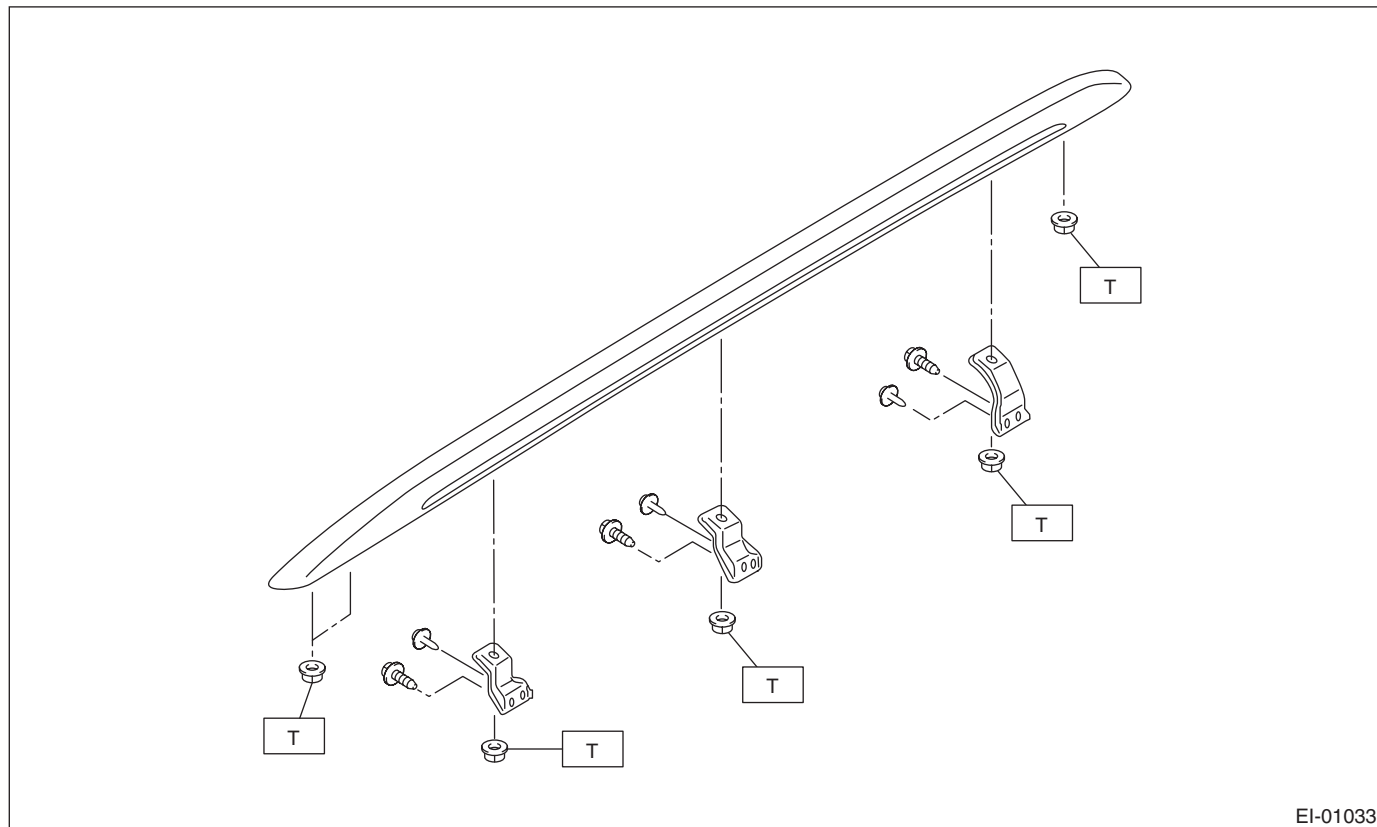


EI-01033

Tightening torque:N·m (kgf-m, ft-lb)

T: 7.5 (0.77, 5.53)

13.SIDE PROTECTOR

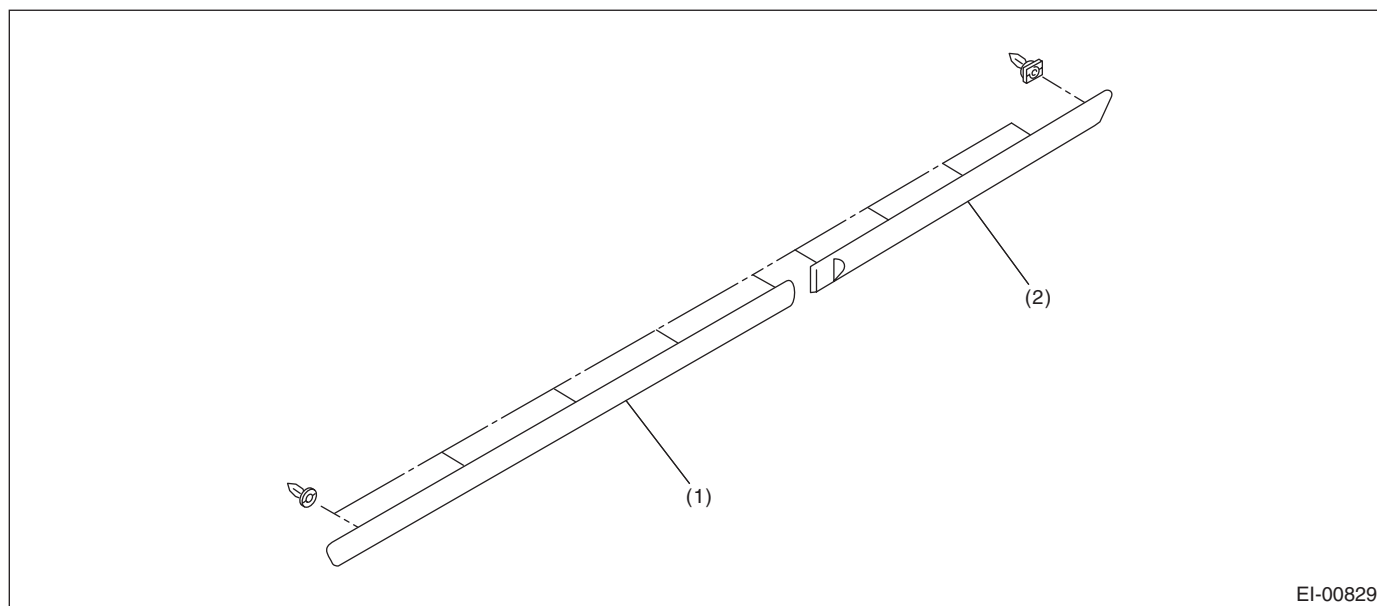


EI-00829

(1) Front door protector


(2) Rear door protector

14.SIDE GARNISH

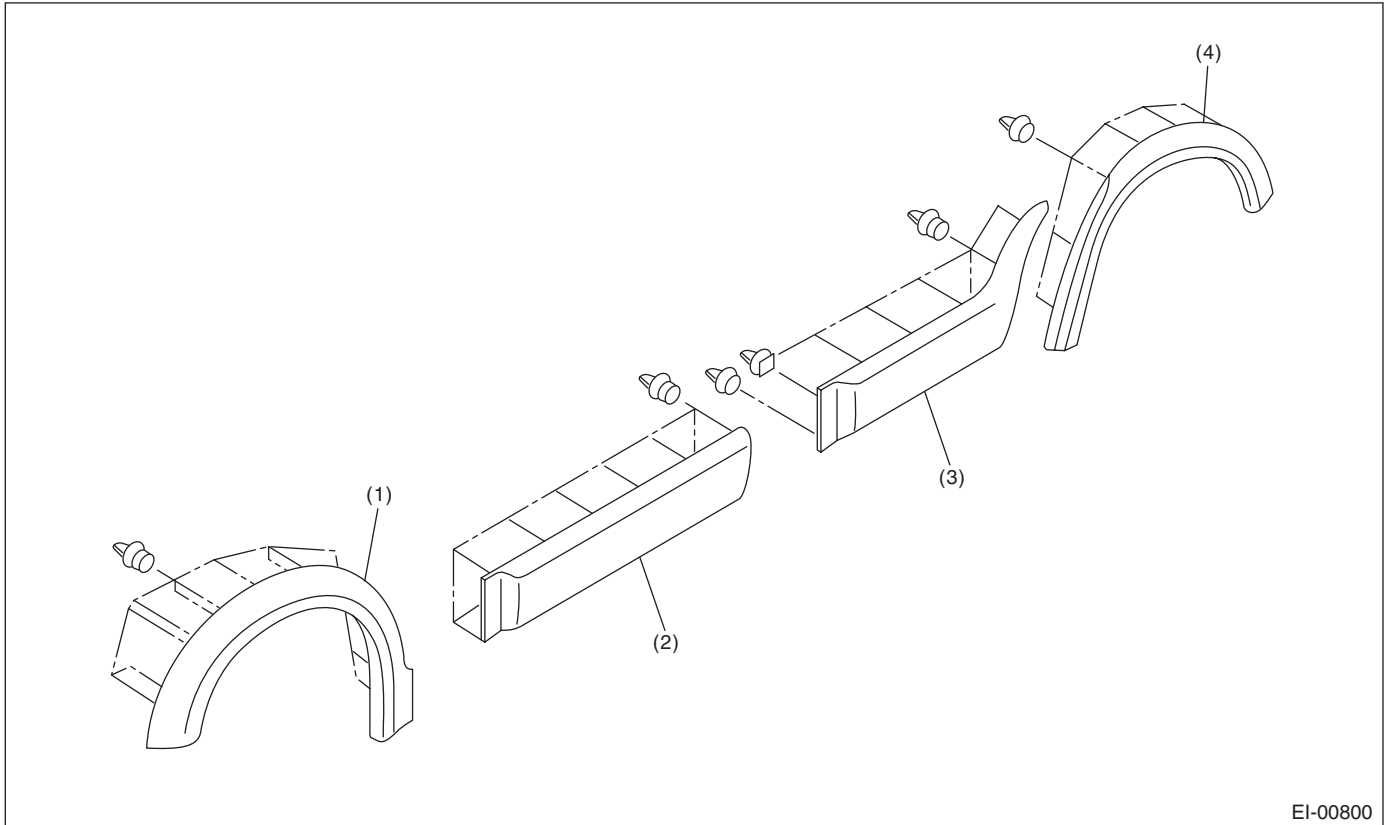

- (1) Front fender garnish (3) Rear door garnish (4) Rear quarter garnish
 (2) Front door garnish


15.TRUNK LID GARNISH

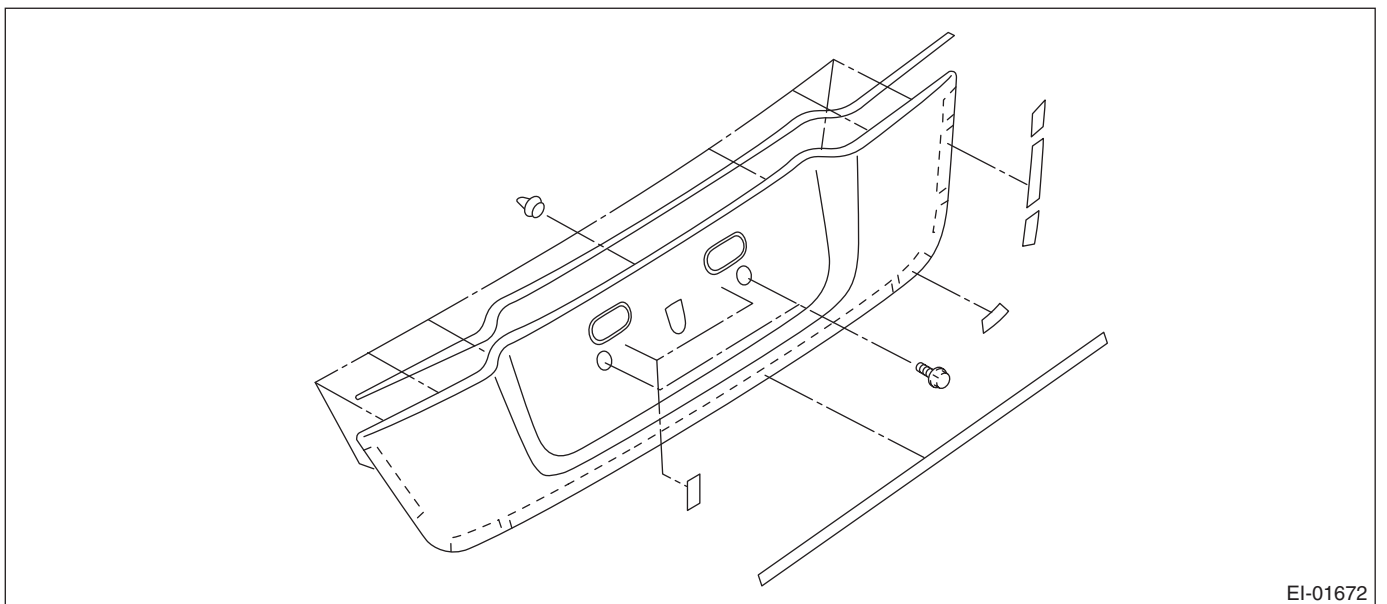

General Description

EXTERIOR/INTERIOR TRIM

16.REAR GATE GARNISH

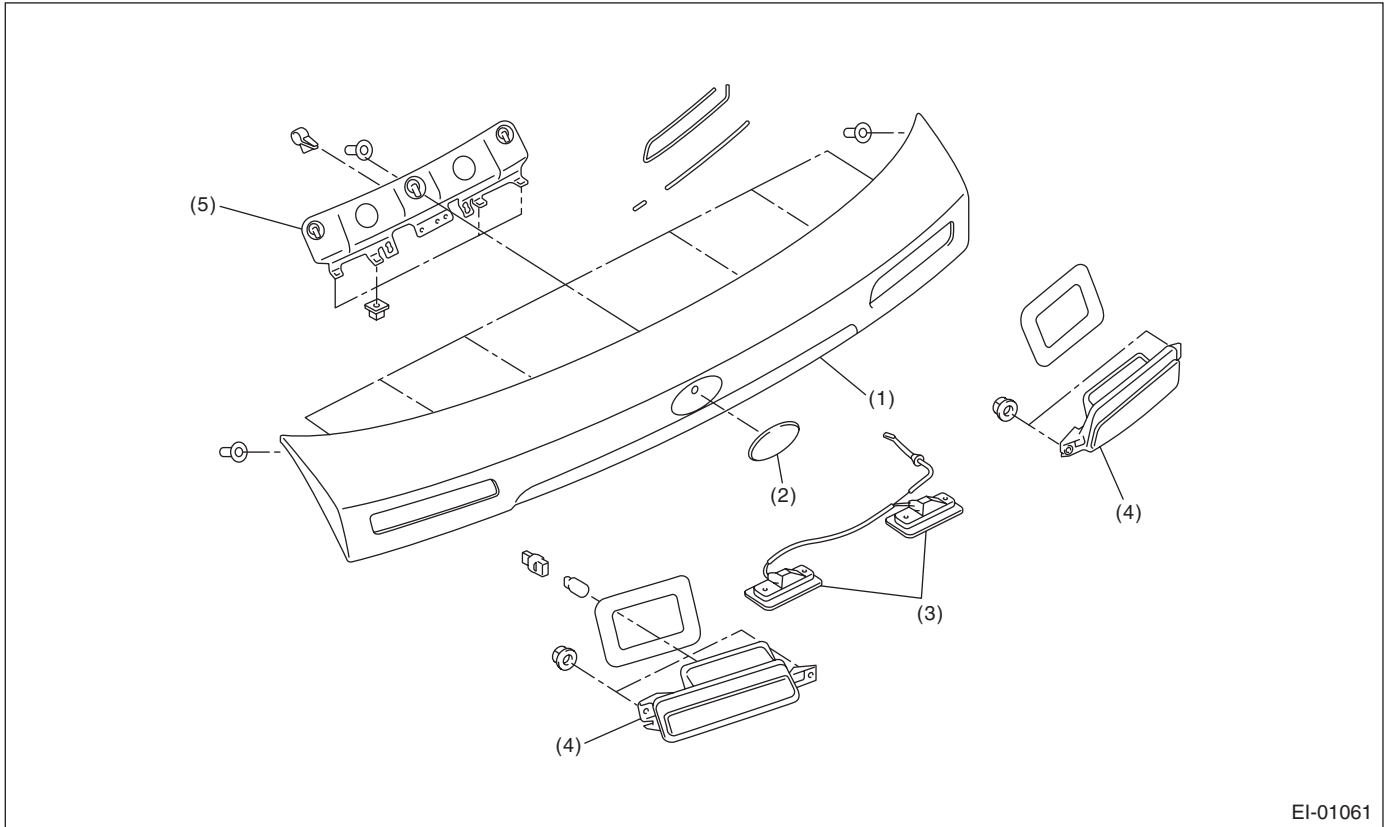


EI-01061

(1) Rear gate garnish
(2) Ornament

(3) License plate light
(4) Back-up light

(5) License plate light bracket

17.DOOR TRIM

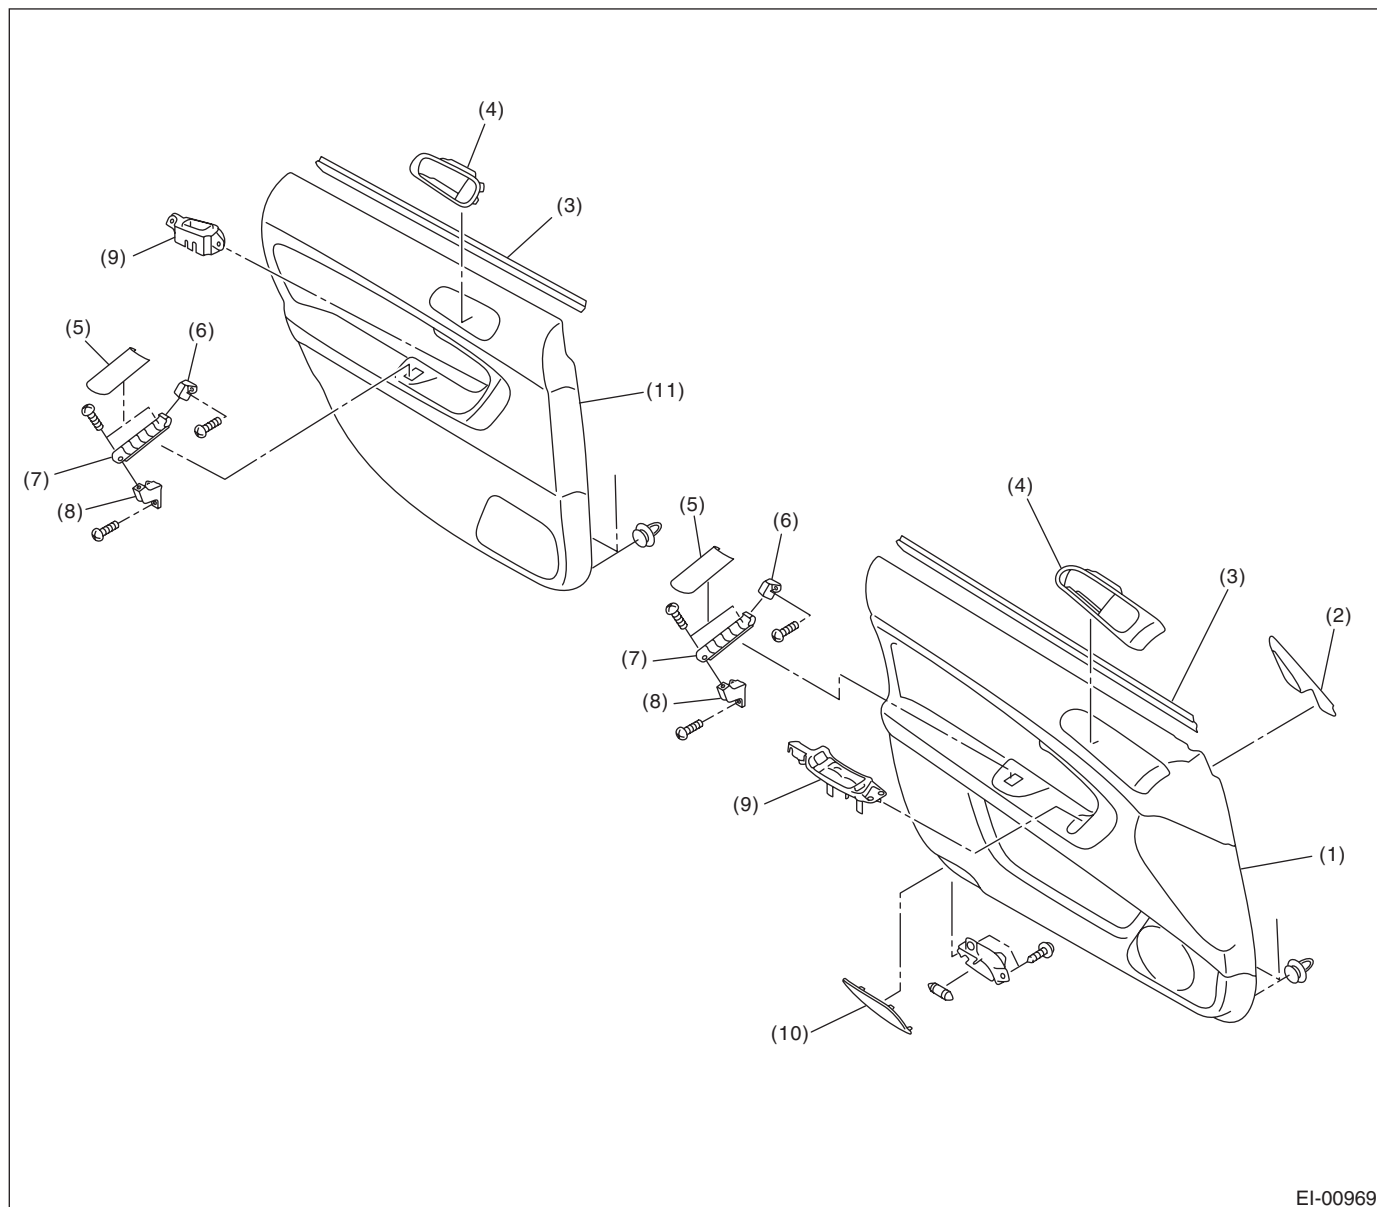


EI-00969

- | | | |
|-------------------------|-----------------------------|-------------------------|
| (1) Front door trim | (5) Door grip | (9) Power window switch |
| (2) Gusset cover | (6) Door grip bracket upper | (10) Step light cover |
| (3) Upper weather strip | (7) Door grip frame | (11) Rear door trim |
| (4) Inner remote cover | (8) Door grip bracket lower | |

General Description

EXTERIOR/INTERIOR TRIM


18.CONSOLE BOX

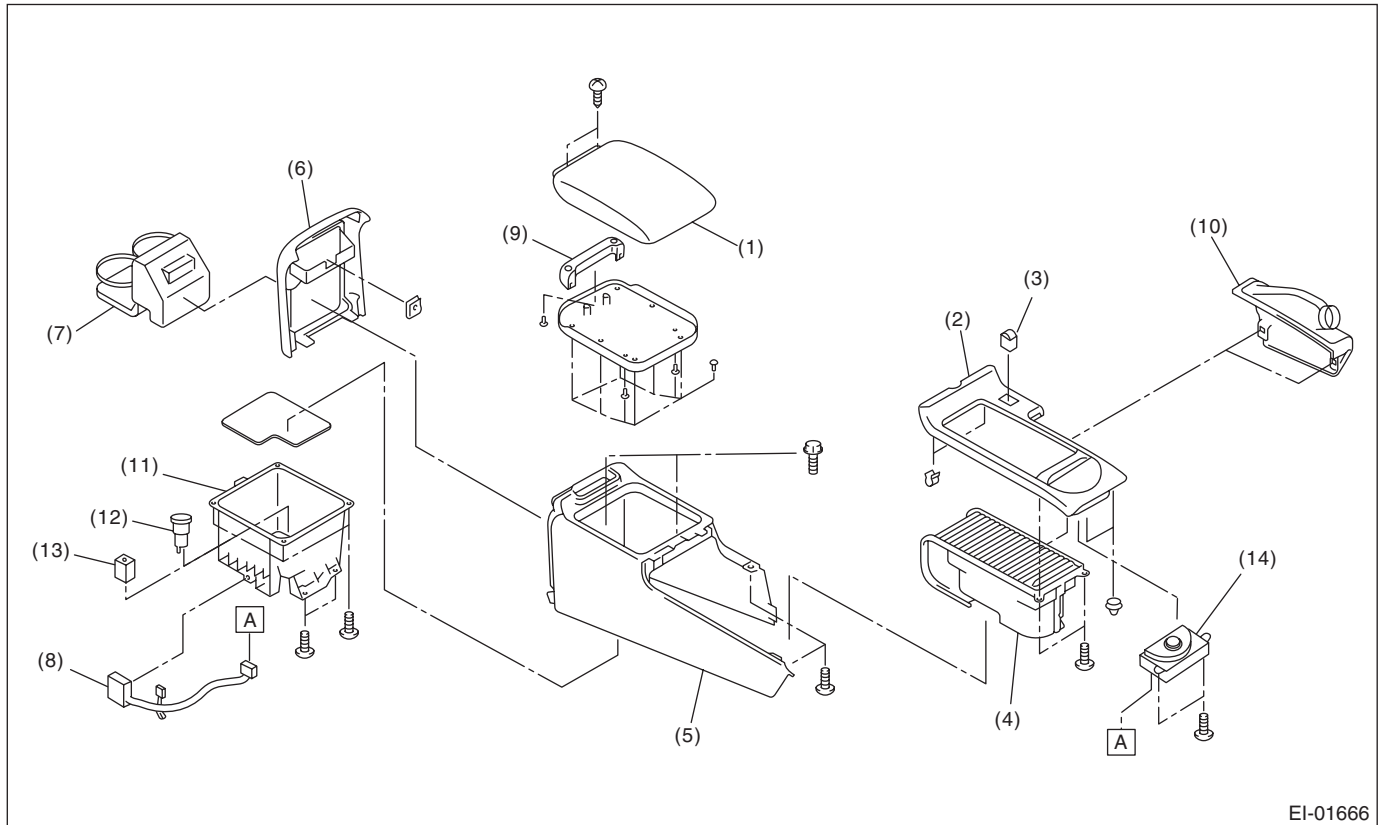

EI-01666

- | | | |
|------------------------|-------------------------------|--|
| (1) Upper lid | (6) Rear lid | (11) Console pocket |
| (2) Console cover | (7) Rear cup holder | (12) Front accessory power supply socket |
| (3) Seat heater switch | (8) Console box harness | (13) AUX input terminal |
| (4) Front cup holder | (9) Lid hinge | (14) SI-DRIVE switch |
| (5) Console box outer | (10) Parking brake lever boot | |

19. INSTRUMENT PANEL

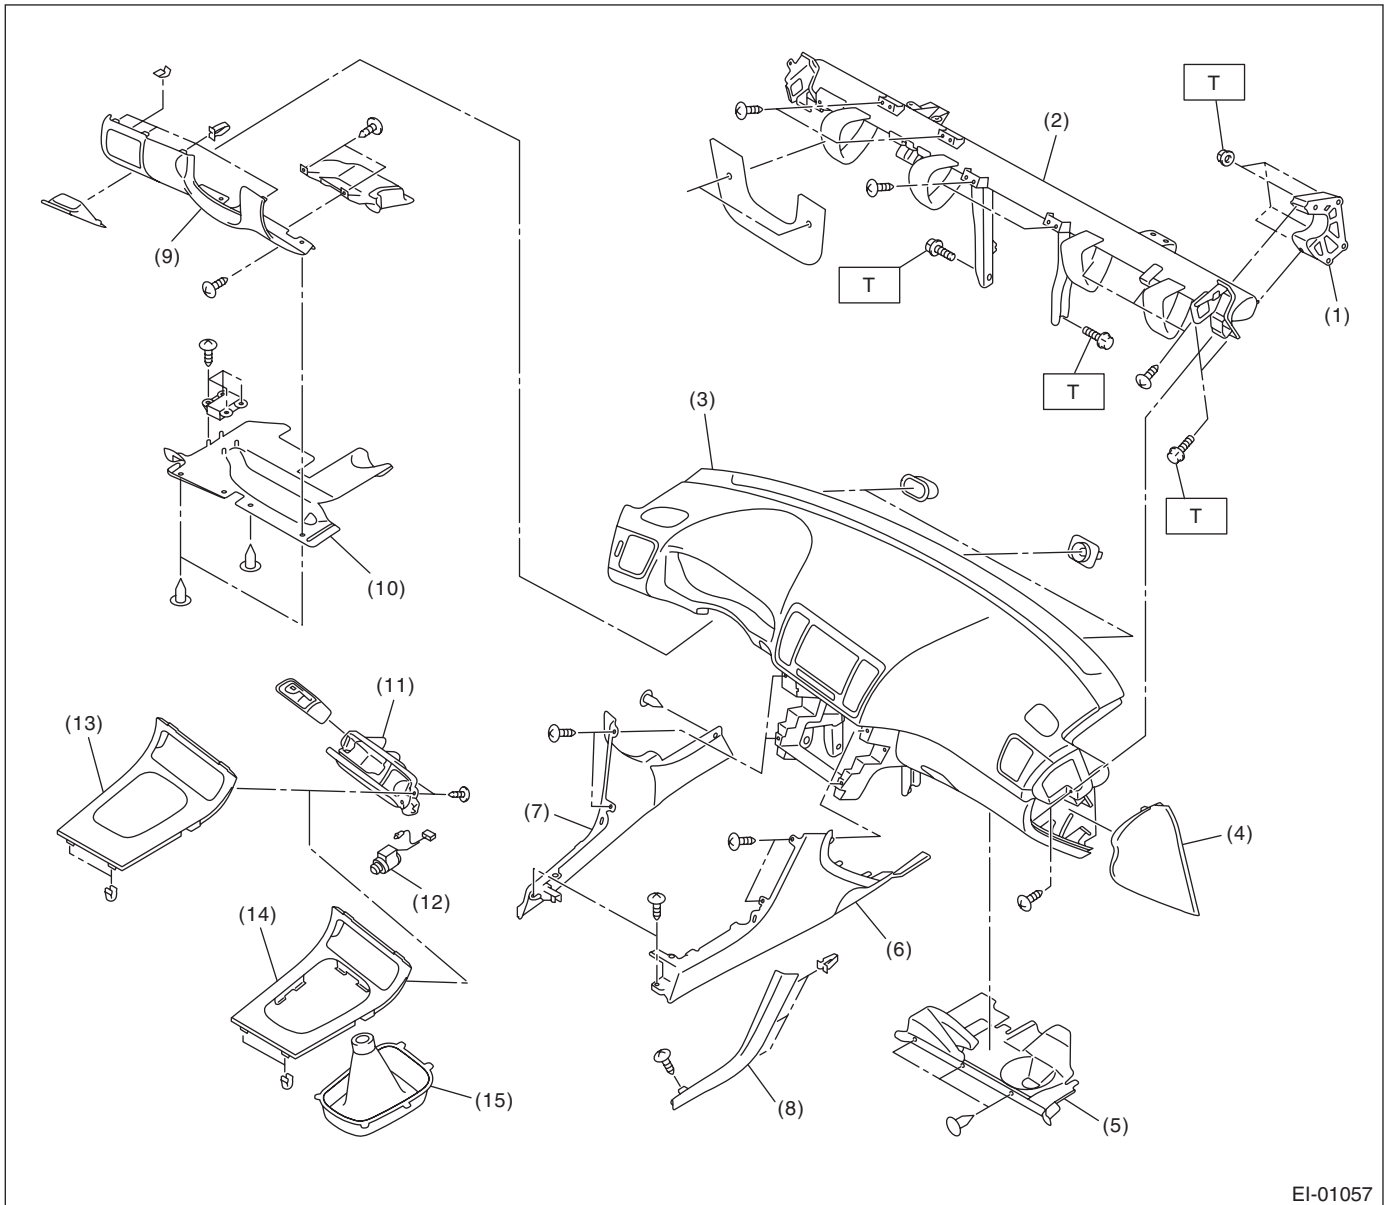

EI-01057

- (1) Steering support beam bracket
- (2) Steering support beam
- (3) Instrument panel pad & frame ASSY
- (4) Instrument panel side cover
- (5) Glove box lower cover
- (6) Console side panel RH
- (7) Console side panel LH


- (8) Console side garnish
- (9) Instrument panel lower cover upper
- (10) Instrument panel lower cover under
- (11) Ash tray holder
- (12) Front accessory power supply socket

- (13) Console front panel (AT model)
- (14) Console front panel (MT model)
- (15) Shift lever boot (MT model)

Tightening torque: N·m (kgf-m, ft-lb)
T: 25 (25.5, 18)

General Description


EXTERIOR/INTERIOR TRIM

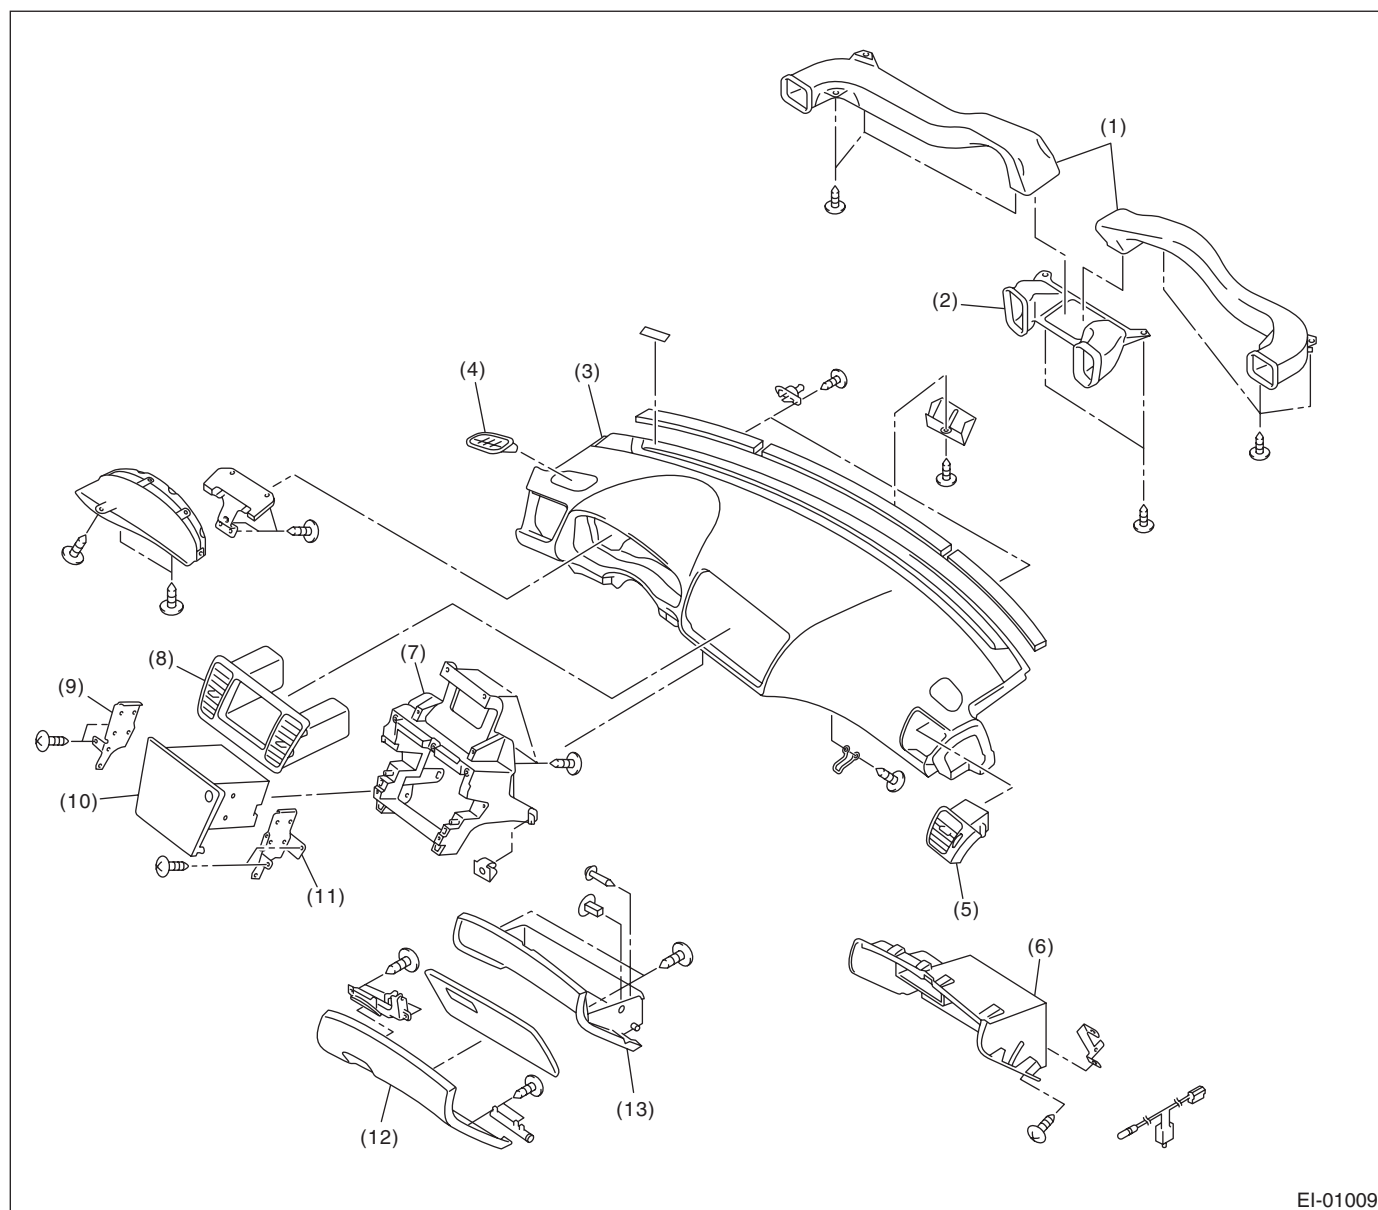

EI-01009

- | | | |
|----------------------------------|----------------------------|-------------------------|
| (1) Air vent side duct | (6) Glove box panel | (10) Center panel |
| (2) Air vent center duct | (7) Center console frame | (11) Audio bracket (RH) |
| (3) Instrument panel pad & frame | (8) Air vent center grille | (12) Glove box lid |
| (4) Air vent defroster grille | (9) Audio bracket (LH) | (13) Glove box |
| (5) Air vent side grille | | |

20.INNER TRIM (SEDAN MODEL)

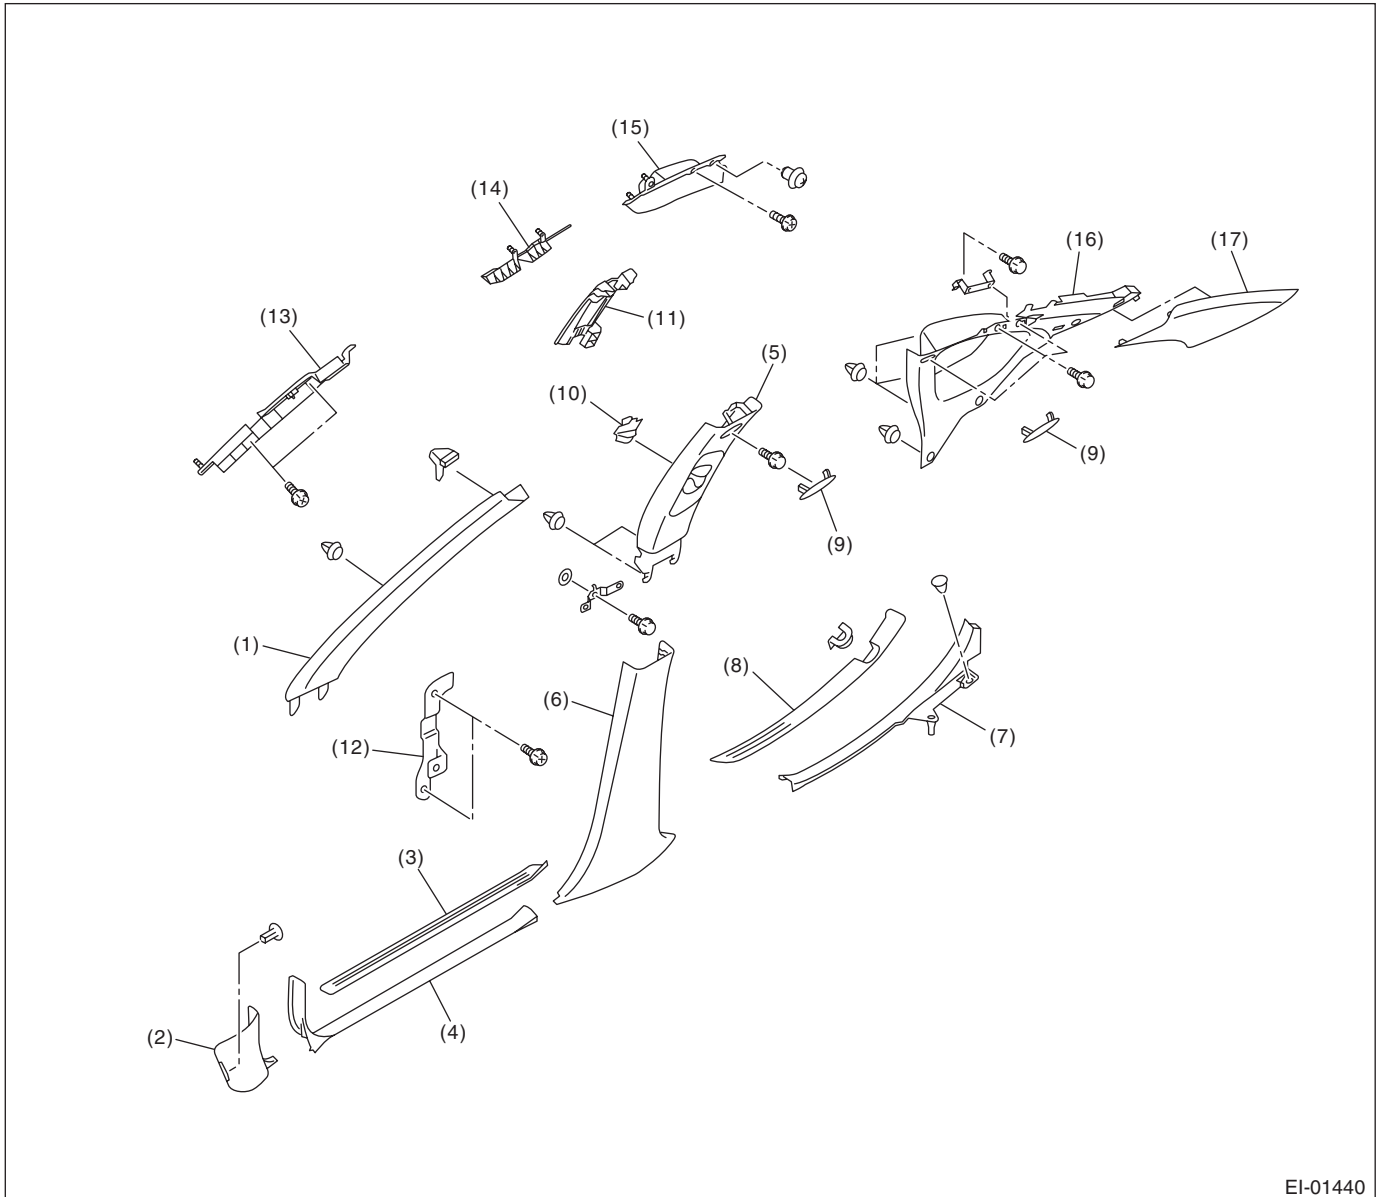


EI-01440

- | | | |
|-------------------------------|--|--|
| (1) Front pillar upper trim | (7) Rear inside scuff plate | (12) Center pillar inner protector lower |
| (2) Front pillar lower trim | (8) Rear outside scuff plate | (13) Curtain airbag guide front |
| (3) Front outside scuff plate | (9) Bolt cover | (14) Curtain airbag guide center |
| (4) Front inside scuff plate | (10) Seat belt shoulder anchor adjuster button | (15) Curtain airbag guide rear |
| (5) Center pillar upper trim | (11) Center pillar inner protector upper | (16) Rear quarter trim front |
| (6) Center pillar lower trim | | (17) Rear quarter trim rear |

General Description

EXTERIOR/INTERIOR TRIM


21.INNER TRIM (WAGON MODEL)

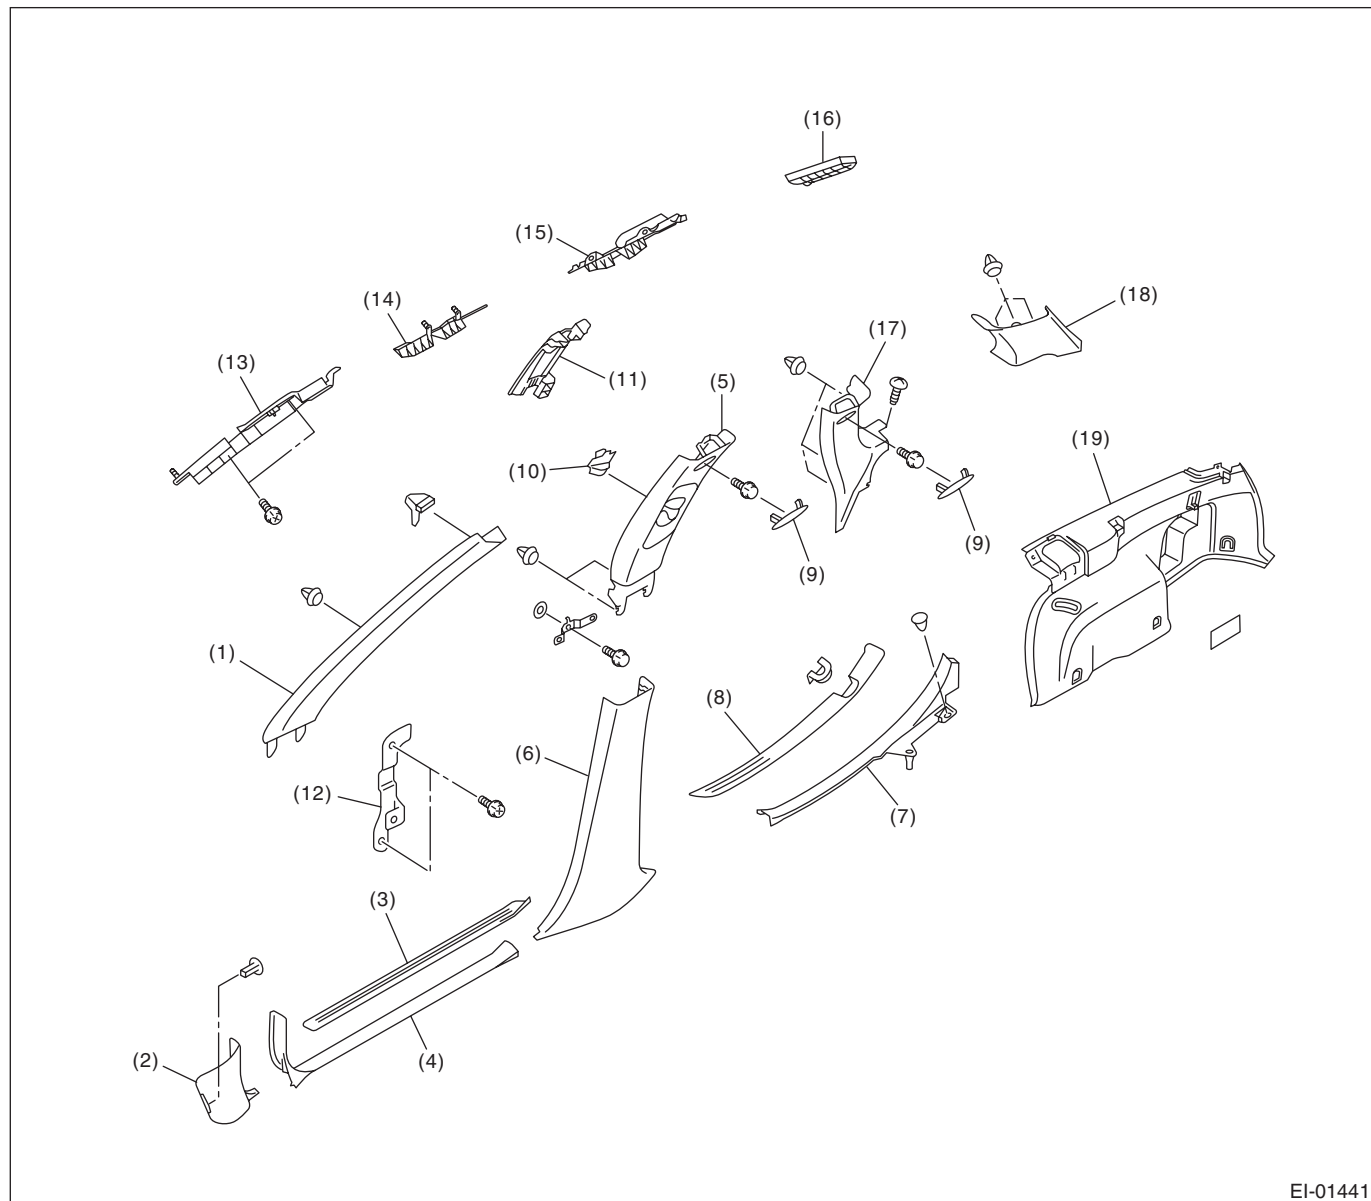

EI-01441

- | | | |
|-------------------------------|--|--------------------------------------|
| (1) Front pillar upper trim | (8) Rear outside scuff plate | (14) Curtain airbag guide center |
| (2) Front pillar lower trim | (9) Bolt cover | (15) Curtain airbag guide rear |
| (3) Front outside scuff plate | (10) Seat belt shoulder anchor adjuster button | (16) Curtain airbag module protector |
| (4) Front inside scuff plate | (11) Center pillar inner protector upper | (17) Rear quarter front pillar trim |
| (5) Center pillar upper trim | (12) Center pillar inner protector lower | (18) Rear quarter rear pillar trim |
| (6) Center pillar lower trim | (13) Curtain airbag guide front | (19) Rear quarter lower trim |
| (7) Rear inside scuff plate | | |

22.REAR GATE TRIM

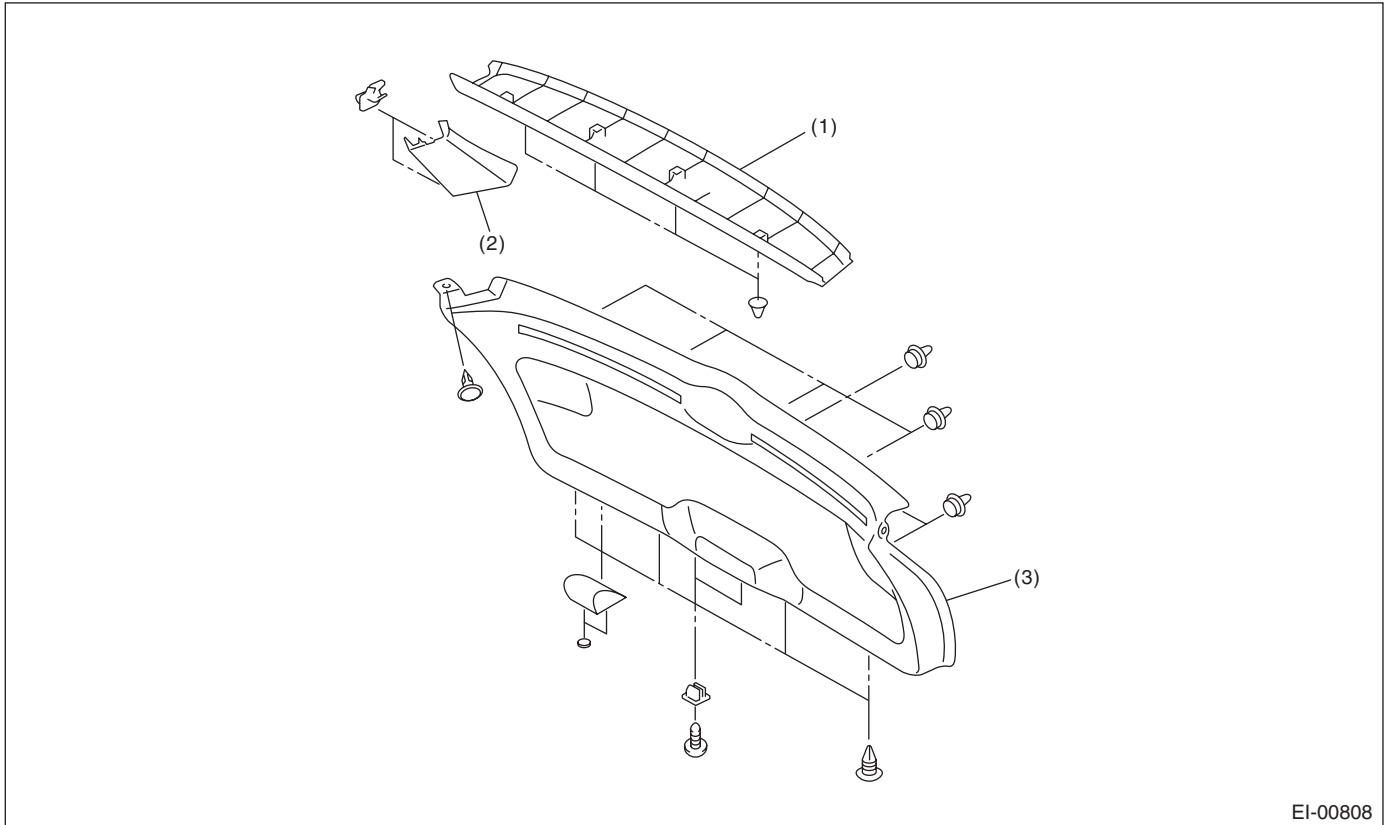


EI-00808

(1) Rear gate panel upper trim

(2) Rear gate panel pillar trim

(3) Rear gate panel lower trim

23.ROOF TRIM (SEDAN MODEL)

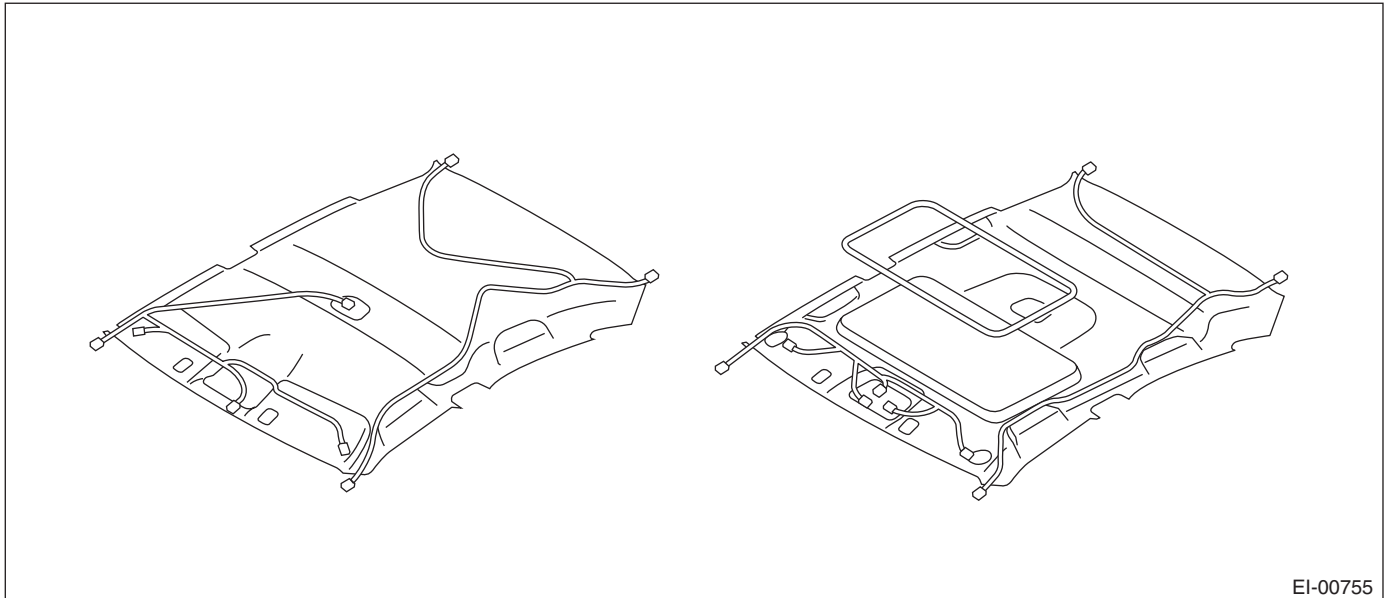


EI-00755


General Description

EXTERIOR/INTERIOR TRIM

24.ROOF TRIM (WAGON MODEL)

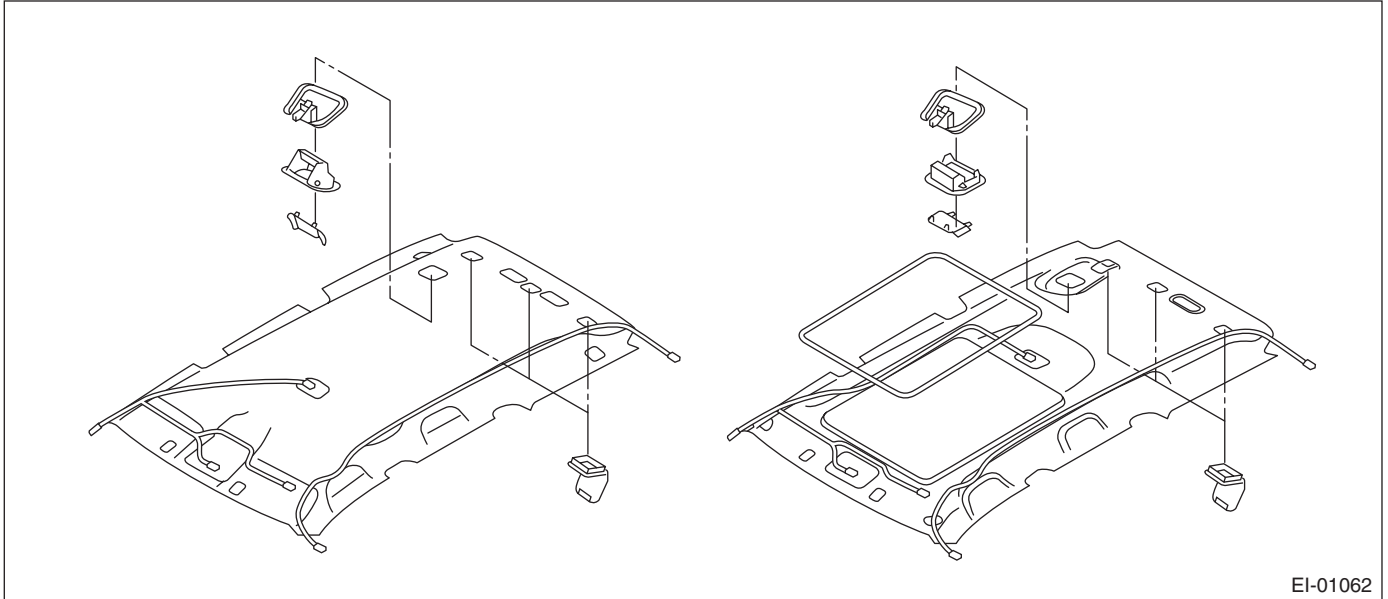

25.TRUNK ROOM TRIM

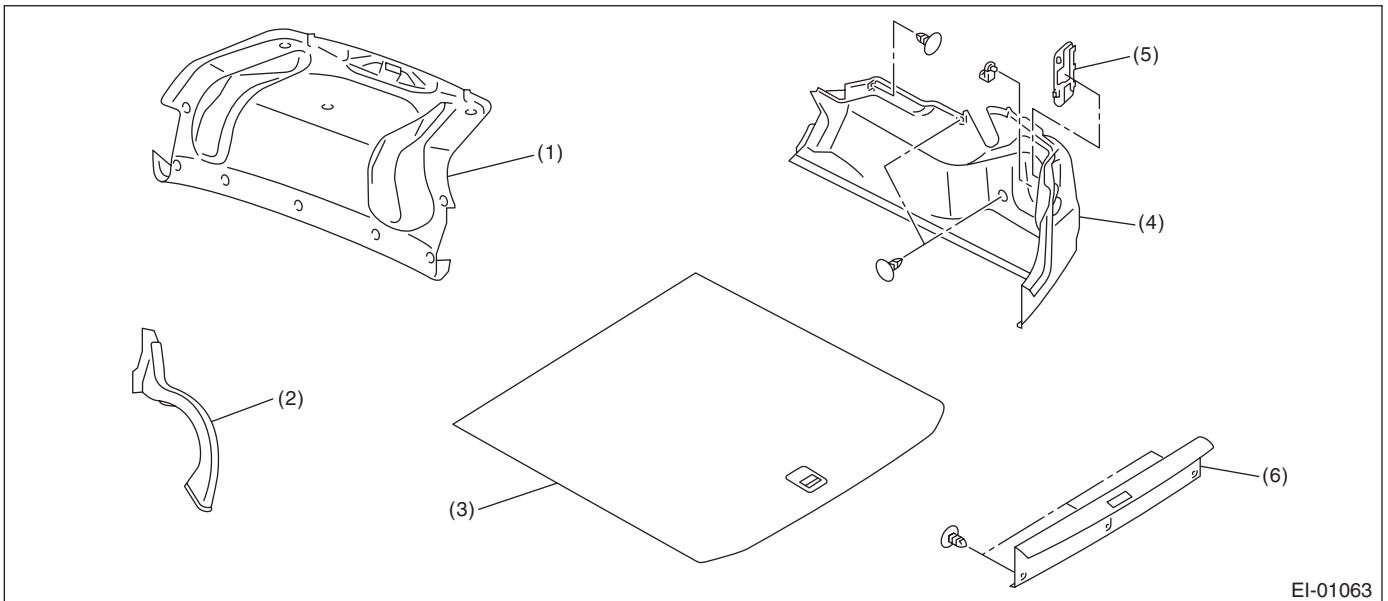


- (1) Trunk lid trim
- (2) Trunk lid arm cover

- (3) Trunk room mat
- (4) Trunk side trim

- (5) Combination light cover
- (6) Trunk room end cover

26.LUGGAGE FLOOR MAT

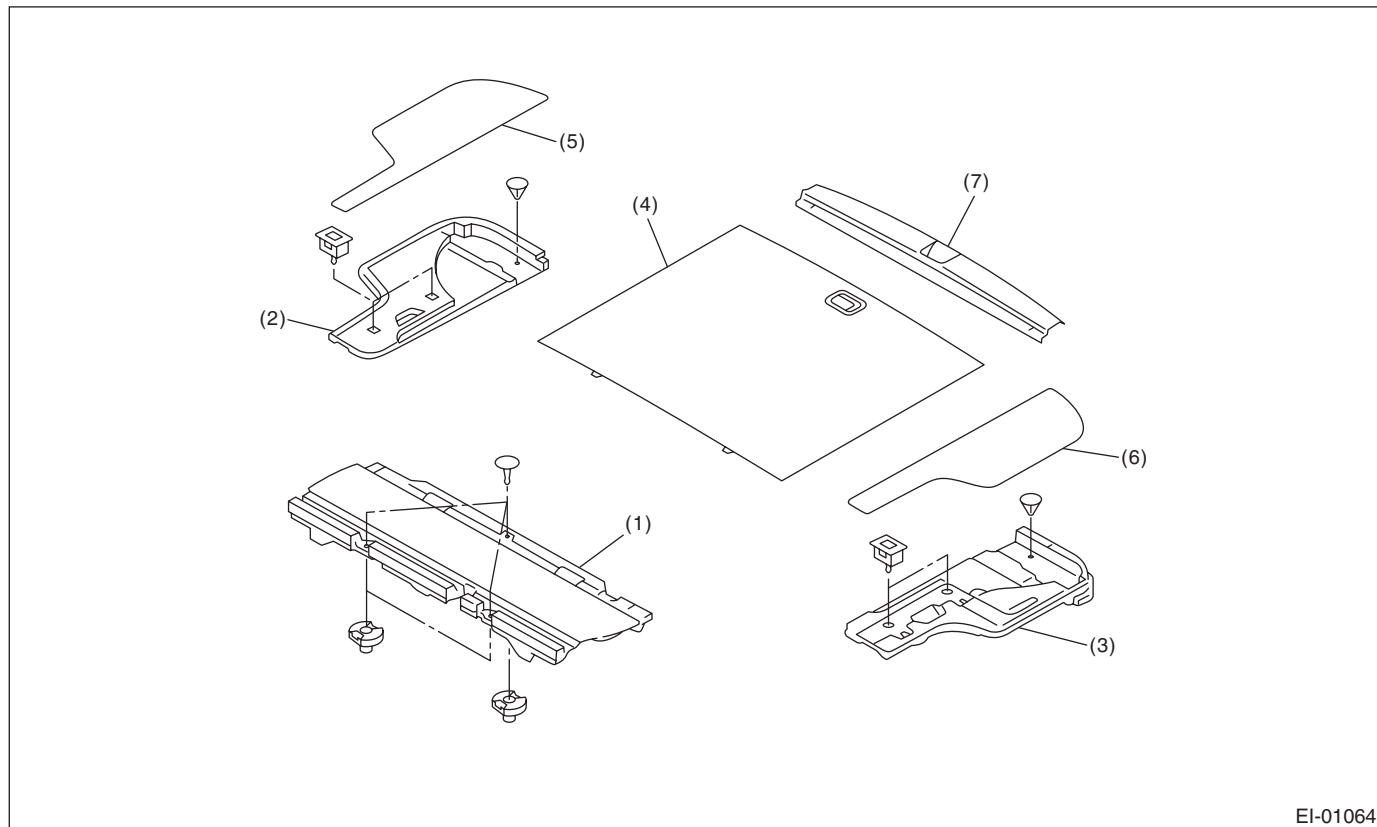

- (1) Front floor mat
- (2) Floor box (RH)
- (3) Floor box (LH)


- (4) Center floor mat
- (5) Side floor mat (RH)

- (6) Side floor mat (LH)
- (7) Luggage floor end cover

General Description

EXTERIOR/INTERIOR TRIM

27.ROOM INNER PARTS

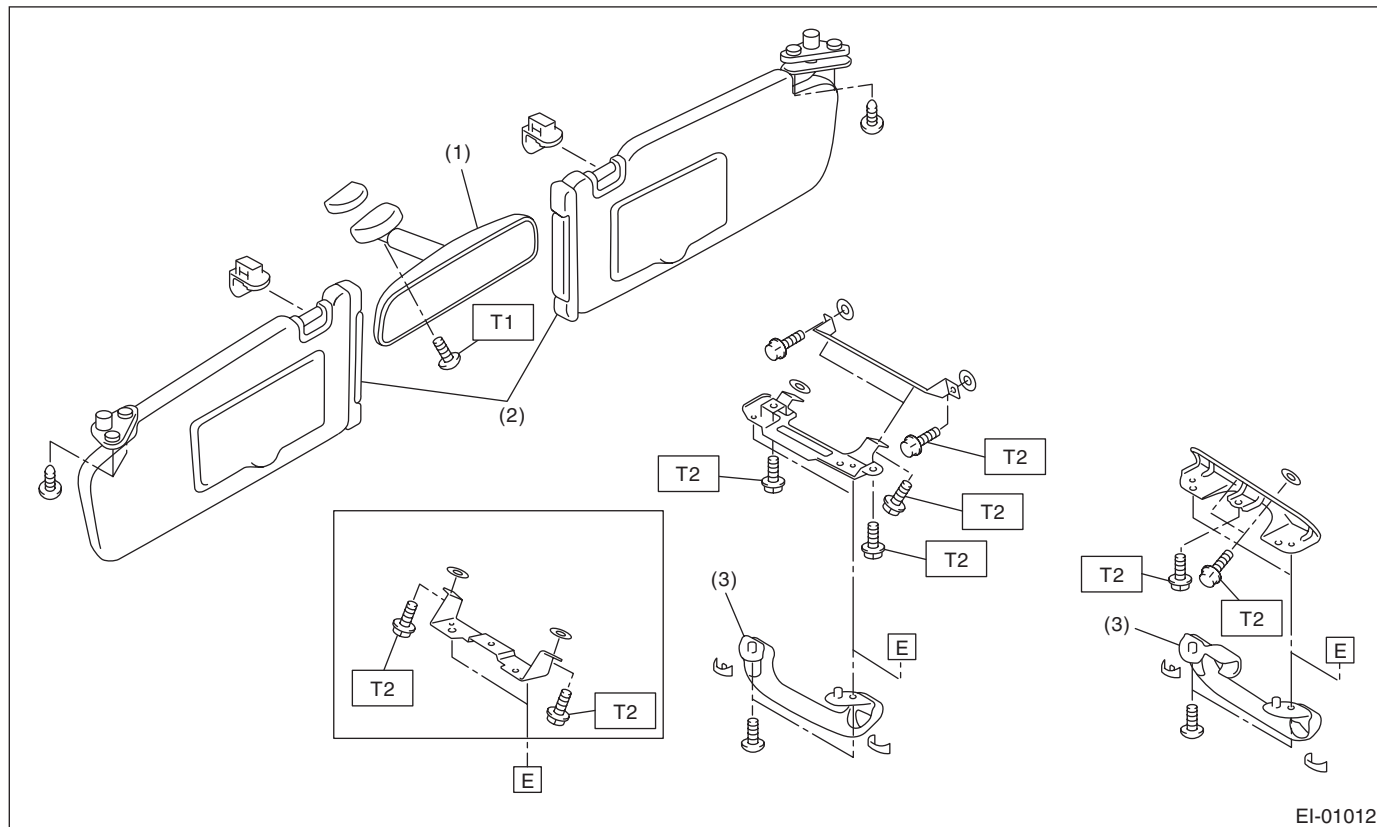


- (1) Room mirror
- (2) Sun visor
- (3) Assist grip

Tightening torque:N·m (kgf-m, ft-lb)

T1: 2.0 (0.2, 1.48)

T2: 7.5 (0.77, 5.53)

28.HEAT SHIELD COVER

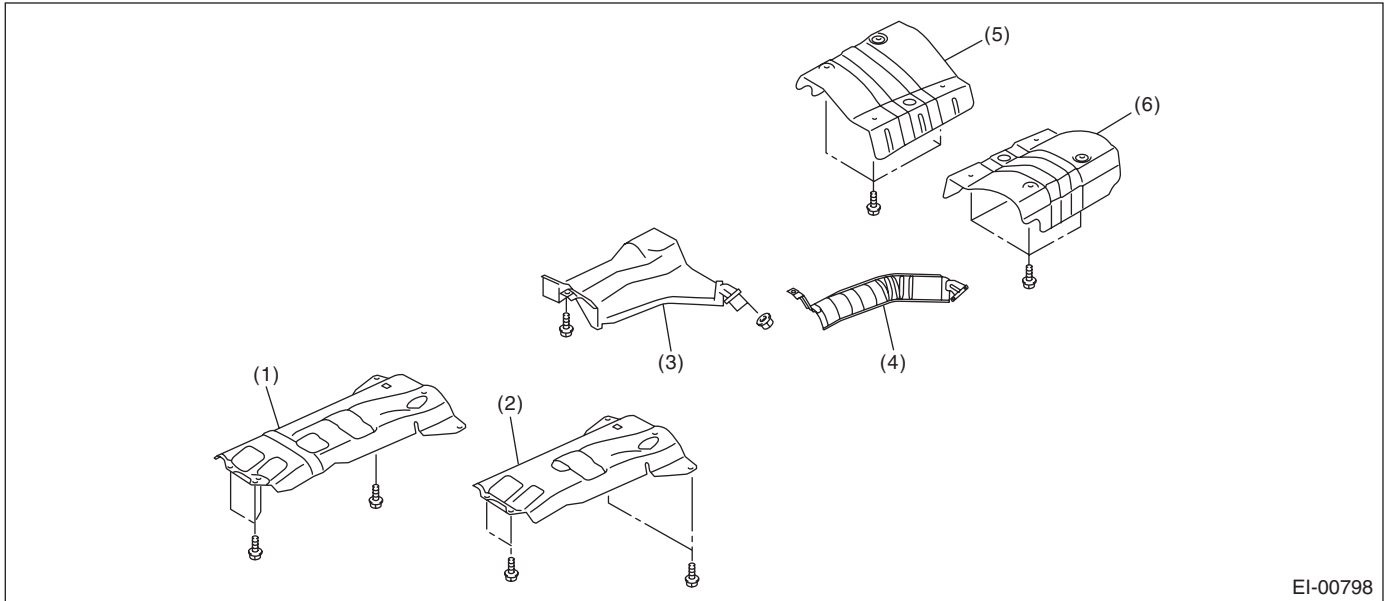

EI-00798

- | | | |
|--|--|-------------------------------|
| (1) Front heat shield cover (4AT model and MT model) | (3) Center heat shield cover (Turbo model) | (5) Rear heat shield cover RH |
| (2) Front heat shield cover (5AT model) | (4) Center heat shield cover (Non-turbo model) | (6) Rear heat shield cover LH |

B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim.
Clip clamp pliers	Used for removal of various clips and clamps.