


21. Center Console

A: REMOVAL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the console box. <Ref. to EI-51, REMOVAL, Console Box.>
- 3) Remove the console front panel.

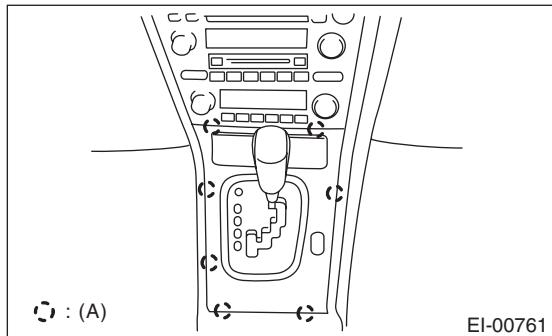

(A) Hook


NOTE:

For the AT model, remove the ring indicator.
 For the MT model, remove the shift knob.
 4) Loosen the screw, remove the hook, and remove the console side garnish.

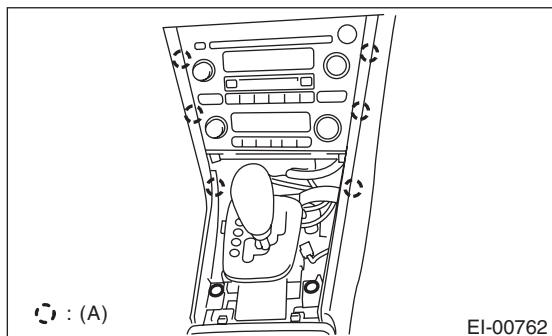


(A) Hook


- 5) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>

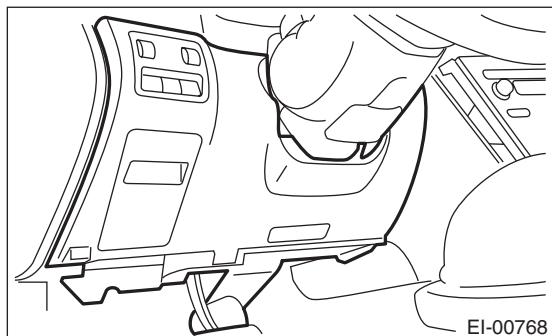


- 6) Remove the clip at the tip of the console side panel.

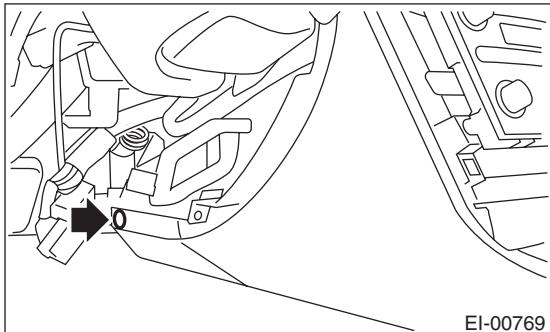


- 7) Remove the passenger's side front inside scuff plate (A) and front pillar lower trim (B). <Ref. to EI-58, REMOVAL, Lower Inner Trim.>

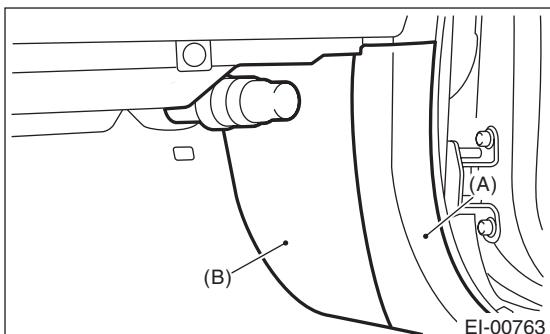


- 8) Remove the clips, and remove the glove box lower cover.

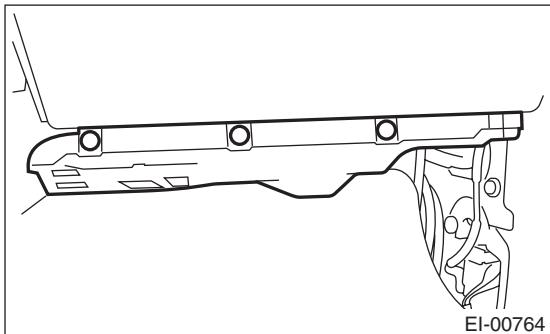

9) Remove the screws, and remove the console side panel.

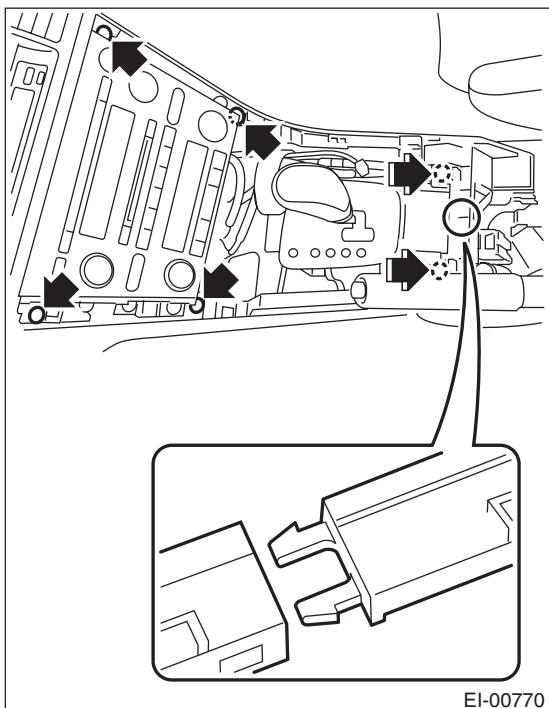

10) Loosen screws to pull out the audio unit assembly, and disconnect the connectors to remove.

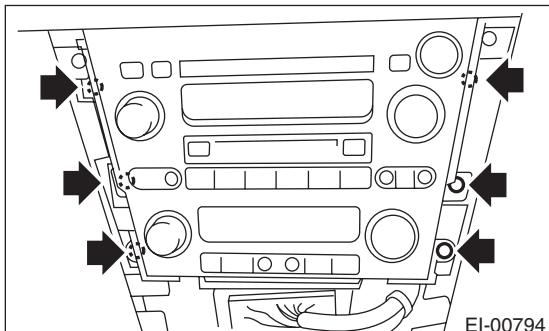

NOTE:

The audio unit assembly can be removed without removing the console side panel.

B: INSTALLATION

Install in the reverse order of removal.