


### 25. Rear Quarter Trim

#### A: REMOVAL

##### 1. SEDAN MODEL

- 1) Remove the rear seat. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
- 2) Turn over the trim, and remove the quarter trim rear by pressing the claw (A) of the metal clip using a flat screwdriver, etc.

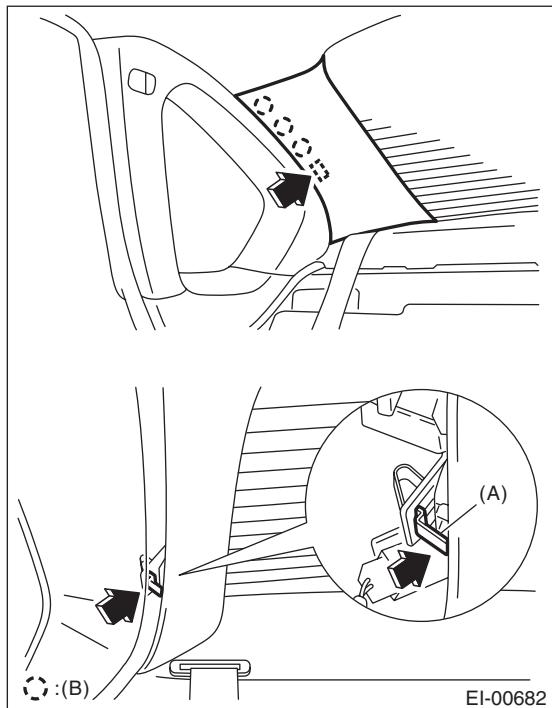


(B) Hook


##### CAUTION:

When the metal clip comes off or becomes damaged, replace both trim and metal clips with new parts.

- 3) Remove the cap on the upper side of the trim, and remove the bolt inside.

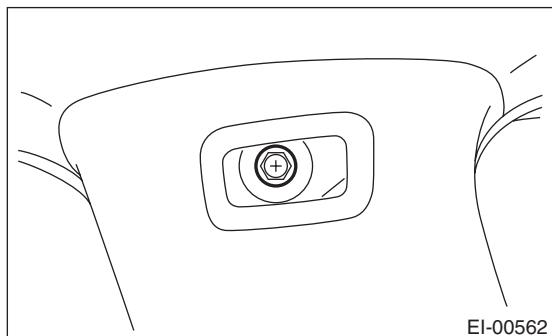


- 4) Remove the bolts (A), and remove the quarter trim (front).

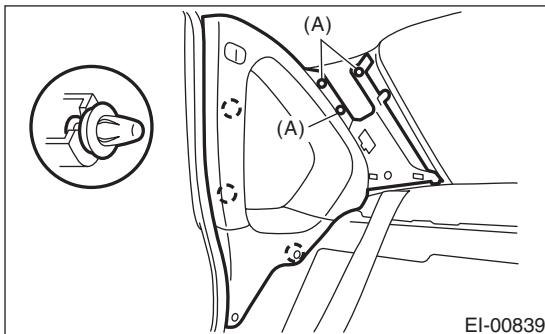


##### 2. WAGON MODEL


- 1) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-18, WAGON MODEL, REMOVAL, Rear Seat.>
- 2) Remove the cap on the upper side of the pillar trim, and remove the bolt inside.

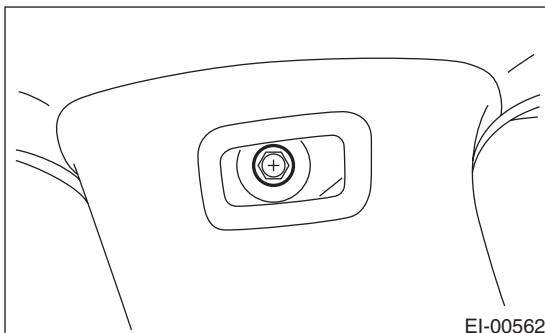


- 3) Remove the clip, and remove the quarter front pillar trim.

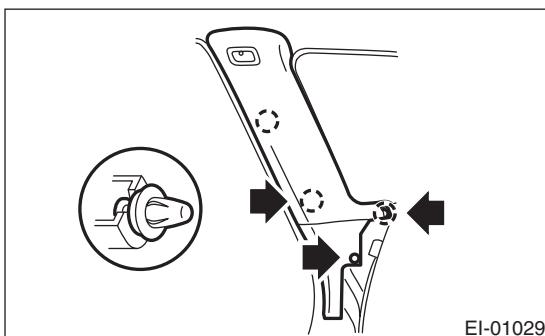


- 4) Remove the quarter rear pillar trim.

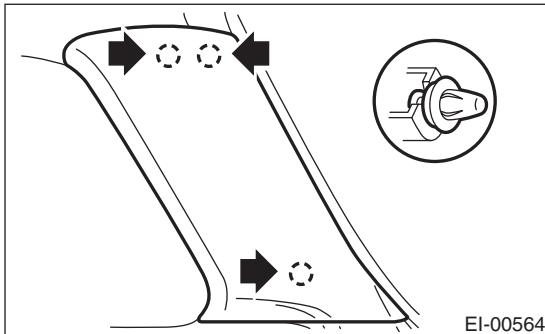


- 5) Remove the luggage floor box. <Ref. to EI-70, REMOVAL, Luggage Floor Box.>
- 6) Remove the luggage floor end cover.

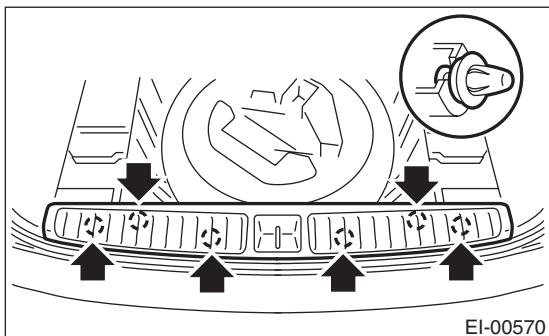

- 7) Remove the woofer cover. (Model with woofer)

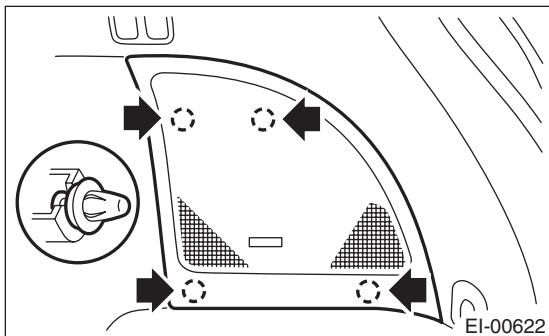

- 8) Remove the screws (A) and bolts (B), and remove the quarter lower trim.

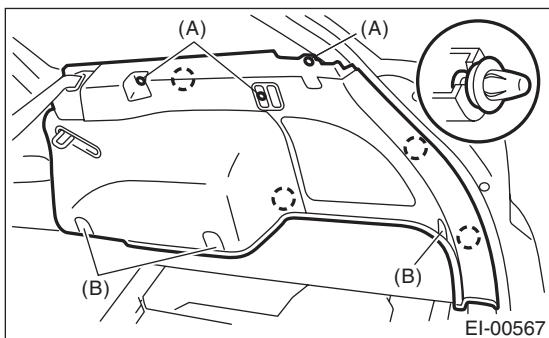

**NOTE:**

- Remove the screw cover on the tonneau cover installation area.
- Pull out the shopping bag hook, and remove the screw on the far end.

## B: INSTALLATION

Install in the reverse order of removal.