



26. Sun Visor

A: REMOVAL

- 1) Remove the cover, loosen the mounting screws, and remove the sun visor.

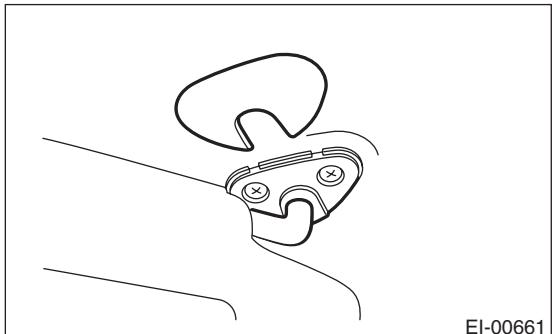

- 2) Disconnect the connector. (Model with vanity mirror light)
- 3) While pressing the (A) on the both side using flat tip screwdriver, pull the sun visor hook to remove it.

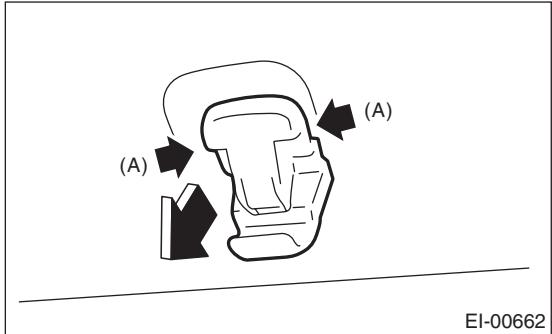

B: INSTALLATION

Install in the reverse order of removal.