


## 28. Roof Trim

### A: REMOVAL


#### 1. SEDAN MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front seats. <Ref. to SE-9, REMOVAL, Front Seat.>
- 3) Remove the rear seat. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 4) Remove the console box. <Ref. to EI-51, REMOVAL, Console Box.>
- 5) Remove the center console. <Ref. to EI-52, REMOVAL, Center Console.>
- 6) Remove the select lever. (AT model)  
<Ref. to CS-24, REMOVAL, Select Lever.>
- 7) Remove the spot map light. <Ref. to LI-32, REMOVAL, Spot Map Light.>
- 8) Remove the room light. <Ref. to LI-33, REMOVAL, Room Light.>
- 9) Remove the sun visor. <Ref. to EI-62, REMOVAL, Sun Visor.>
- 10) Remove the assist grip. <Ref. to EI-63, REMOVAL, Assist Grip.>
- 11) Remove the upper inner trim. <Ref. to EI-59, REMOVAL, Upper Inner Trim.>
- 12) Remove the rear quarter trim. <Ref. to EI-60, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 13) Remove the sunroof opening trim. (Model with sunroof)

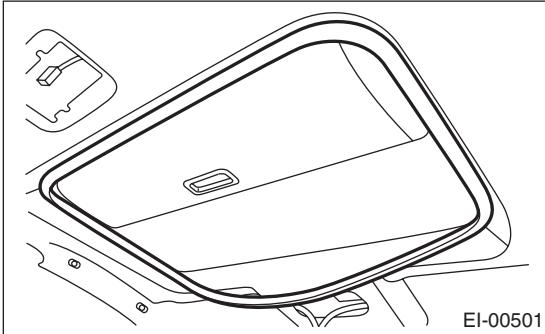

EI-00501

- 14) Remove the clips and harnesses, and remove the roof trim.
- 15) Pull out the roof trim from the vehicle.

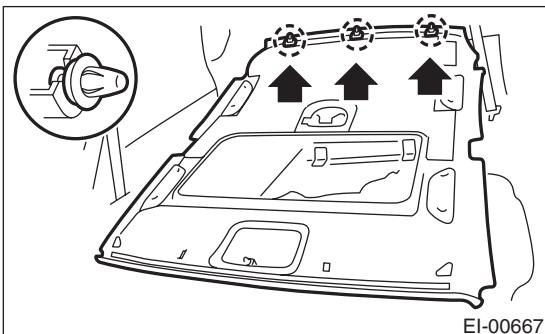

EI-00667


#### 2. WAGON MODEL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the spot map light. <Ref. to LI-32, REMOVAL, Spot Map Light.>
- 3) Remove the room light. <Ref. to LI-33, REMOVAL, Room Light.>
- 4) Remove the luggage room light. <Ref. to LI-34, REMOVAL, Luggage Room Light.>
- 5) Remove the sun visor. <Ref. to EI-62, REMOVAL, Sun Visor.>
- 6) Remove the assist grip. <Ref. to EI-63, REMOVAL, Assist Grip.>
- 7) Remove the upper inner trim. <Ref. to EI-59, REMOVAL, Upper Inner Trim.>
- 8) Remove the rear quarter trim. <Ref. to EI-60, WAGON MODEL, REMOVAL, Rear Quarter Trim.>

#### CAUTION:

**Do not remove the roof end trim with excessive force. Otherwise the roof trim may become damaged. Roof trim and roof end trim are fastened by rivets.**

- 9) Remove the sunroof opening trim. (Model with sunroof)

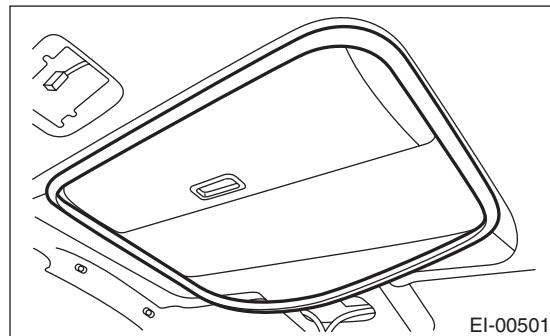


EI-00501

- 10) Remove the clips and each harness, pull out the rear center seat belt, and remove the roof trim.

#### CAUTION:

**Do not remove the roof end trim with excessive force. Otherwise the roof trim may become damaged.**

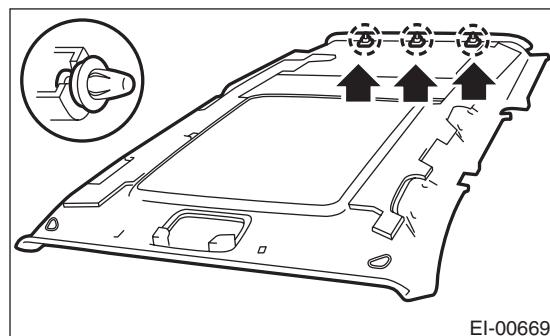

EI-00669

### B: INSTALLATION

Install in the reverse order of removal.