



29. Rear Gate Trim

A: REMOVAL

- 1) Remove clips (A), and remove the rear gate pillar trim.

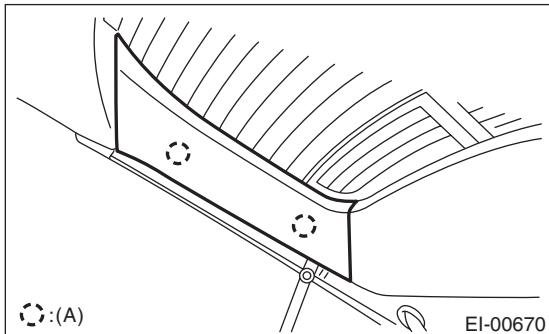


- 2) Remove the clips, and remove the rear gate upper trim.

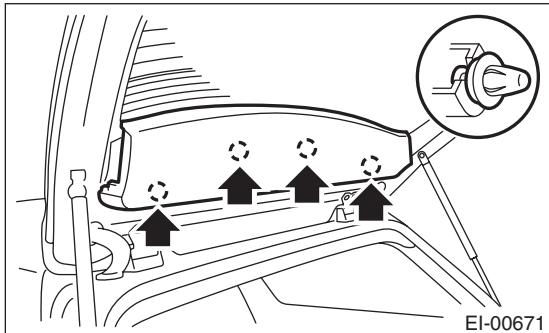


- 3) Remove the cover in the inner handle, and loosen the inside screw.


- 4) Turn over the weather strip, and remove the clips.

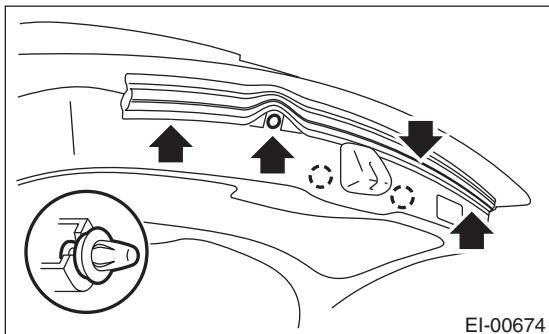

- 5) Remove the clips (A), and remove the rear gate lower trim.

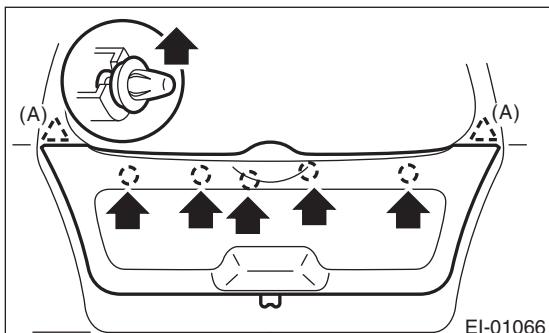


- 6) Remove the rear gate weather strip.

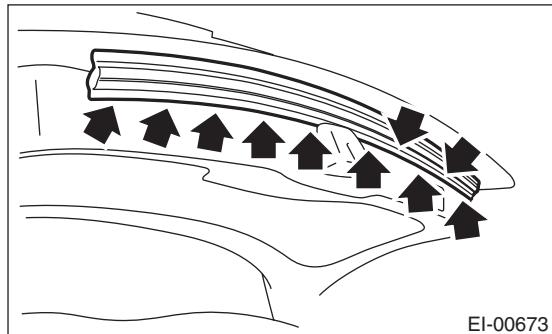

NOTE:

If the weather strip clip is removed with excessive force, the weather strip may be damaged. Be sure to use a clip remover to remove.

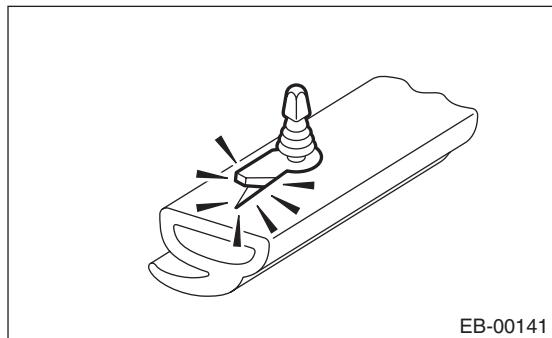

B: INSTALLATION

Install in the reverse order of removal.