



34.Trunk Lid Garnish

A: REMOVAL


1) Remove the license plate, and loosen bolts (A).

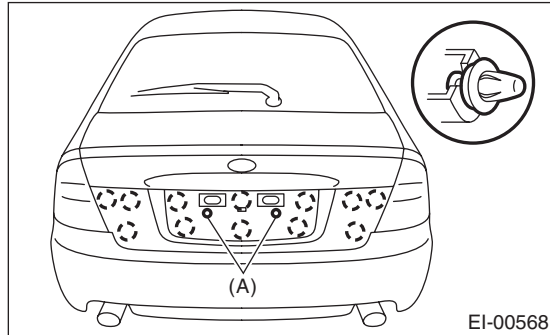

2) Remove the clip in the upper corner of the trunk lid garnish.

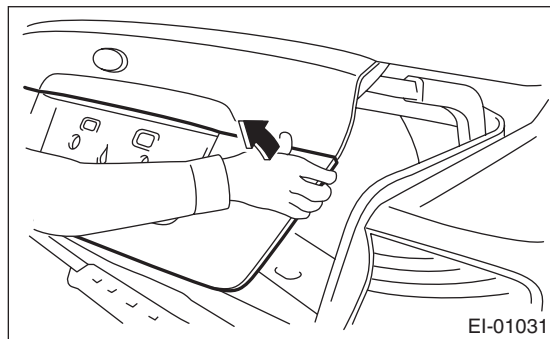

3) Place your hands between the trunk lid garnish and the trunk lid panel, and remove the trunk lid garnish starting from the edge, in order.

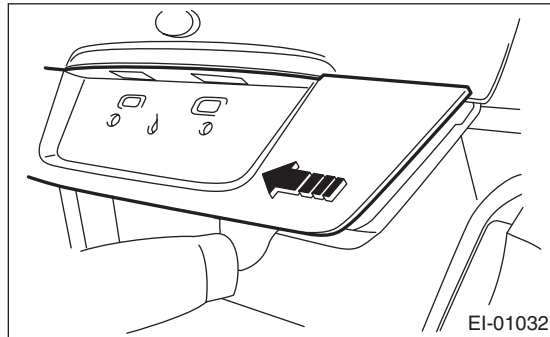

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

7.5 N·m (0.77 kgf-m, 5.53 ft-lb)