


## 36. Heat Shield Cover

### A: REMOVAL

#### 1. FRONT HEAT SHIELD COVER


Remove the four bolts to remove the front heat shield cover.

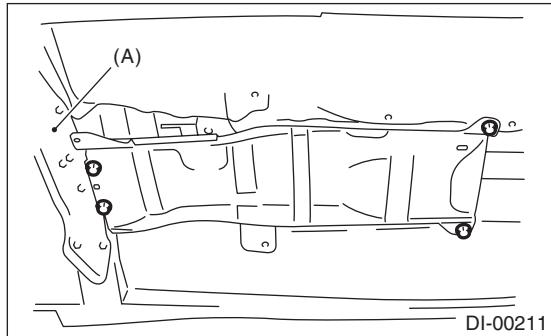

(A) Transmission mount


#### 2. CENTER HEAT SHIELD COVER

Remove the nut and bolt to remove center heat shield cover.

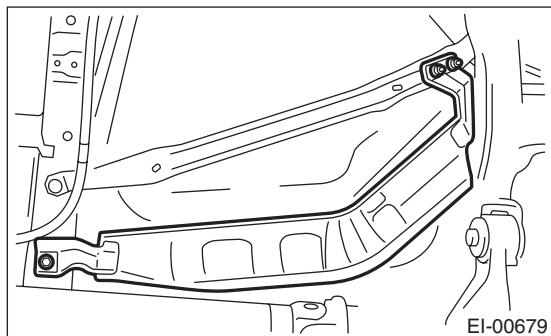

#### 3. REAR HEAT SHIELD COVER

- 1) Remove the muffler. <Ref. to EX(H4SO)-10, REMOVAL, Muffler.> <Ref. to EX(H4DOTC)-14, REMOVAL, Muffler.>
- 2) Remove the four bolts to remove the rear heat shield cover.

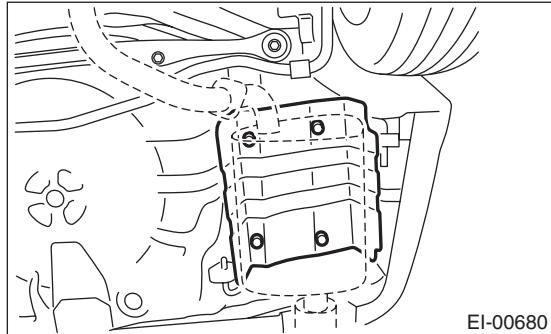

### B: INSTALLATION

Install in the reverse order of removal.