

## 5. Floor Under Protector


### A: REMOVAL

- 1) Lift up the vehicle.

NOTE:

A plate type lift cannot be used.

- 2) Remove the push turn clips (A) and bolts (B), and remove the floor under protector.

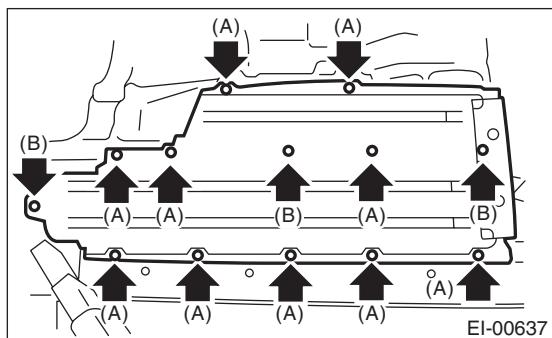

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

Refer to "COMPONENT" of "General Description". <Ref. to EI-3, UNDER PROTECTOR, COMPONENT, General Description.>