


# General Description

## GLASS/WINDOWS/MIRRORS

### 1. General Description

#### A: COMPONENT

##### 1. FIXED GLASS (SEDAN MODEL)

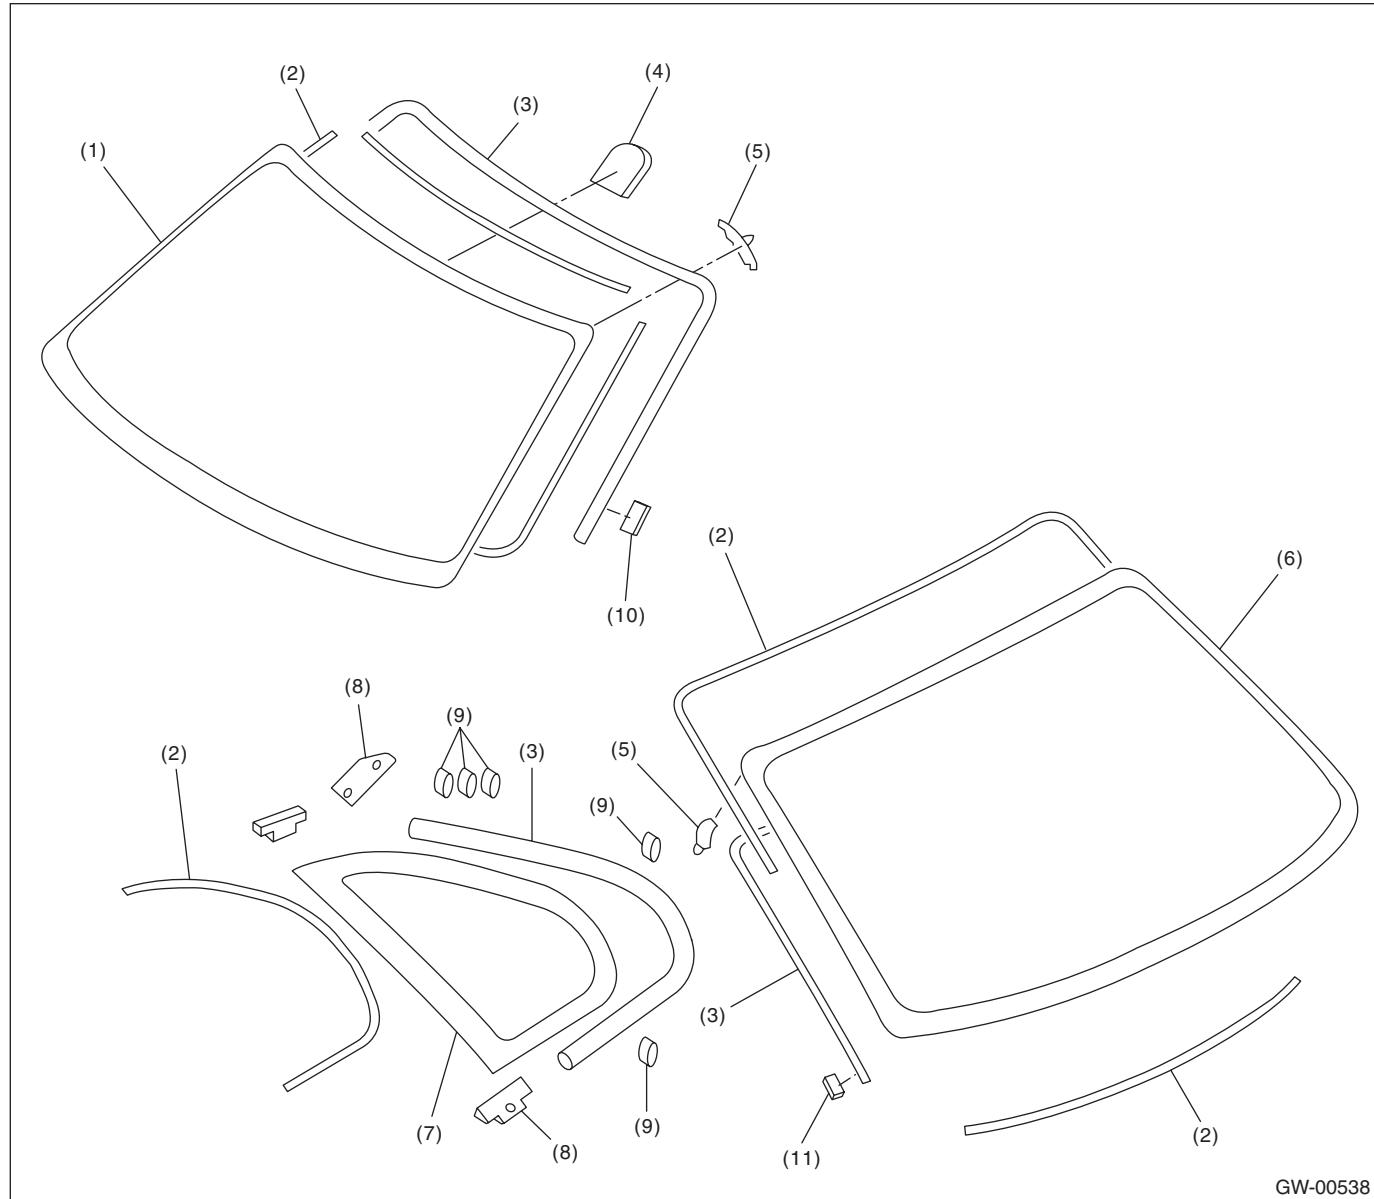


(1) Windshield glass	(5) Locating pin	(9) Clip
(2) Dam rubber	(6) Rear window glass	(10) Seal
(3) Molding	(7) Six light glass	(11) Spacer
(4) Rearview mirror mount	(8) Bracket	

# General Description

## GLASS/WINDOWS/MIRRORS

### 2. FIXED GLASS (WAGON MODEL)

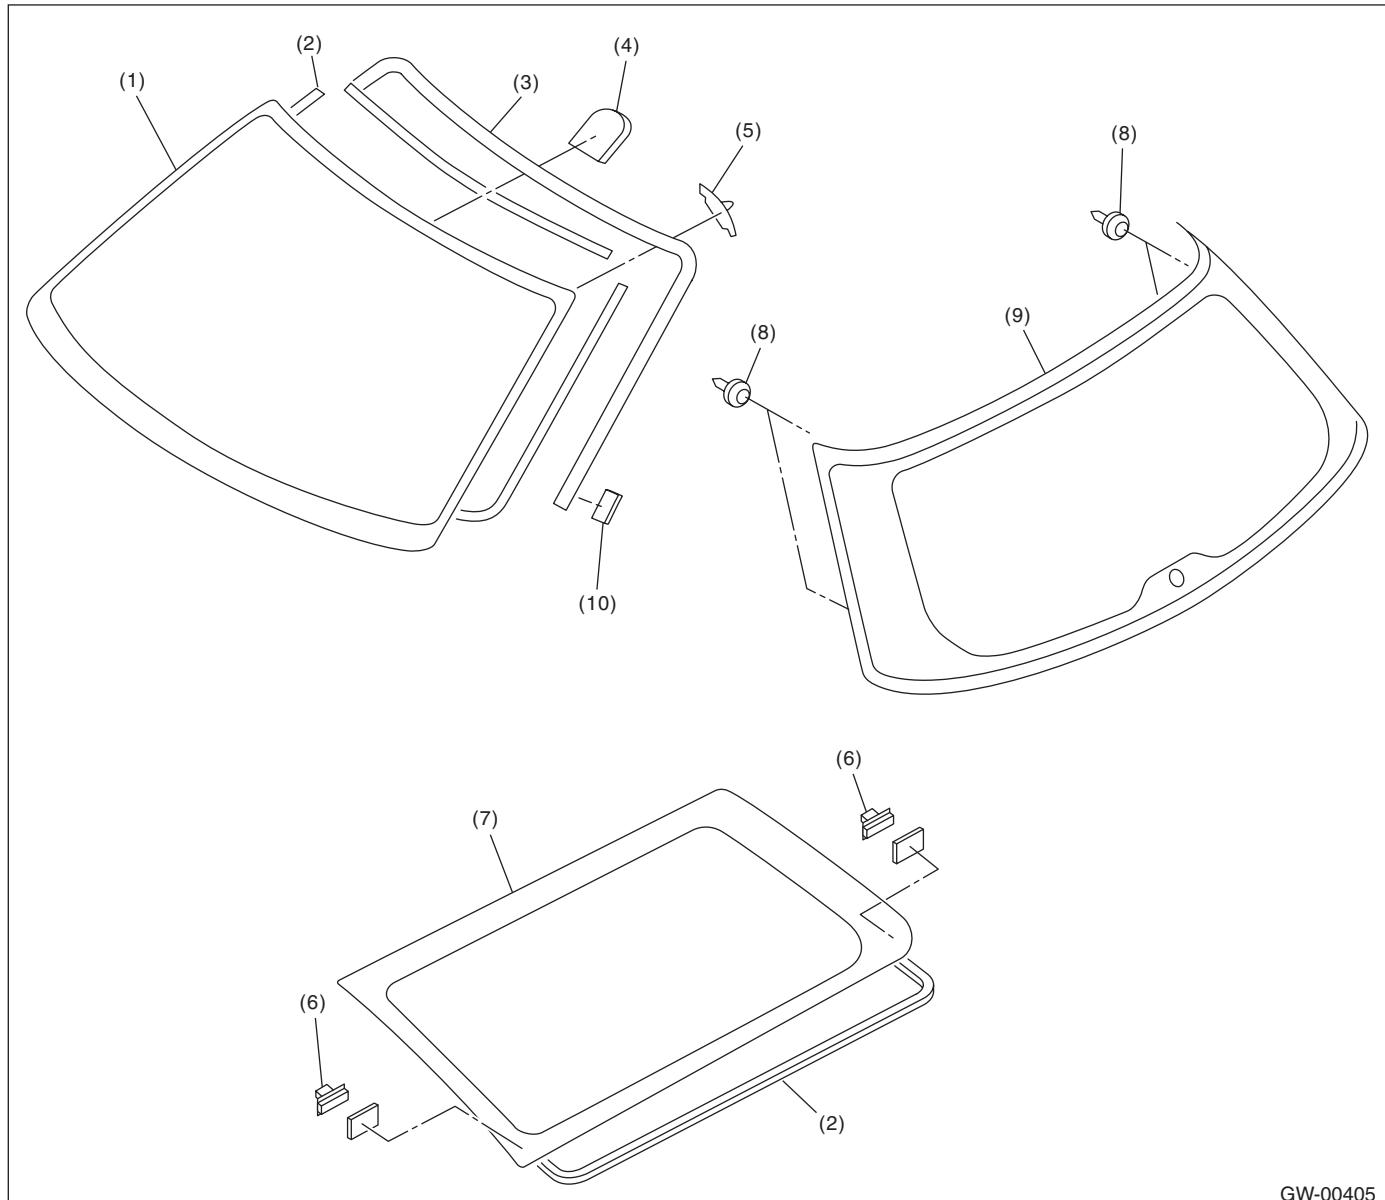

- (1) Windshield glass
- (2) Dam rubber
- (3) Molding
- (4) Rearview mirror mount

- (5) Locating pin
- (6) Fastener
- (7) Rear quarter glass


- (8) Locating pin
- (9) Rear gate glass
- (10) Seal

GW-00405

# General Description

## GLASS/WINDOWS/MIRRORS

### 3. FRONT DOOR GLASS

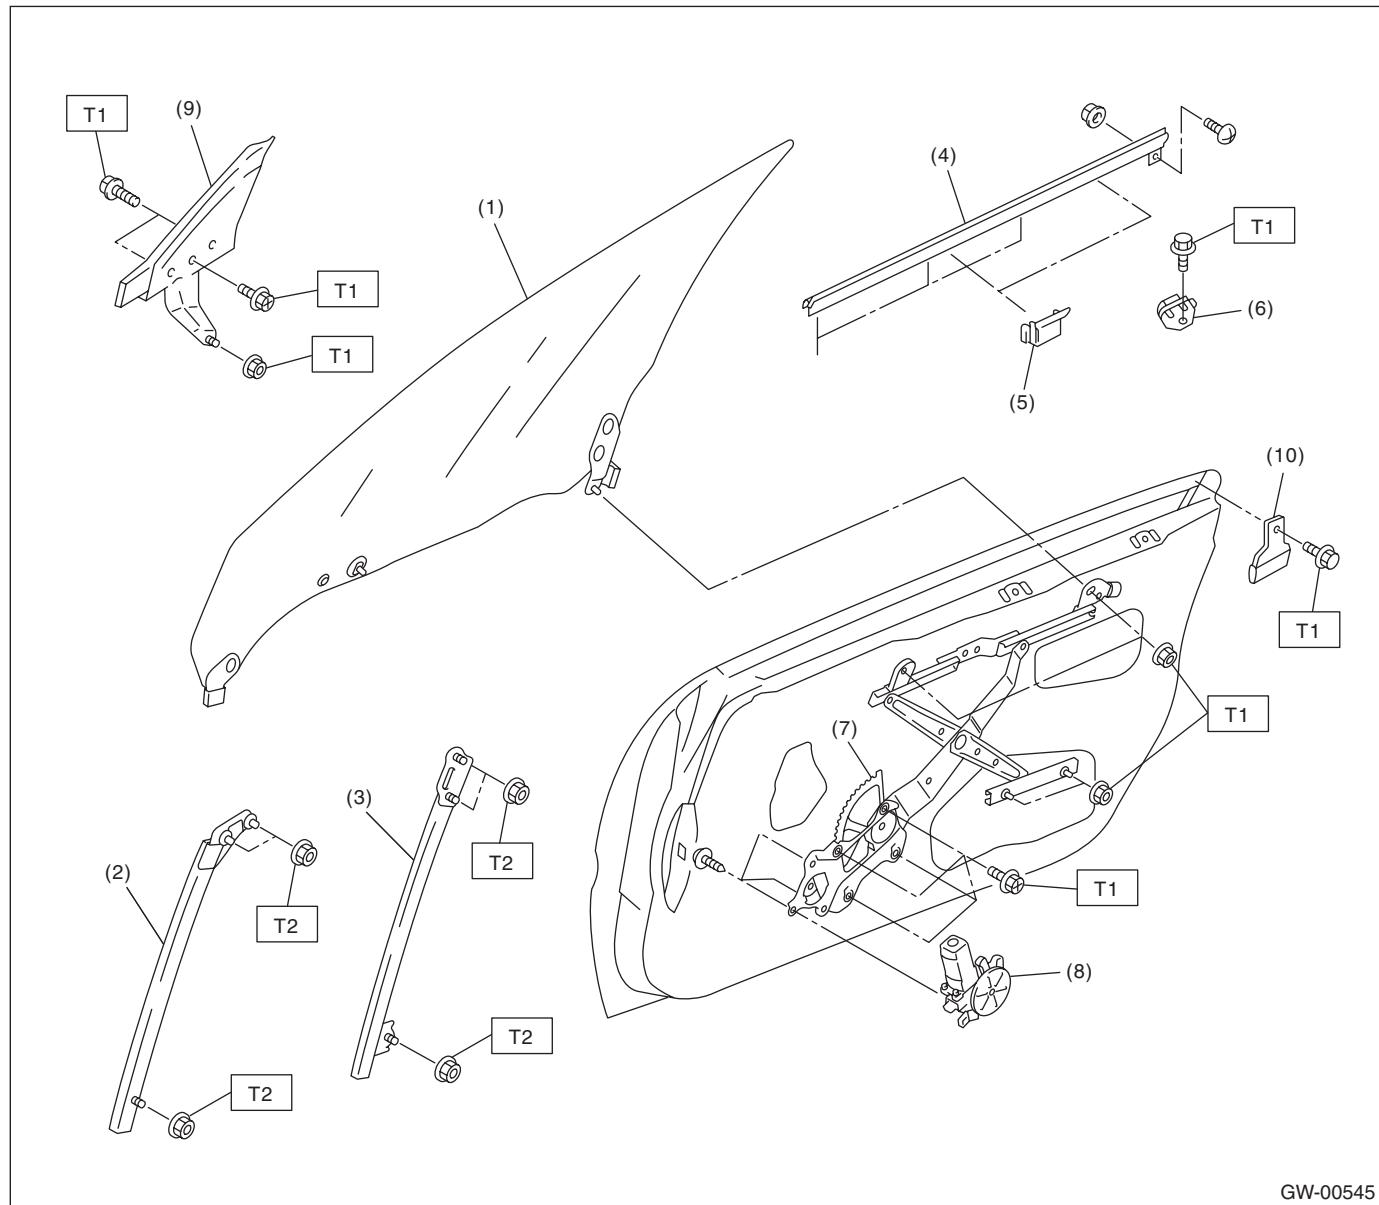

- (1) Glass
- (2) Door sash (front)
- (3) Door sash (rear)
- (4) Weather strip
- (5) Stabilizer (outer)


- (6) Stabilizer (inner)
- (7) Regulator ASSY
- (8) Motor ASSY
- (9) Mirror gusset
- (10) Guide ASSY

**Tightening torque:N·m (kgf·m, ft·lb)**

**T1: 7.4 (0.75, 5.5)**

**T2: 13.7 (1.4, 10.1)**

## 4. REAR DOOR GLASS

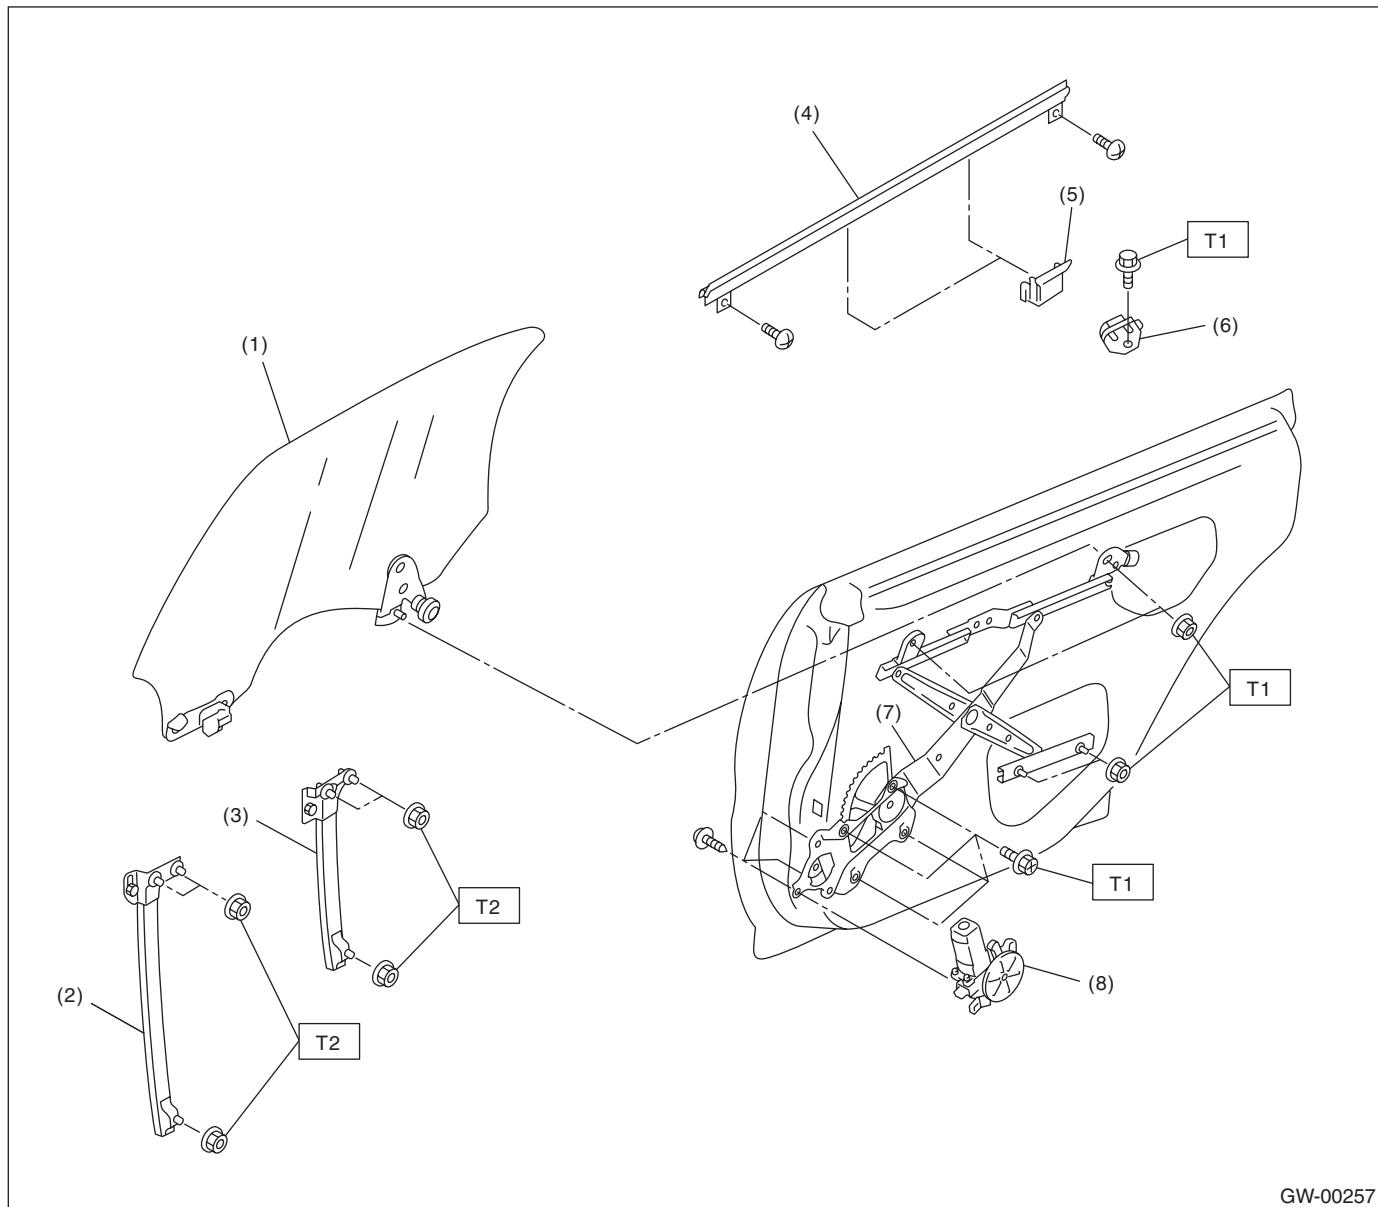

GW-00257

- (1) Glass
- (2) Door sash (front)
- (3) Door sash (rear)
- (4) Weather strip

- (5) Stabilizer (outer)
- (6) Stabilizer (inner)
- (7) Regulator ASSY
- (8) Motor ASSY

**Tightening torque:N·m (kgf·m, ft·lb)**


**T1: 7.4 (0.75, 5.5)**

**T2: 13.7 (1.4, 10.1)**

# General Description

## GLASS/WINDOWS/MIRRORS

### 5. MIRROR

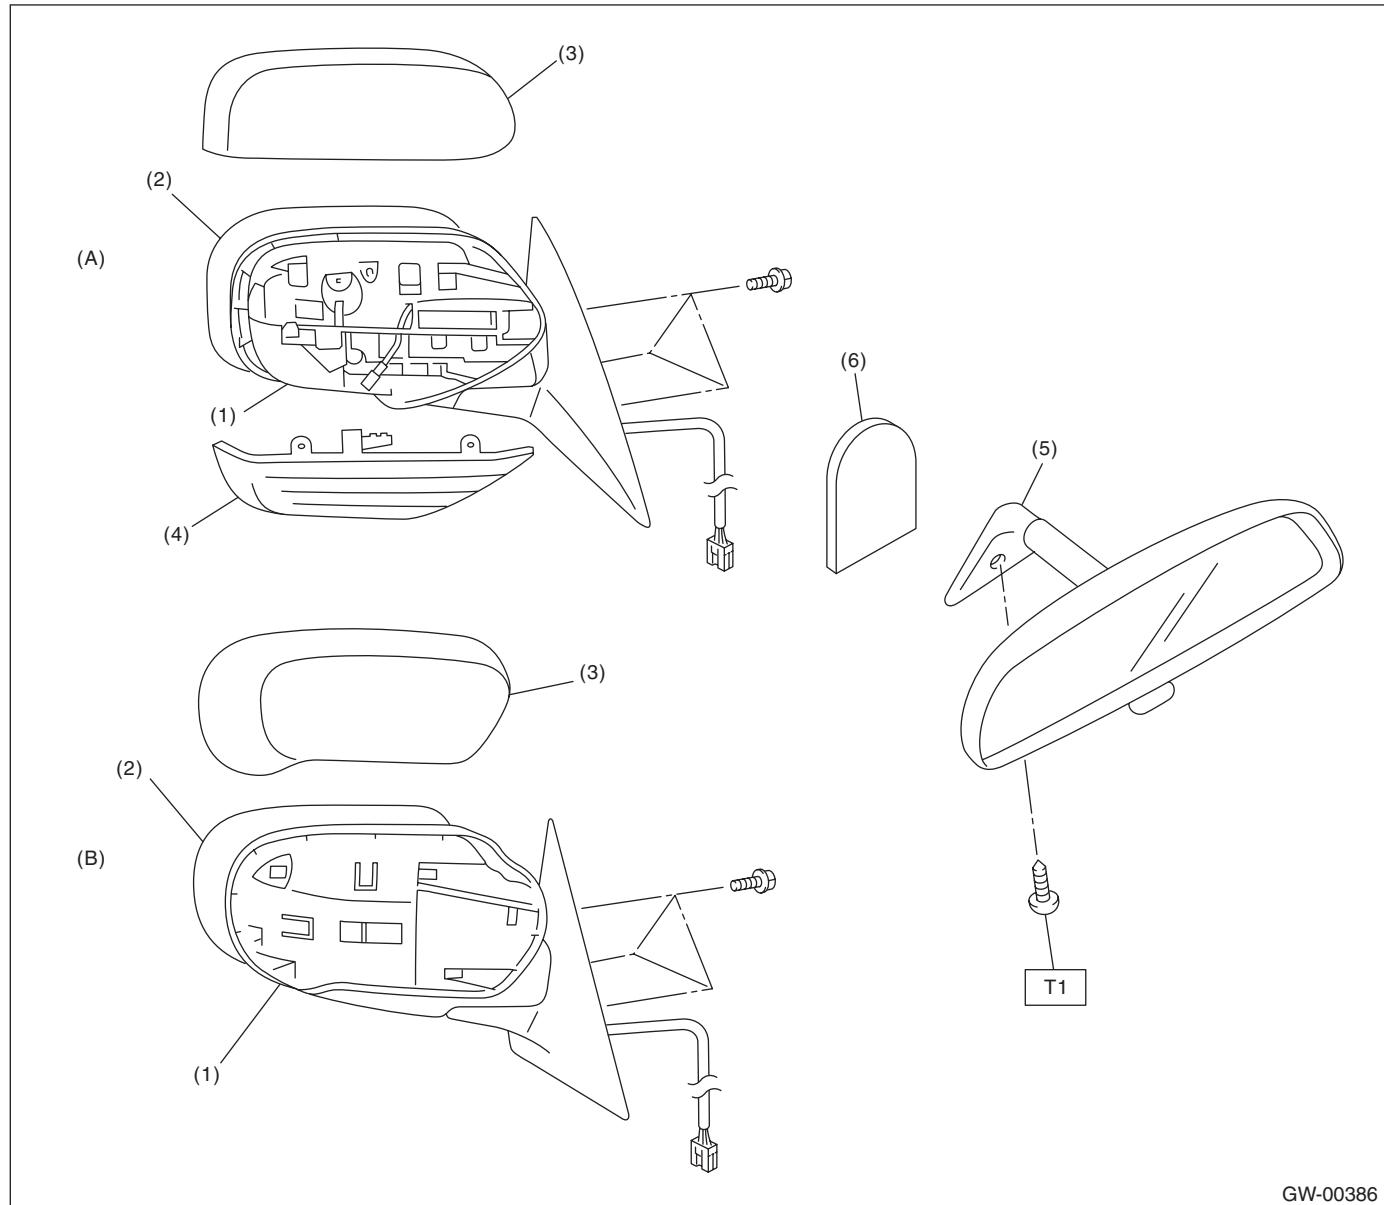

(A) Model with side turn signal light

(B) Model without side turn signal light

(1) Outer mirror

(4) Side turn signal light

**Tightening torque:N·m (kgf·m, ft·lb)**

(2) Mirror

(5) Rearview mirror

**T1: 1.9 (0.19, 1)**

(3) Scalp cap

(6) Mount

### B: CAUTION



- When electrical connectors are disconnected, always conduct an operational check after connecting them again.
- Avoid impact and damage to the glass.

# General Description

GLASS/WINDOWS/MIRRORS

## C: PREPARATION TOOL

### 1. SPECIAL TOOL

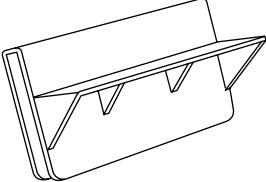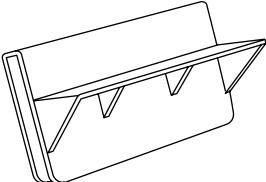ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	61299AE000 ST61299AE000	SPACER	Used for adjusting the upper end position of the front door glass. (Glass thickness: 5 mm (0.197 in))
	61299AE010 ST61299AE010	SPACER	Used for adjusting the upper end position of rear door glass. (Glass thickness: 4 mm (0.157 in))

### 2. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for checking voltage and continuity.
Piano wire	Used for removing the window glass.
Windshield glass knife	Used for removing the window glass.
TORX® T20	Used for removing and installing the rearview mirror.