

21. Wiper Deicer System

A: WIRING DIAGRAM

<Ref. to WI-148, Wiper Deicer System.>

B: INSPECTION

Symptom	Repair order
Wiper de-icer does not operate.	<ol style="list-style-type: none">1. Fuse (F/B No. 4, 9)2. Wiper de-icer relay3. Wiper de-icer switch4. Wiring harness5. Body integrated unit

Refer to "Rear Window Defogger" for inspection.

<Ref. to GW-31, INSPECTION, Rear Window Defogger.>

NOTE:

Wiper de-icer system can be customized on the Subaru Select Monitor.

System name	Initial setting	Customize setting
Wiper de-icer timer	OFF after 15 min.	Continuous operation*

*: When one of the following conditions occurs, continuous operation is suspended and turned off after 15 min.

- Ambient temperature at 5°C (41°F) or more continues for 10 seconds
- Malfunction occurs on ambient sensor.
- Vehicle speed below 15 km/h (9 MPH) continues 15 min.
- Malfunction occurs in CAN communication.

C: REPAIR

Refer to "Rear Window Defogger" for repair.

<Ref. to GW-32, REPAIR, Rear Window Defogger.>