


22. Wiper Deicer Switch

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>
- 2) Disconnect the harness connector and remove wiper de-icer switch.

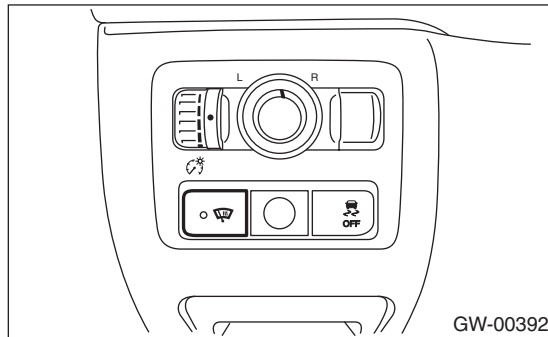

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK WITH SUBARU SELECT MONITOR


CAUTION:

Check whether the wiper de-icer timer is in initial setting or customize setting before performing inspection.

- 1) Check the input signal when the wiper de-icer switch is operated using Subaru Select Monitor.
 - (1) Connect the Subaru Select Monitor to the data link connector.
 - (2) Turn the ignition switch to ON.
 - (3) Select {Integ. unit} from the «main menu».
 - (4) Select the {Current Data Display & Save}.
 - (5) Display the data of wiper deicer switch.
- 2) After the wiper de-icer switch is set to ON, check whether it turns OFF in 15 minutes or operates continuously.
- 3) When it becomes OFF on above 2), it is normal. When it operates continuously, replace the body integrated unit.

2. CHECK SWITCH.

Remove the wiper de-icer switch, and measure the switch resistance.

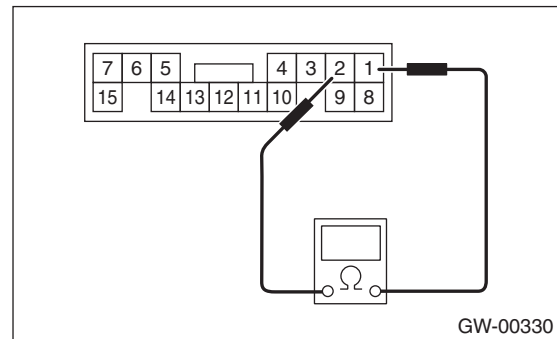

Switch position	Terminal No.	Standard
OFF	1 and 2	1 MΩ or more
ON		Less than 1 Ω

Replace the wiper de-icer switch if faulty.

Wiper Deicer Switch

GLASS/WINDOWS/MIRRORS

BODY STRUCTURE

BS

	Page
1. General Description	2
2. Datum Dimensions	3
3. Plastic Parts and Materials	24
4. List of Plastic Material Notations	27
5. Body Sealing	28
6. Anticorrosion Wax	35
7. Under Coat	40
8. Anti Chipping Coat	45
9. Stone Guard Coat	46
10. Galvanized Sheet Metal	47
11. Aluminium Sheet Metal	48