


8. Outer Mirror Assembly


A: REMOVAL

- 1) Remove the mirror gusset cover.

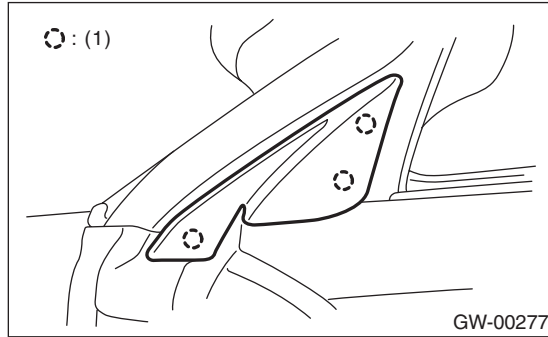

(1) Hook

- 2) Remove the door trim. <Ref. to EI-47, REMOVAL, Door Trim.>
- 3) Disconnect the outer mirror connector.
- 4) Remove the screws to remove outer mirror assembly.

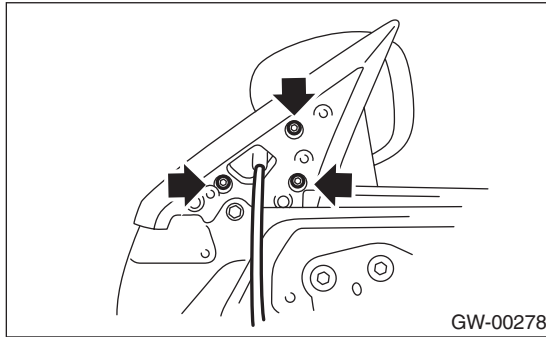


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION


Check that the rearview mirror moves properly when the battery voltage is applied to terminals.

- Model with side turn signal light

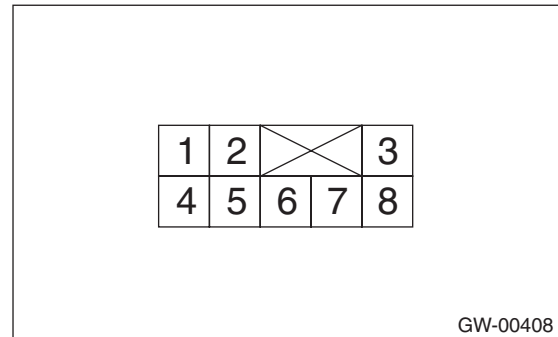

Switch position	Terminal No.
OFF	—
UP	6 (+) and 3 (-)
DOWN	3 (+) and 6 (-)
LEFT	7 (+) and 3 (-)
RIGHT	3 (+) and 7 (-)

- Model without side turn signal light

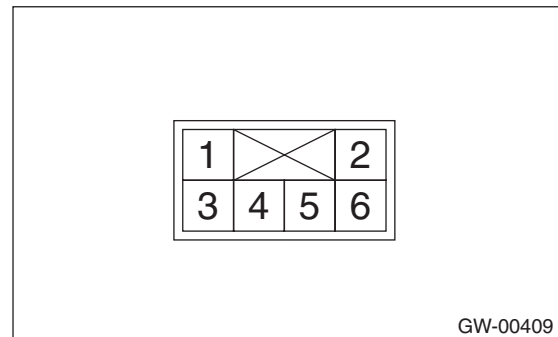

Switch position	Terminal No.
OFF	—
UP	4 (+) and 2 (-)
DOWN	2 (+) and 4 (-)
LEFT	5 (+) and 2 (-)
RIGHT	2 (+) and 5 (-)

Replace the outer mirror assembly if defective.