

# Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

 

## 7. Diagnostic Procedure for Actuators

### A: INTAKE DOOR ACTUATOR

#### TROUBLE SYMPTOM:

FRESH/RECIRC mode is not changed.

#### WIRING DIAGRAM:

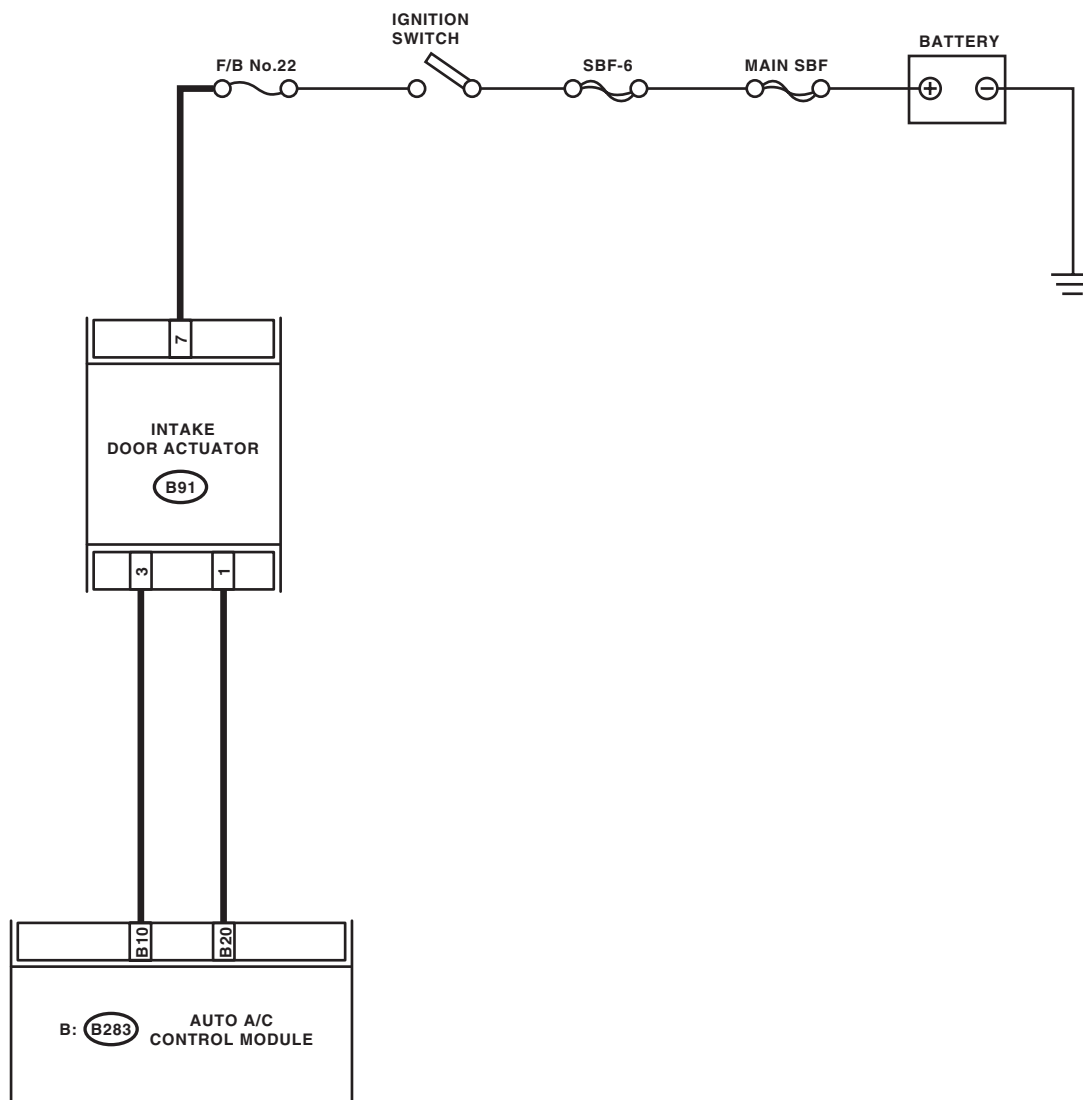

AC-01192

# Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

| Step                                                                                                                                                                                                                                                                                                                                                                                                        | Check                                       | Yes                                  | No                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|--------------------------------------|---------------------------------------------------------------------------------------|
| <b>1 CHECK POWER SUPPLY FOR INTAKE DOOR ACTUATOR.</b><br>1) Turn the ignition switch to OFF.<br>2) Disconnect the intake door actuator connector.<br>3) Turn the ignition switch to ON.<br>4) Measure the voltage between intake door actuator connector and chassis ground.<br><b>Connector &amp; terminal</b><br><b>(B91) No. 7 (+) — Chassis ground (–):</b>                                             | Is the voltage 7 V (at normal temperature)? | Go to step 2.                        | Check for open or short circuit in the harness between intake door actuator and fuse. |
| <b>2 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND INTAKE DOOR ACTUATOR.</b><br>1) Turn the ignition switch to OFF.<br>2) Disconnect the auto A/C control module connector.<br>3) Measure the resistance between intake door actuator connector and auto A/C control module connector.<br><b>Connector &amp; terminal</b><br><b>(B283) No. 10 — (B91) No. 3:</b><br><b>(B283) No. 20 — (B91) No. 1:</b> | Is the resistance less than 1 Ω?            | Go to step 3.                        | Repair the harness between auto A/C control module and intake door actuator.          |
| <b>3 CHECK OPERATION OF INTAKE DOOR ACTUATOR.</b><br>1) Connect the intake door actuator connector.<br>2) Ground the auto A/C control module connector with a suitable wire.<br>3) Turn the ignition switch to ON, and check the operation of intake door actuator.<br><b>Connector &amp; terminal</b><br><b>(B283) No. 10 — Chassis ground:</b>                                                            | Does the actuator move to the FRESH side?   | Go to step 4.                        | Replace the intake door actuator.                                                     |
| <b>4 CHECK OPERATION OF INTAKE DOOR ACTUATOR.</b><br>1) Turn the ignition switch to OFF.<br>2) Ground the auto A/C control module connector with a suitable wire.<br>3) Turn the ignition switch to ON, and check the operation of intake door actuator.<br><b>Connector &amp; terminal:</b><br><b>(B283) No. 20 — Chassis ground:</b>                                                                      | Does the actuator move to the RECIRC side?  | Replace the auto A/C control module. | Replace the intake door actuator.                                                     |

# Diagnostic Procedure for Actuators

 
 

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

## B: MODE DOOR ACTUATOR

### TROUBLE SYMPTOM:

Air flow outlet is not changed.

### WIRING DIAGRAM:

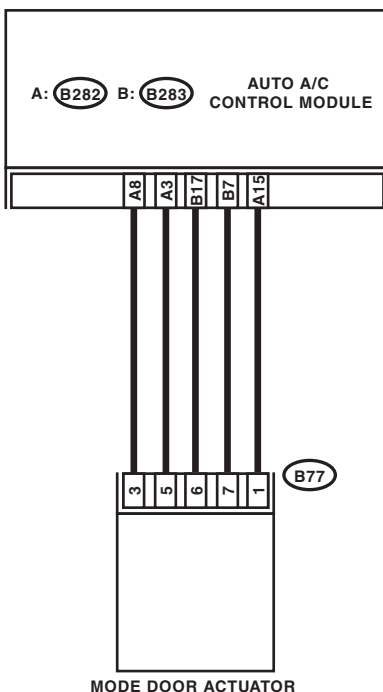

AC-01546

# Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

| Step                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Check                                                     | Yes                   | No                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------|-----------------------|----------------------------------------------------------------------------|
| <b>1 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR POSITION SENSOR.</b><br>1) Turn the ignition switch to OFF.<br>2) Disconnect the mode door actuator connector.<br>3) Turn the ignition switch and AUTO switch to ON.<br>4) Measure the voltage between auto A/C control module connector terminals.<br><b>Connector &amp; terminal</b><br><b>(B282) No. 8 (+) — (B282) No. 15 (-):</b>                                                                                                                                   | Is the voltage approx. 5 V?                               | Go to step 2.         | Replace the auto A/C control module.                                       |
| <b>2 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR.</b><br>Measure the voltage between auto A/C control module connector and chassis ground after turning the air flow control switch to FACE position.<br><b>Connector &amp; terminal</b><br><b>(B283) No. 7 (+) — Chassis ground (-):</b>                                                                                                                                                                                                                                 | Is the voltage 7 V (at normal temperature)?               | Go to step 3.         | Replace the auto A/C control module.                                       |
| <b>3 CHECK POWER SUPPLY FOR MODE DOOR ACTUATOR.</b><br>Measure the voltage between auto A/C control module connector and chassis ground after turning the air flow control switch to DEF position.<br><b>Connector &amp; terminal</b><br><b>(B283) No. 17 (+) — Chassis ground (-):</b>                                                                                                                                                                                                                                 | Is the voltage 7 V (at normal temperature)?               | Go to step 4.         | Replace the auto A/C control module.                                       |
| <b>4 CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND MODE DOOR ACTUATOR.</b><br>1) Turn the A/C and ignition switch to OFF.<br>2) Disconnect the auto A/C control module connector.<br>3) Measure the resistance between auto A/C control module and mode door actuator connector.<br><b>Connector &amp; terminal</b><br><b>(B77) No. 1 — (B282) No. 15:</b><br><b>(B77) No. 3 — (B282) No. 8:</b><br><b>(B77) No. 5 — (B282) No. 3:</b><br><b>(B77) No. 6 — (B283) No. 17:</b><br><b>(B77) No. 7 — (B283) No. 7:</b> | Is the resistance less than 1 $\Omega$ ?                  | Go to step 5.         | Repair the harness between auto A/C control module and mode door actuator. |
| <b>5 CHECK MODE DOOR ACTUATOR POSITION SWITCH SIGNAL.</b><br>1) Connect the connector of auto A/C control module and mode door actuator.<br>2) Turn the ignition switch and AUTO switch to ON.<br>3) Check the voltage between auto A/C control module connector terminals while changing the mode between DEF and FACE.<br><b>Connector &amp; terminal</b><br><b>(B282) No. 3 (+) — (B282) No. 15 (-):</b>                                                                                                             | Does the voltage change between 1 V (DEF) and 4 V (FACE)? | Go to step 6.         | Replace the mode door actuator.                                            |
| <b>6 CHECK POOR CONTACT.</b><br>Check poor contact of auto A/C control module and connector.                                                                                                                                                                                                                                                                                                                                                                                                                            | Is there poor contact in connector?                       | Repair the connector. | Replace the auto A/C control module.                                       |

# Diagnostic Procedure for Actuators

 
 


HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

## C: AIR MIX DOOR ACTUATOR

### TROUBLE SYMPTOM:

Outlet air temperature does not change.

### WIRING DIAGRAM:

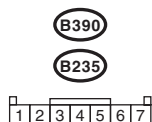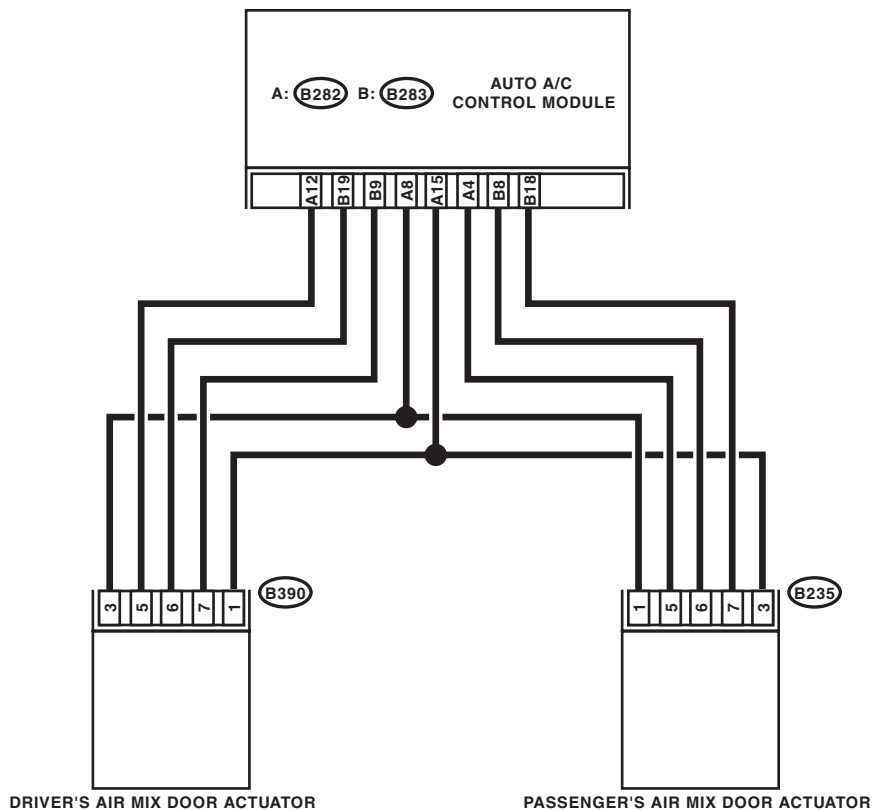

AC-01547

# Diagnostic Procedure for Actuators

HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

| Step                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Check                                       | Yes           | No                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|---------------|-------------------------------------------------------------------------------|
| <b>1</b><br><b>CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR POSITION SWITCH.</b><br>1) Turn the ignition switch to OFF.<br>2) Disconnect the air mix door actuator connector.<br>3) Turn the ignition switch and AUTO switch to ON.<br>4) Measure the voltage between auto A/C control module connector terminals.<br><b>Connector &amp; terminal</b><br><b>(B282) No. 8 (+) — (B282) No. 15 (-):</b>                                                                                                                                                                                                                                                                                                                                                                                                 | Is the voltage approx. 5 V?                 | Go to step 2. | Replace the auto A/C control module.                                          |
| <b>2</b><br><b>CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR.</b><br>Measure the voltage between auto A/C control module connector and chassis ground after turning the temperature control dial to maximum COOL position.<br><b>Connector &amp; terminal</b><br><b>Driver's side</b><br><b>(B283) No. 9 (+) — Chassis ground (-):</b><br><b>Passenger's side</b><br><b>(B283) No. 8 (+) — Chassis ground (-):</b>                                                                                                                                                                                                                                                                                                                                                                                     | Is the voltage 7 V (at normal temperature)? | Go to step 3. | Replace the auto A/C control module.                                          |
| <b>3</b><br><b>CHECK POWER SUPPLY FOR AIR MIX DOOR ACTUATOR.</b><br>Measure the voltage between auto A/C control module connector and chassis ground after turning the temperature control dial to maximum HOT position.<br><b>Connector &amp; terminal</b><br><b>Driver's side</b><br><b>(B283) No. 19 (+) — Chassis ground (-):</b><br><b>Passenger's side</b><br><b>(B283) No. 18 (+) — Chassis ground (-):</b>                                                                                                                                                                                                                                                                                                                                                                                    | Is the voltage 7 V (at normal temperature)? | Go to step 4. | Replace the auto A/C control module.                                          |
| <b>4</b><br><b>CHECK HARNESS BETWEEN AUTO A/C CONTROL MODULE AND AIR MIX DOOR ACTUATOR.</b><br>1) Turn the A/C and ignition switch to OFF.<br>2) Disconnect the auto A/C control module connector.<br>3) Measure the resistance between auto A/C control module and air mix door actuator connector.<br><b>Connector &amp; terminal</b><br><b>Driver's side</b><br><b>(B390) No. 1 — (B282) No. 15:</b><br><b>(B390) No. 3 — (B282) No. 8:</b><br><b>(B390) No. 5 — (B282) No. 12:</b><br><b>(B390) No. 6 — (B283) No. 19:</b><br><b>(B390) No. 7 — (B283) No. 9:</b><br><b>Passenger's side</b><br><b>(B235) No. 1 — (B282) No. 8:</b><br><b>(B235) No. 3 — (B282) No. 15:</b><br><b>(B235) No. 5 — (B282) No. 4:</b><br><b>(B235) No. 6 — (B283) No. 8:</b><br><b>(B235) No. 7 — (B283) No. 18:</b> | Is the resistance less than 1 Ω?            | Go to step 5. | Repair the harness between auto A/C control module and air mix door actuator. |

## Diagnostic Procedure for Actuators

### HVAC SYSTEM (AUTO A/C) (DIAGNOSTICS)

| Step                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Check                                                               | Yes                   | No                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|-----------------------|--------------------------------------|
| <b>5</b><br><b>CHECK AIR MIX DOOR ACTUATOR POSITION SWITCH SIGNAL.</b><br>1) Connect the connector of auto A/C control module and air mix door actuator.<br>2) Turn the ignition switch and AUTO switch to ON.<br>3) Check the voltage between auto A/C control module connector terminals while changing the setting temperature between maximum COOL and maximum HOT.<br><b>Connector &amp; terminal</b><br><b>Driver's side</b><br><b>(B282) No. 12 (+) — (B282) No. 15 (-):</b><br><b>Passenger's side</b><br><b>(B282) No. 4 (+) — (B282) No. 15 (-):</b> | Does the voltage change between 1 V (Max. HOT) and 4 V (Max. COOL)? | Go to step 6.         | Replace the air mix door actuator.   |
| <b>6</b><br><b>CHECK POOR CONTACT.</b><br>Check poor contact of auto A/C control module and connector.                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Is there poor contact in connector?                                 | Repair the connector. | Replace the auto A/C control module. |