


## 26. Air Vent Grille

### A: REMOVAL


#### 1. CENTER GRILLE

- 1) Disconnect the ground cable from battery.
- 2) Remove the three claws and connector to remove center air vent grill.

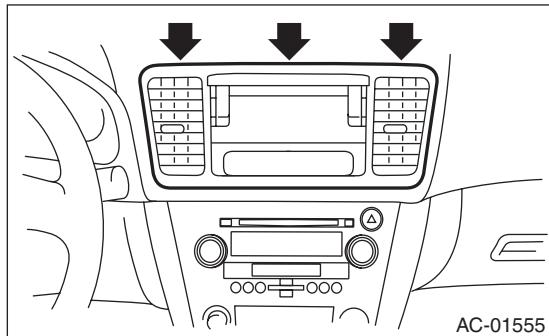

#### 2. SIDE GRILLE

Remove the catch in 2 locations to remove the side air vent grill.

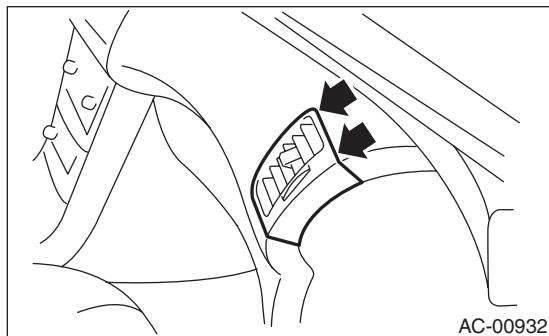

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check that the direction and amount of air can be adjusted smoothly.
- 2) Check that the adjustment can be maintained in each position.