

7. Clear Memory Mode

A: OPERATION

1. ECM

- 1) Select {Each System Check} in Main Menu.
- 2) On the «System Selection Menu» display screen, select the {Engine Control System}.
- 3) Select the [OK] after the information of engine type is displayed.
- 4) On the «Engine Diagnosis» display screen, select the {Clear Memory}.
- 5) When the «Done» is shown on the display screen, turn the ignition switch to OFF and close the Subaru Select Monitor.

NOTE:

- After the memory has been cleared, the idle air control solenoid valve must be initialized. To execute this procedure, turn the ignition switch to ON. Wait 3 seconds before starting the engine.
- For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".

2. BODY INTEGRATED UNIT

- 1) Select {Each System Check} in Main Menu.
- 2) On the «System Selection Menu» display screen, select the {Integ. unit mode}.
- 3) Select the [OK] after the {Integ. unit mode} is displayed.
- 4) On the «Integ. unit mode» display screen, select the {Clear Memory}.
- 5) When the «Done» is shown on the display screen, turn the ignition switch to OFF and close the Subaru Select Monitor.

NOTE:

For detailed operation procedure, refer to the "SUBARU SELECT MONITOR OPERATION MANUAL".