

General Description

INSTRUMENTATION/DRIVER INFO

1. General Description

A: SPECIFICATION

Combination meter	Speedometer	Stepping motor type
	Tachometer	
	Engine coolant temperature gauge	
	Fuel gauge	
	ECO gauge	
	Malfunction indicator light	
	Oil pressure warning light	
	ABS warning light	
	Airbag warning light	
	Seat belt warning light	
	Door open warning light	
	Brake fluid and parking brake warning light	
	Low fuel warning light	
	Charge warning light	
	ATF temperature warning light	
	AWD warning light	
	Tire pressure warning light	
	Vehicle dynamics control (VDC) warning light	
	Vehicle dynamics control (VDC) indicator light	
	Turn signal indicator light	
	HI-beam indicator light	
	Security indicator light	
	Cruise indicator light	
	Cruise set indicator light	
	Front fog light indicator light	
	SPORT indicator light	
	AT select lever position indicator light	
	AT OIL TEMP warning light	
	Light illumination indicator light	
	Meter illumination light	
	LCD back light	LED
	Odo/Trip indicator	
	SPORT shift indicator	LCD
Multi information display	Odo/Trip indicator, Instant fuel economy/Average fuel economy, Ambient air temperature/Continuous driving time, Drivable distance, Current time, SI-DRIVE mode, Malfunction warning display	

B: CAUTION

- Be careful not to damage the meters and instrument panel.
- Be careful not to damage the meter glass.
- Make sure the electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply an excessive force on the printed circuit.
- Do not drop or otherwise apply impact.
- When the combination meter of model with immobilizer has been replaced, be sure to perform the registration of immobilizer.

C: PREPARATION TOOL

1. GENERAL TOOL

TOOL NAME	REMARKS
Circuit tester	Used for measuring resistance and voltage.