


9. Clock

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the center air vent grille. <Ref. to AC-44, REMOVAL, Air Vent Grille.>
- 3) Loosen the screws, and remove clock (B) from center air vent grille (A).

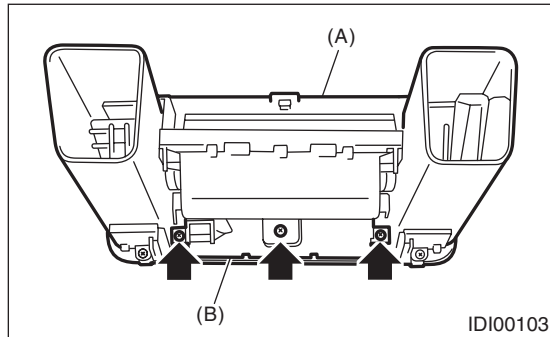

B: INSTALLATION

Install in the reverse order of removal.

	Page
1. General Description	2
2. Front Seat	9
3. Rear Seat	17
4. Seat Heater System	22
5. Power Seat System	24

