



11. Headlight Assembly

A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the air intake duct. (When removing the headlight RH).

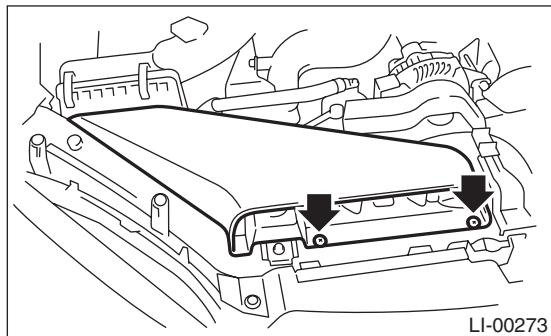

- 3) Remove the front grille. <Ref. to EI-24, REMOVAL, Front Grille.>
- 4) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 5) Disconnect harness connectors.
- 6) Remove the 5 bolts, disengage 1 clip, then detach the headlight assembly.

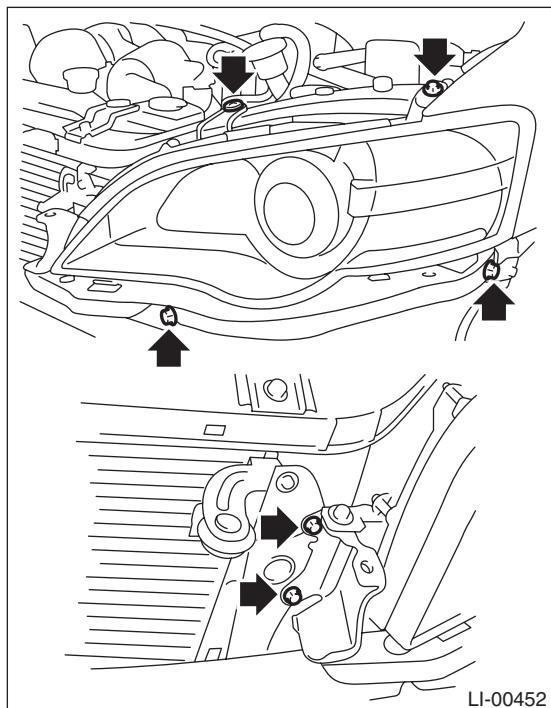

B: INSTALLATION

Install in the reverse order of removal.

Headlight Assembly

LIGHTING SYSTEM

C: ADJUSTMENT

1. HEADLIGHT BEAM ADJUSTMENT

NOTE:

The headlight can only be adjusted in the vertical direction but not the horizontal direction.

CAUTION:

Turn off the light before adjusting the headlight beam level. If it is necessary to inspect the beam level, do not keep the light on for two minutes or more.

NOTE:

Before checking the headlight beam level, be sure of the following:

- Check the area around the headlight for any scratches, damage or other types of deformation.
- Make sure that the vehicle is parked on a level surface.
- Make sure that the inflation pressure of tires are correct.

- Check that the vehicle fuel tank is full.




1) Bounce the vehicle several times to normalize the suspension.

2) Make certain that someone is seated in the driver's seat.

3) Turn the headlights on and then adjust the low beam pattern.

NOTE:

Adjust the headlight beam level by turning the adjusting screw (A).

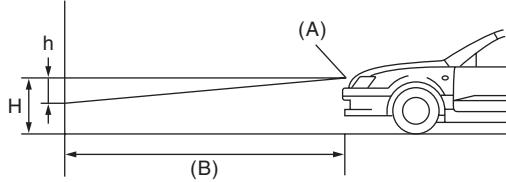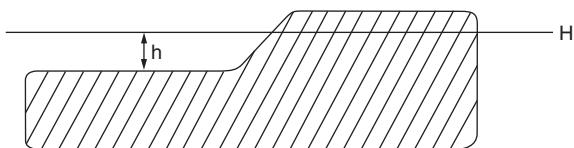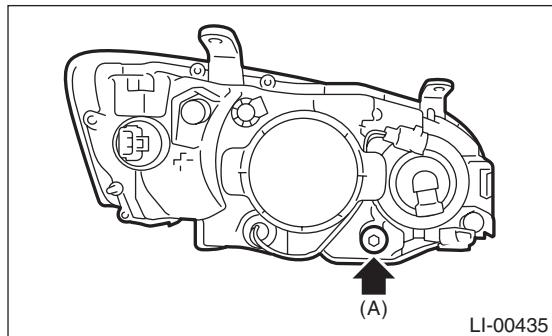

LI-00453

(A) Bulb center marking

(B) 3 m (10 ft)

(H) Height of the headlight LOW beam center

h mm (in) at 3 m (10 ft)
21 (0.83)