



## 17. Front Fog Light Bulb

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disengage the two clips, and then turn over the lower mud guard.

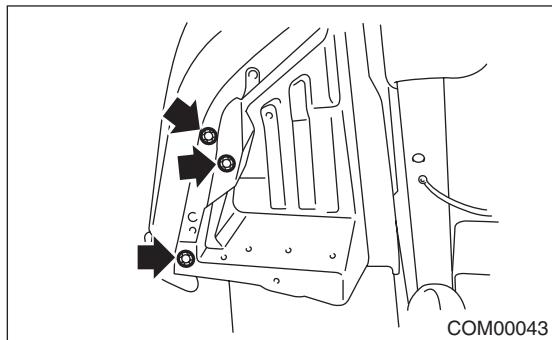

- 3) Disconnect the harness connector.
- 4) Remove the back cover.

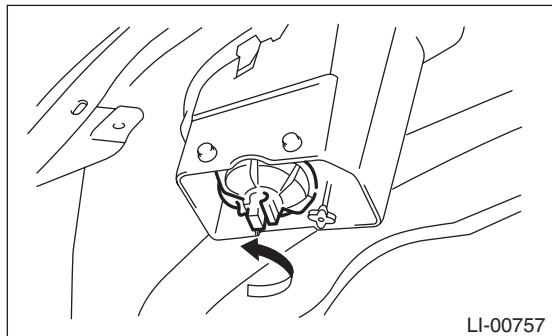

- 5) Remove the spring retainer then detach the fog light bulb.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.