


18. Side Turn Signal Light Assembly

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the scalp cap. <Ref. to GW-18, REPLACEMENT, Scalp Cap.>
- 3) Remove the mirror. <Ref. to GW-20, REPLACEMENT, Outer Mirror.>
- 4) Disconnect the harness connector, remove the 3 mounting screws and then remove the side turn signal light assembly.

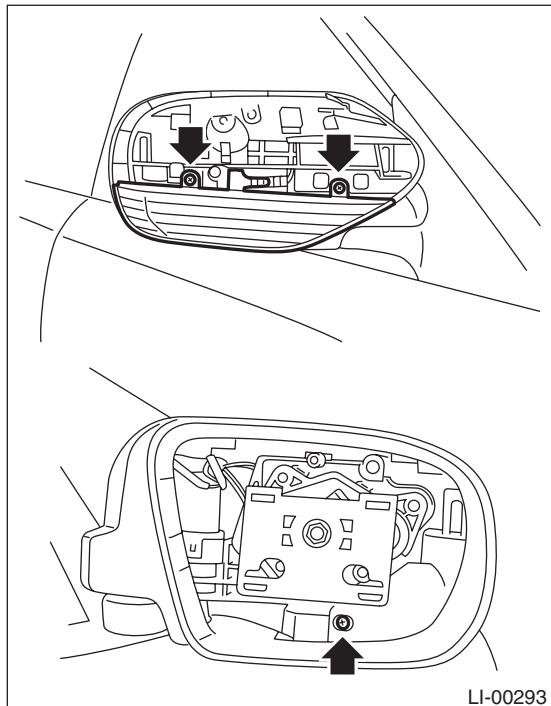

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Install the side turn signal light assembly and check that it blinks normally.
- 2) If it does not blink normally, replace the side turn signal light assembly with a new part.

NOTE:

Since LED (Light Emitting Diode) is used for the side turn signal light, replace the side turn signal light assembly if the LED burns out.