


21. Rear Turn Signal Light Bulb

A: REMOVAL


1. SEDAN MODEL

- 1) Remove the trunk side trim cover.
- 2) Turn the socket and remove the bulb.

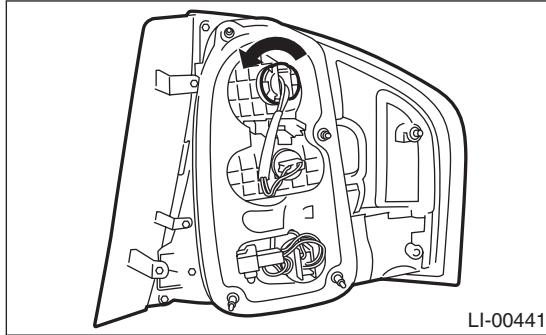

2. WAGON MODEL

- 1) Remove the rear combination light assembly.
<Ref. to LI-23, WAGON MODEL, REMOVAL, Rear Combination Light Assembly.>
- 2) Turn the socket and remove the bulb.

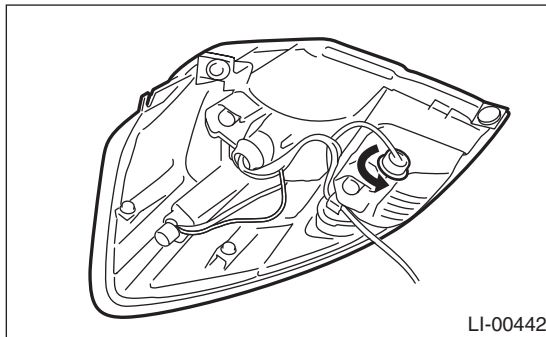

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.