


## 31. Trunk Room Light


### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Turn the trunk room light counterclockwise 60° to remove it and disconnect the harness connector.

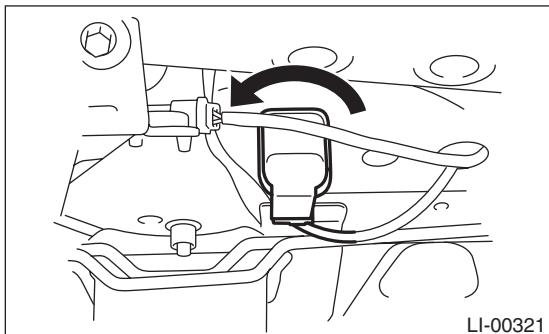

LI-00321

- 3) Remove bulb (A).

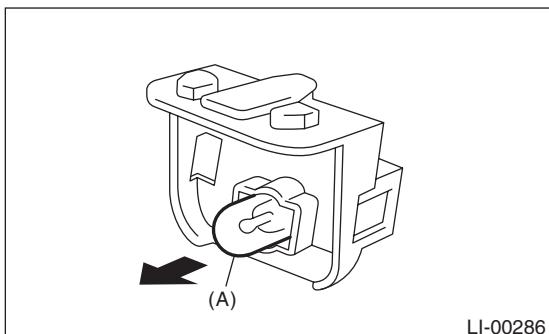

LI-00286

### B: INSTALLATION

Install in the reverse order of removal.


### C: INSPECTION

#### 1. TRUNK ROOM LIGHT BULB

- 1) Visually check the bulb for blow out.
- 2) Check the bulb specification. <Ref. to LI-2, SPECIFICATION, General Description.>
- 3) If NG, replace the bulb with a new part.

## 2. TRUNK LID SWITCH (TRUNK ROOM LIGHT SWITCH)

Measure the resistance between trunk lid switch terminals.

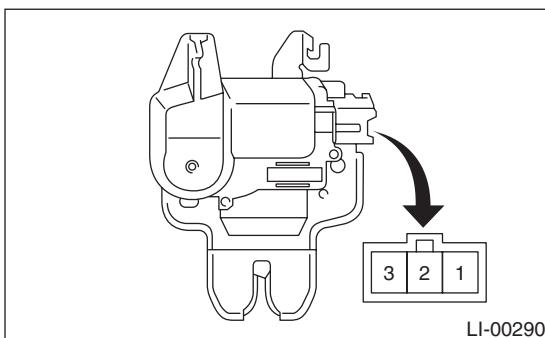

LI-00290

Trunk lid position	Terminal No.	Standard
Close	1 and 3	1 MΩ or more
		1.5±0.5 Ω