


35.Day Time Running Lamp Unit

A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-49, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the fuse box and disconnect the connector.
- 3) Remove the mounting nuts, and detach the day-time running light module.

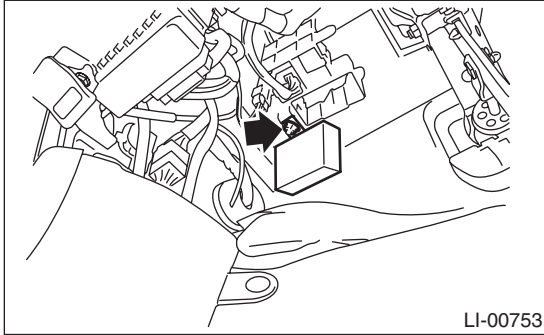

B: INSTALLATION

Install in the reverse order of removal.

Day Time Running Lamp Unit

LIGHTING SYSTEM

WIPER AND WASHER SYSTEMS



	Page
1. General Description	2
2. Wiper and Washer System	5
3. Combination Switch (Wiper)	6
4. Wiper Blade	9
5. Washer Tank and Motor	11
6. Front Wiper Arm	12
7. Front Wiper Motor and Link	13
8. Front Washer Nozzle	14
9. Rear Wiper Arm	15
10. Rear Wiper Motor	16
11. Rear Washer	17

