

8. Read Diagnostic Trouble Code (DTC)

A: OPERATION

For details on reading DTCs, refer to “Airbag System (Diagnosis) Subaru Select Monitor”. <Ref. to AB(diag)-31, Subaru Select Monitor.>