


### 6. Rear Seat Belt


#### A: REMOVAL

##### 1. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the seat belt lower anchor bolt.

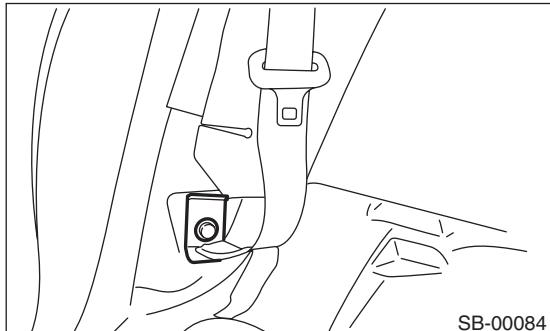


- 3) Remove the rear quarter trim. <Ref. to EI-60, SEDAN MODEL, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolts, and then detach the outer seat belt assembly.

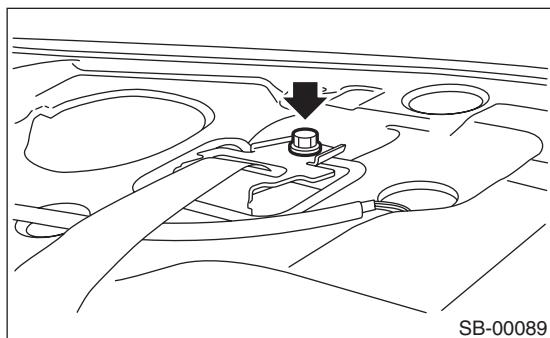


##### 2. SHOULDER SEAT BELT CENTER ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the rear quarter trim. <Ref. to EI-60, REMOVAL, Rear Quarter Trim.>
- 3) Remove the rear shelf trim. <Ref. to EI-66, REMOVAL, Rear Shelf Trim.>
- 4) Remove the bolts, then remove the shoulder seat belt assembly.

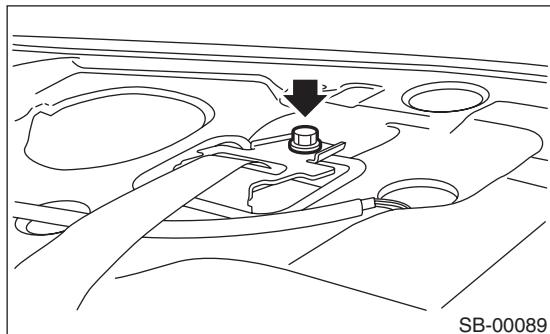


##### 3. CENTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (SEDAN MODEL)

- 1) Remove the rear seat cushion. <Ref. to SE-17, REMOVAL, Rear Seat.>
- 2) Remove the bolts, then remove the center seat belt LH assembly.

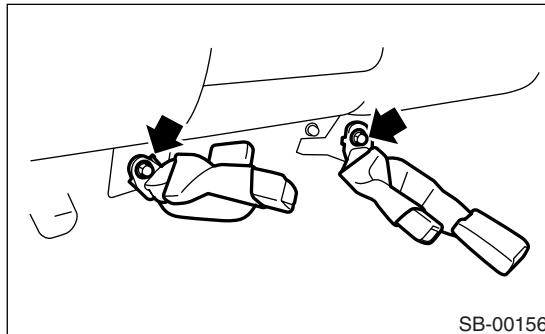


##### 4. OUTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (WAGON MODEL)

- 1) Remove the luggage floor box. <Ref. to EI-70, REMOVAL, Luggage Floor Box.>
- 2) Remove the rear seat cushion and backrest shoulder. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
- 3) Remove the rear quarter lower trim. <Ref. to EI-60, WAGON MODEL, REMOVAL, Rear Quarter Trim.>
- 4) Remove the bolt to remove outer seat belt retractor.

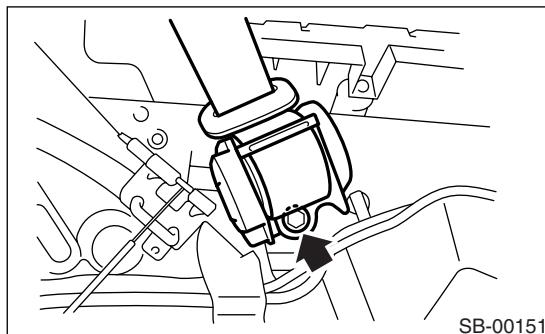


- 5) Remove the bolt to remove the outer seat belt guide.

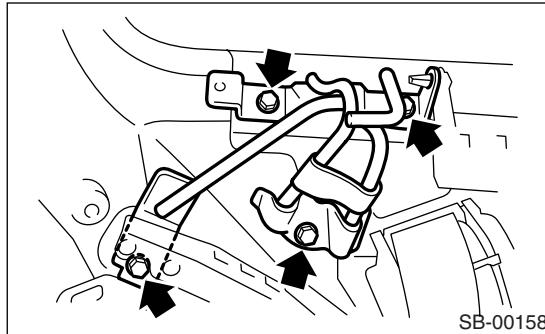


## 5. SHOULDER SEAT BELT CENTER ASSEMBLY (WAGON MODEL)

- 1) Remove the quarter rear pillar trim. <Ref. to EI-60, WAGON MODEL, REMOVAL, Rear Quarter Trim.>
- 2) Remove the cover (A) from roof trim, and then insert it to the inside of roof trim.

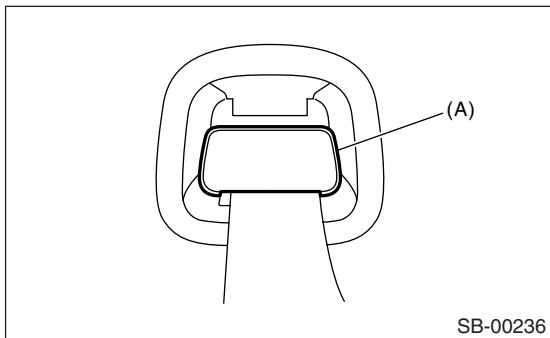

SB-00236

- 3) Remove the clips, and then lower the roof trim end.

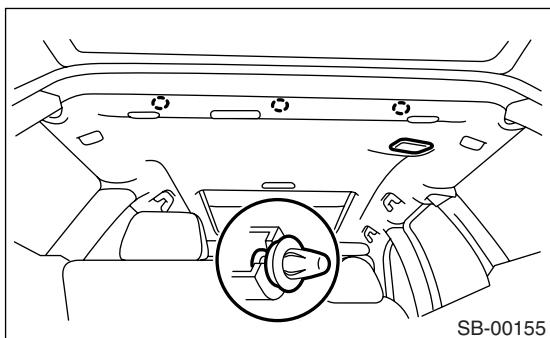


SB-00155

### CAUTION:

**When removing the roof trim clip, do not pull the roof trim end backward with excessive force, otherwise roof trim may be damaged.**


- 4) Remove the bolt to remove the seat belt retractor.

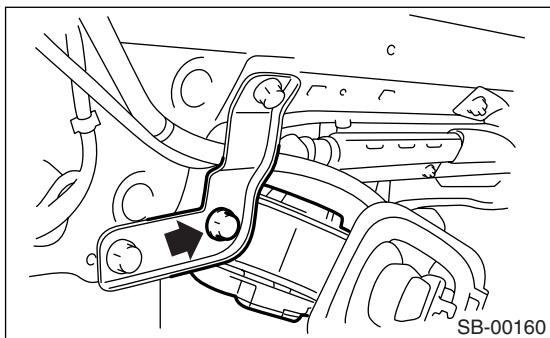

SB-00160

## 6. CENTER SEAT BELT RH ASSEMBLY AND LH ASSEMBLY (WAGON MODEL)

- 1) Remove the rear seat cushion. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
- 2) Remove the bolts, then remove the center seat belt assembly.

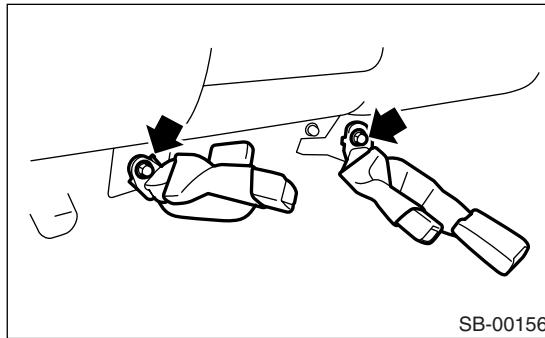


SB-00156

## B: INSTALLATION

Install in the reverse order of removal.

### CAUTION:

- During installation, make sure that the seat belts are not twisted.
- During installation, make sure that the center seat belt assembly (RH & LH) are properly pulled out from the slit of seat cushions.
- After installation, make sure that the seat belts are smoothly extended and wound.
- If the vehicle is equipped with rear outer seat belts (wagon model), make sure that the seat belts are wound after installing the seat belt guide.

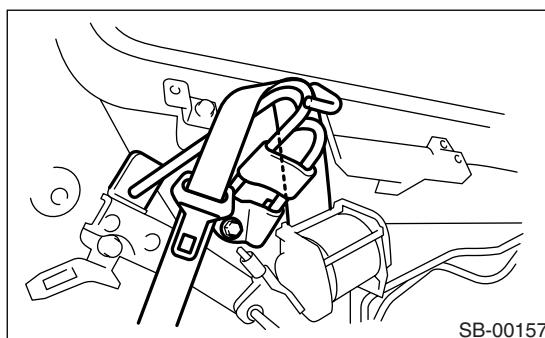

SB-00157

## C: INSPECTION

Check for the following, and replace with new parts if necessary.

- Seat belt is slackened, bent or worn. Seat belt is abnormally wound or extended.
- Inner seat belt assembly is deformed or damaged.
- Seat belt buckle cannot be engaged properly.

## **Rear Seat Belt**

SEAT BELT SYSTEM

---

# LIGHTING SYSTEM

LI

---

	Page
1. General Description .....	2
2. Headlight and Tail Light System .....	3
3. Day Time Running Lamp System .....	4
4. Front Fog Light System .....	6
5. Turn Signal Light and Hazard Light System .....	7
6. Back-up Light System .....	8
7. Stop Light System .....	9
8. Room Light System .....	10
9. Combination Switch (Light) .....	11
10. Combination Base Switch Assembly .....	12
11. Headlight Assembly .....	13
12. Headlight Bulb .....	15
13. Front Turn Signal Light Bulb .....	16
14. Parking Light Bulb .....	17
15. Front Side Marker Light Bulb .....	18
16. Front Fog Light Assembly .....	19
17. Front Fog Light Bulb .....	21
18. Side Turn Signal Light Assembly .....	22
19. Rear Combination Light Assembly .....	23
20. Tail/Stop Light Bulb .....	24
21. Rear Turn Signal Light Bulb .....	25
22. Rear Side Marker Light Bulb .....	26
23. Back-up Light Assembly .....	27
24. Back-up Light Bulb .....	28
25. License Plate Light Assembly .....	29
26. License Plate Light .....	30
27. High-mounted Stop Light .....	31
28. Spot Map Light .....	32
29. Room Light .....	33
30. Luggage Room Light .....	34
31. Trunk Room Light .....	35
32. Glove Box Light .....	36
33. Door Step Light .....	37
34. Ignition Switch Illumination .....	38
35. Day Time Running Lamp Unit .....	39