


3. Rear Seat


A: REMOVAL

1. SEDAN MODEL


1) Remove the two hooks while lifting up the rear seat cushion.

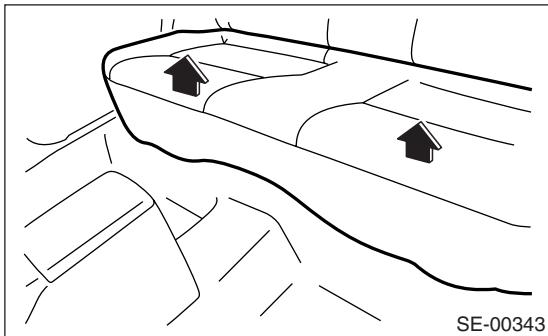

2) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

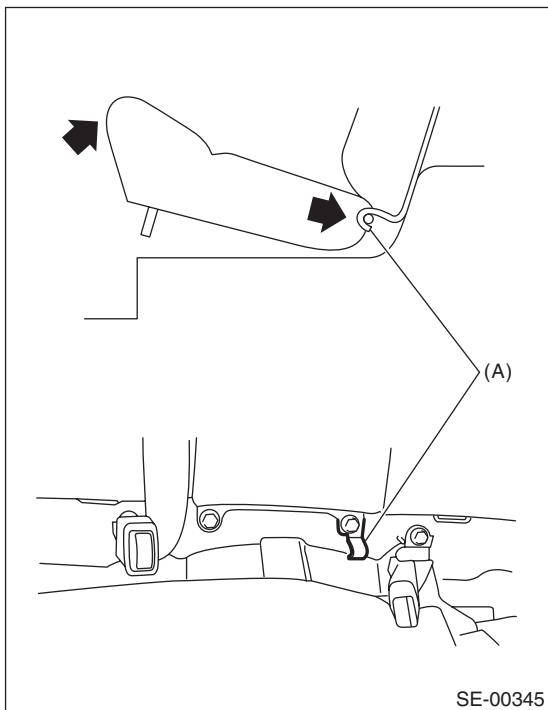


3) Remove two bolts in the center of the backrest.

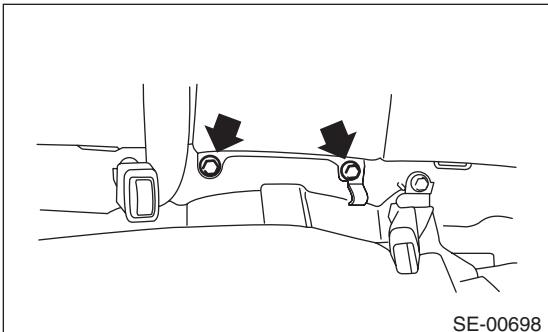


4) Tilt the backrest forward, remove the plastic fastener at the rear mat.

5) Remove the hinge assembly center bolts.

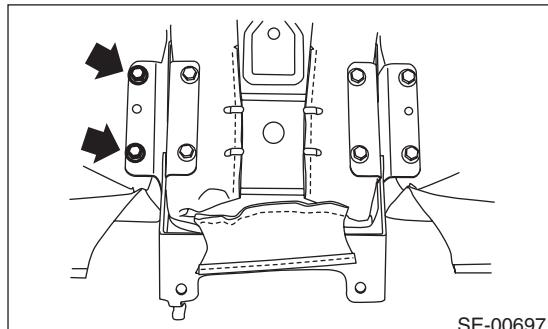

6) Push the entire seat to the direction of arrow and remove backrest assembly LH from the hinge assembly.

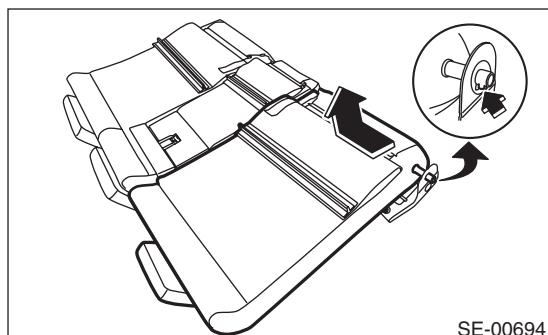


NOTE:

The backrest cannot be detached while the cutout on hinge assembly side and the pin on the backrest side are not aligned.

7) Similarly, remove the backrest assembly RH by performing the above step 6).

8) Remove the backrest shoulders (left and right) by performing the following procedures.

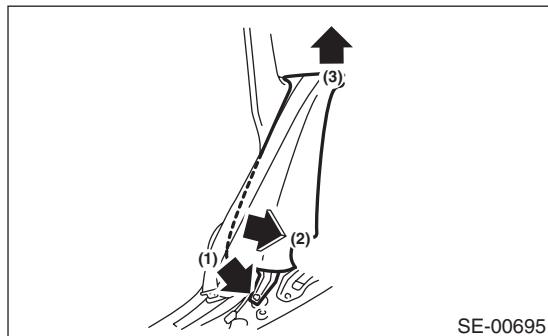

(1) Remove the bolt.

(2) Moving the lower side of backrest shoulder to the direction of arrow, and remove it from the stud bolt.


(3) Lift to remove the backrest shoulder.

Rear Seat


SEATS

2. WAGON MODEL


- 1) Disconnect the ground cable from the battery.
- 2) Remove the two hooks while lifting up the rear seat cushion.

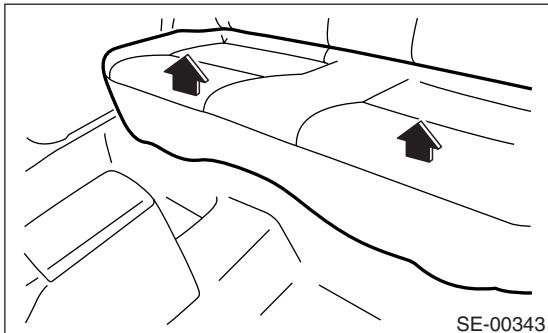

- 3) Remove the hook (A) by pushing it back while lifting the front side of the seat cushion, and remove the seat cushion.

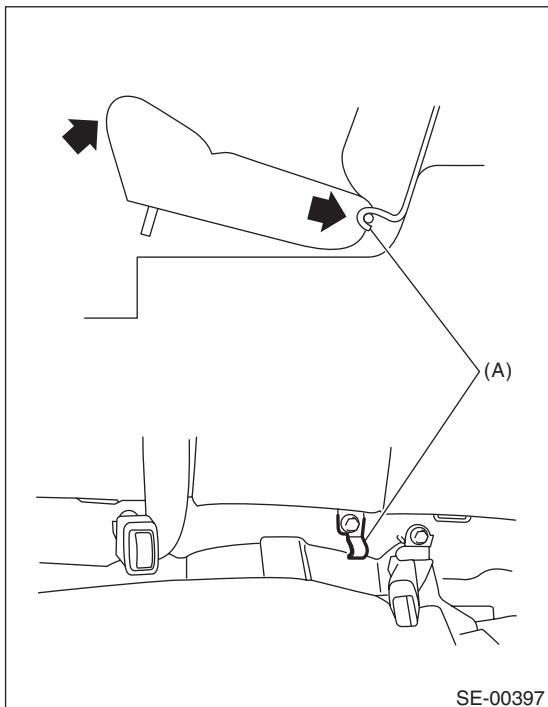


- 4) Remove bolt in the center of the backrest.

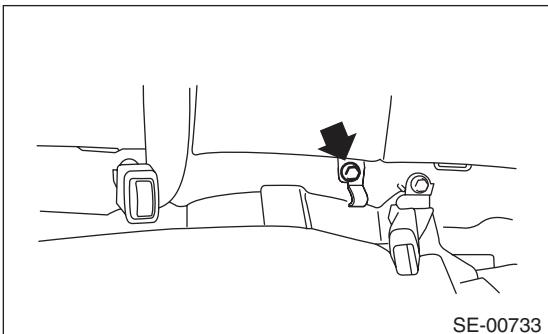


- 5) Remove the headrest, and then tilt the backrest forward.
- 6) Remove the luggage floor box. <Ref. to EI-70, REMOVAL, Luggage Floor Box.>

- 7) Peel the rear face mat and remove the hinge assembly center bolts.

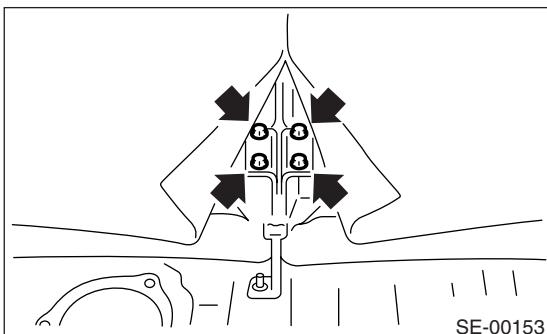

- 8) Remove the backrest assembly LH from hinge assembly LH.

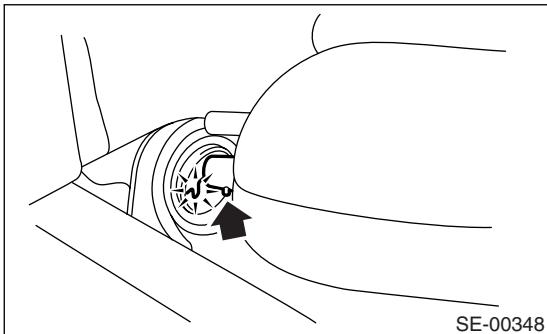


NOTE:


The backrest cannot be detached while the hinge assembly side and the backrest pin are not aligned.

- 9) Similarly, remove the backrest assembly RH by performing the above step 8).


- 10) Remove the lower anchor bolt (A) of the outer seat belt and backrest shoulder bolt (B).

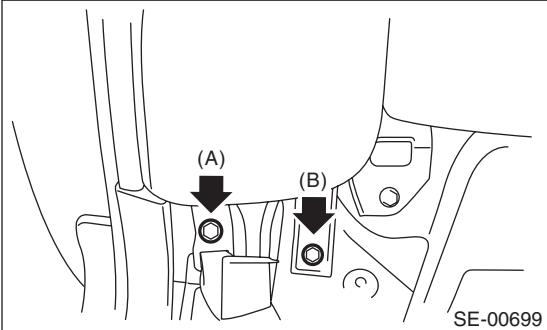


- 11) Remove the backrest shoulder with lifting it up.

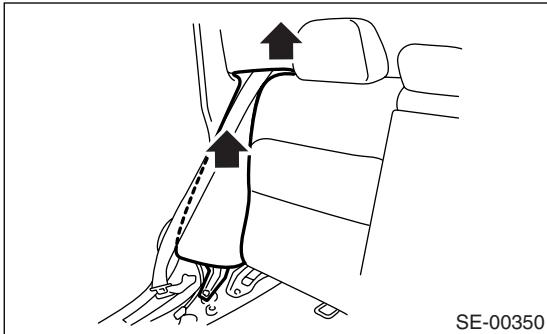


12) Remove the belt cover (A) from the backrest shoulder, then pull the seat belt out.

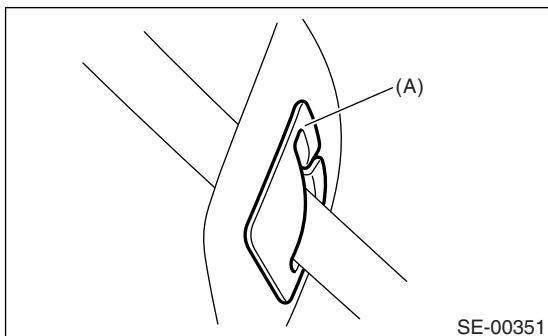

5) Remove tree clips and peel the back cover.

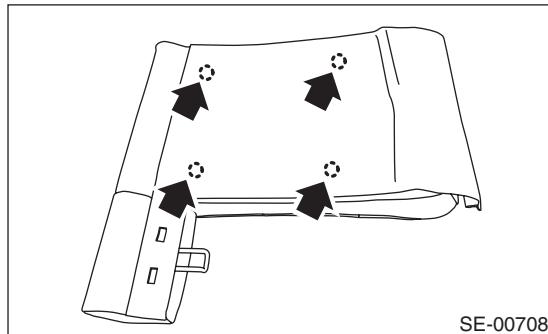

6) Turn over the backrest cover to remove hog rings (A) and hooks (B).

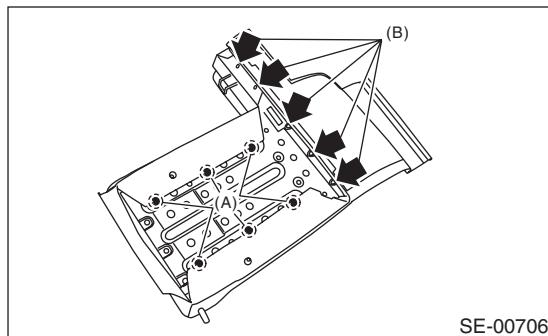

7) Remove the headrest bushing.


8) Remove the button cover.

CAUTION:

The front and side faces of button cover have claws. Forceful removal can cause damage.

9) Remove the plate of shoulder section (A).


10) Remove the hog rings (B) on the front side of backrest, and then remove the backrest cover.

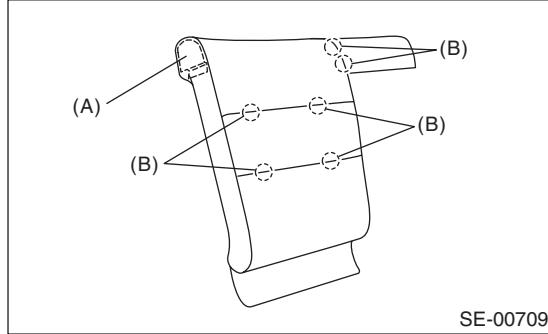


C: DISASSEMBLY

1. SEDAN MODEL

1) Remove the rear seat. <Ref. to SE-17, SEDAN MODEL, REMOVAL, Rear Seat.>
 2) Remove the headrest.
 3) Remove the hinge assembly center bolts.

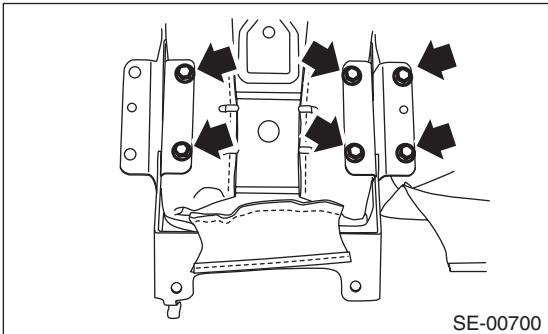

4) Remove the screws and detach the cover.

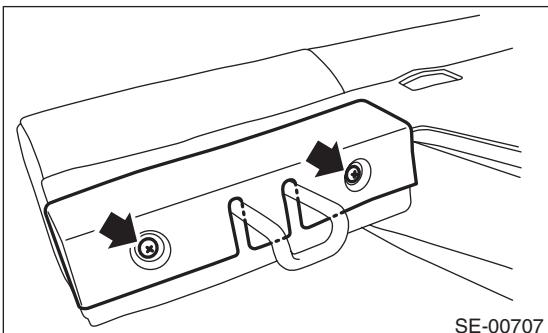


11) Remove the seat frame assembly from the backrest pad.

12) Disassemble the backrest assembly LH by referring to above procedures.

Rear Seat


SEATS

13) Remove the armrest hinge covers on both sides in direction of black arrow, and loosen the screws to remove the armrests.

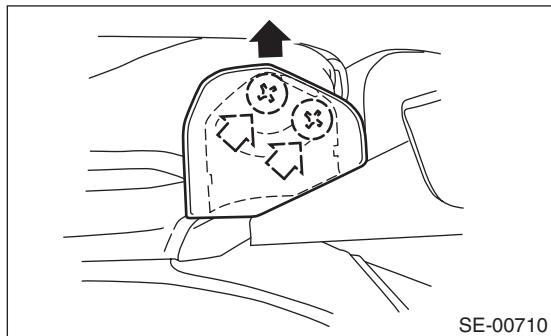


14) Remove the hinge assembly center from trunk through backboard.


15) Remove the hook, and then detach the center through cover.

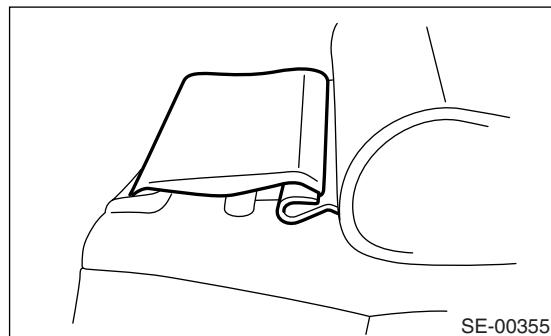


16) Remove the hook, and then remove the armrest cover.

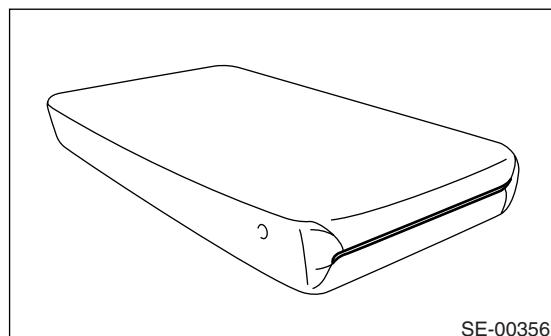


17) Remove the hook and hog ring, and then remove the headrest cover.

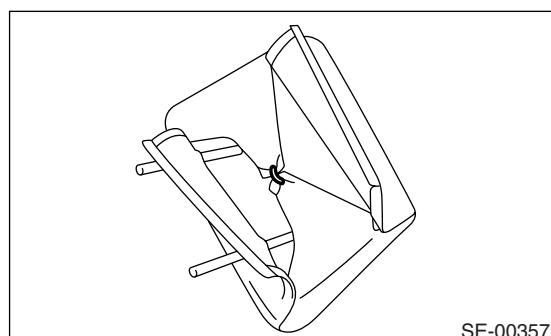

18) Remove the hog rings (A) on the rear side of the seat cushion.

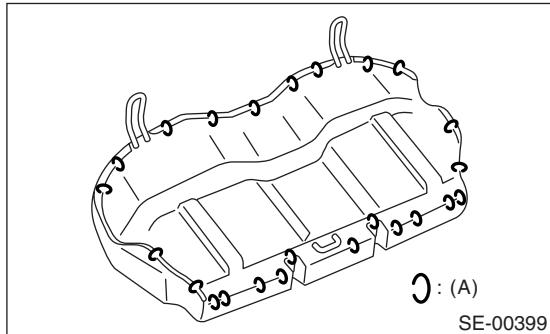


19) Remove the hog rings (A), then remove the seat cushion cover.

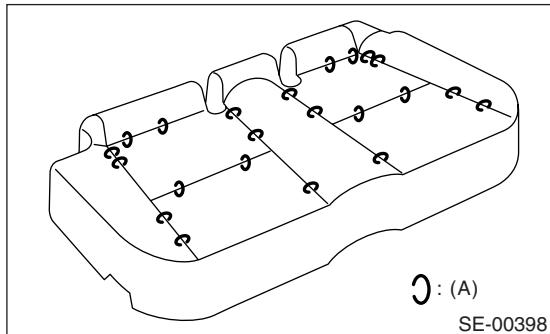

2. WAGON MODEL


1) Remove the rear seat. <Ref. to SE-18, WAGON MODEL, REMOVAL, Rear Seat. >

2) Remove the hooks at the bottom of backrest assembly LH, and then turn over the backrest cover to remove the hog rings (A) and hooks (B).

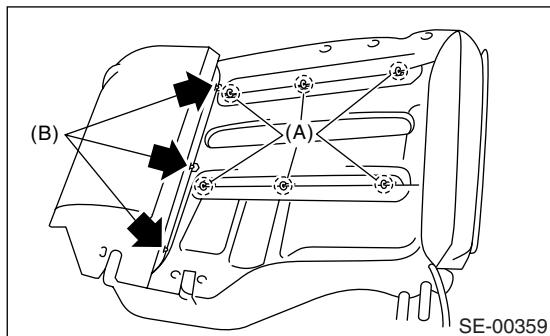


3) Remove the headrest bushing.


4) Remove the hog rings (A) on the front side of backrest, and then remove the backrest cover.

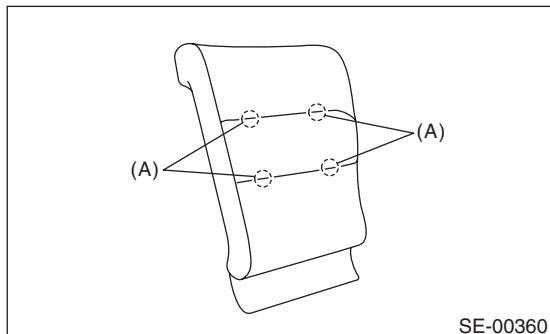

5) Remove the bolts, and then remove the backrest latch.

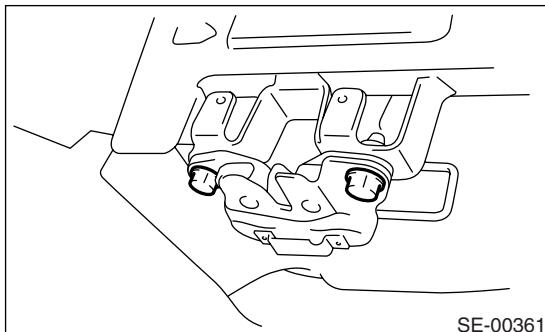

6) Loosen the screws to remove the armrest from backrest assembly RH.

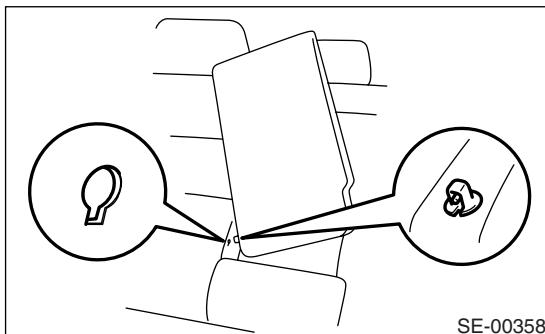


NOTE:


The armrests cannot be detached while the backrest assembly RH and armrest side pin positions are not aligned.

7) Disassemble the backrest assembly RH by referring to above procedures.


8) Remove the hook, and then remove the armrest cover.

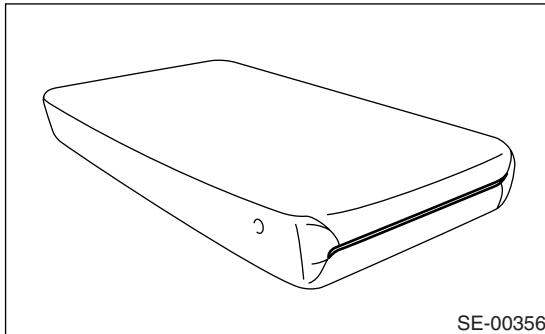


9) Remove the hook and hog ring, and then remove the headrest cover.

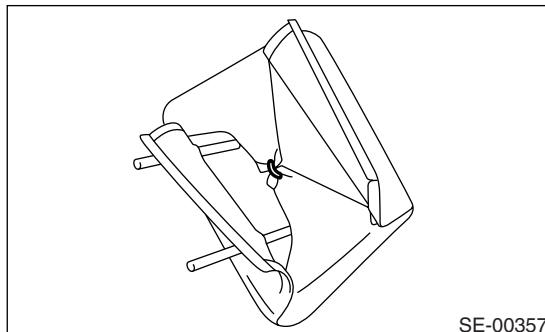

10) Remove the hog rings (A) on the rear side of the seat cushion.

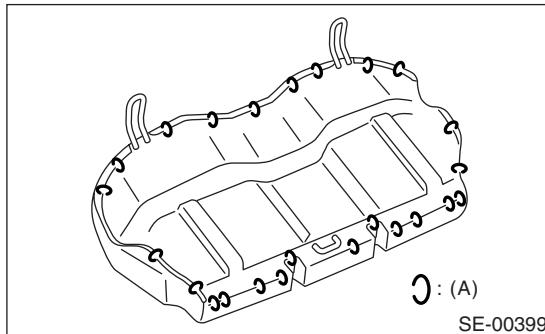

11) Remove the hog rings (A), then remove the seat cushion cover.

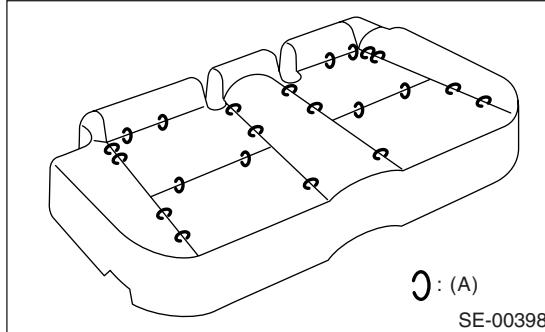

D: ASSEMBLY

Assemble in the reverse order of disassembly.

CAUTION:

- Always use new hog rings.
- Secure the hog ring using hog ring pliers.
- Install the hog rings to the specified points securely and make sure that no wrinkle or twisting on backrest cover.

NOTE:

- Do not contaminate or damage the cover.
- While installing the hog rings, prevent the seat from getting wrinkled.

E: INSPECTION

Check that no tear or fray on the seat cover.