


## 12. Rear Door Lock Actuator

### A: REMOVAL

- 1) Remove the rear door latch and door lock actuator assembly. <Ref. to SL-38, REMOVAL, Rear Door Latch and Door Lock Actuator Assembly.>
- 2) Remove the claw of rear door latch security cover, and then remove the cover.
- 3) Remove the screw from the rear door latch and door lock actuator, and then remove the door lock actuator.

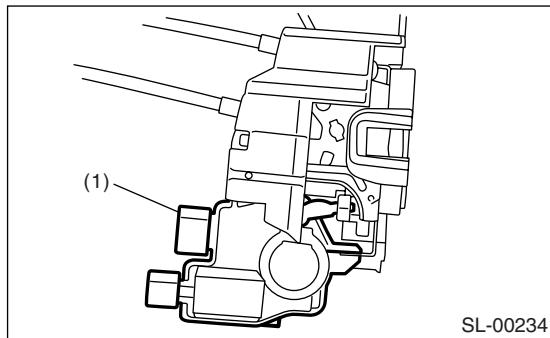

(1) Rear door lock actuator

### B: INSTALLATION

Install in the reverse order of removal.


#### NOTE:

Make sure the lock works correctly after installation.

### C: INSPECTION

- 1) Disconnect the door lock actuator harness connector.
- 2) Connect the battery to door lock actuator terminals.

If defective, replace the door lock actuator.

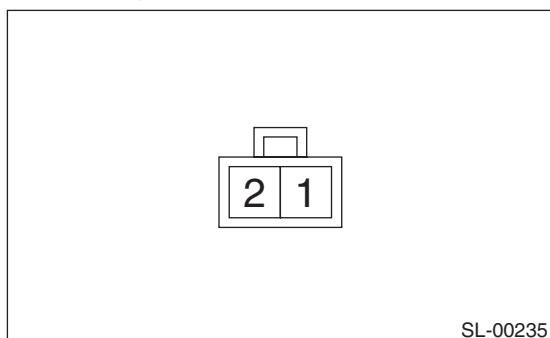

| Terminal No.            | Actuator operation |
|-------------------------|--------------------|
| No. 2 (+) and No. 1 (-) | Unlock → Lock      |
| No. 1 (+) and No. 2 (-) | Lock → Unlock      |