

## 24. Keyless Buzzer

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Remove the front bumper. <Ref. to EI-30, REMOVAL, Front Bumper.>
- 3) Remove the keyless buzzer installed to the back side of the horn bracket.

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

Install the keyless buzzer to another vehicle which operates keyless buzzer normally, check the buzzer sounds. If NG, replace the keyless buzzer.