


7. Sunshade


A: REMOVAL

1. SEDAN MODEL

- 1) Remove the glass lid. <Ref. to SR-6, SEDAN MODEL, REMOVAL, Glass Lid.>
- 2) Loosen the TORX® bolt to remove the front sunshade bracket.

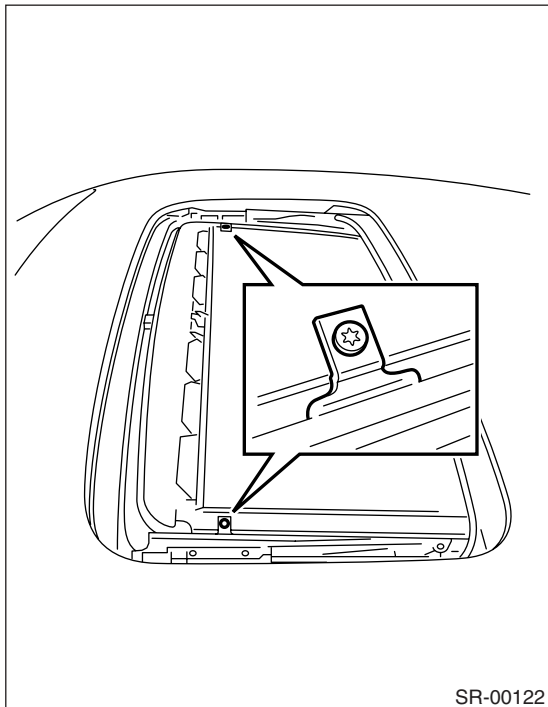


- 3) Pull the sunshade until the rear sunshade bracket comes into the sight, then loosen the TORX® bolts to remove the sunshade.

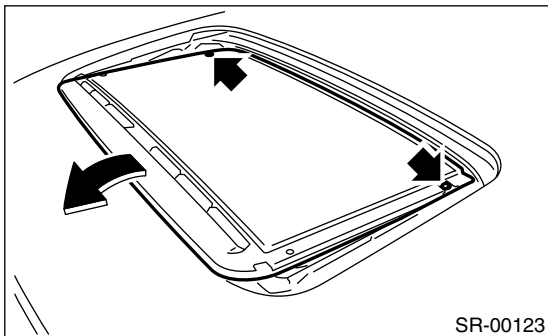


2. WAGON MODEL

- 1) Remove the frame assembly.
- 2) Remove the shade stopper (A) of the sunshade.

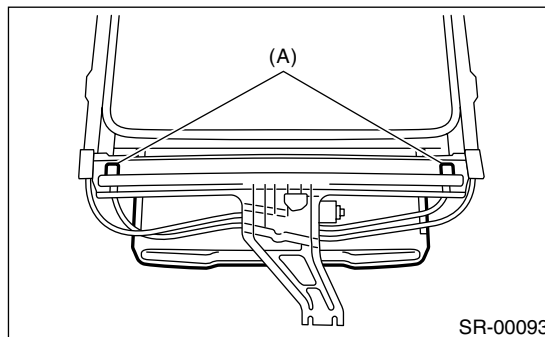

- 3) Pull out the sunshade (A) from the sunroof frame.

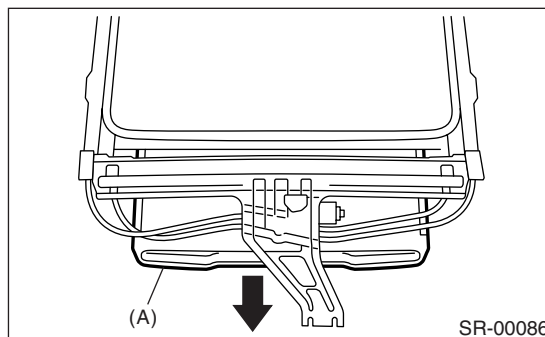


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

1) Attach a spring scale to sunshade edge using a cloth.

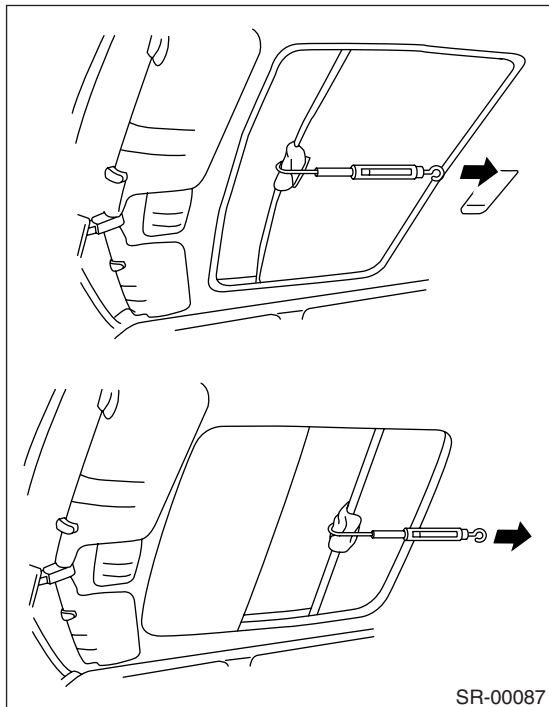

2) Pull the spring scale to measure moving load of the sunshade.

Moving load of sunshade:

Standard

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	24
3. Front Hood Grille	25
4. Front Under Cover	26
5. Floor Under Protector	27
6. Fuel Tank Protector	28
7. Mud Guard	29
8. Front Bumper	30
9. Rear Bumper	37
10. Cowl Panel	39
11. Roof Spoiler	40
12. Side Sill Spoiler	41
13. Side Protector	42
14. Side Garnish	44
15. Rear Quarter Protector	45
16. Roof Rail	46
17. Door Trim	47
18. Instrument Panel Lower Cover	49
19. Glove Box	50
20. Console Box	51
21. Center Console	52
22. Instrument Panel Assembly	54
23. Lower Inner Trim	58
24. Upper Inner Trim	59
25. Rear Quarter Trim	60
26. Sun Visor	62
27. Assist Grip	63
28. Roof Trim	64
29. Rear Gate Trim	65
30. Rear Shelf Trim	66
31. Trunk Room Trim	67
32. Floor Mat	69
33. Luggage Floor Box	70
34. Trunk Lid Garnish	71
35. Rear Gate Garnish	72
36. Heat Shield Cover	73
37. Ornament	74