


51. Cruise Control System

A: WIRING DIAGRAM

1. 2.5 L NON-TURBO MODEL

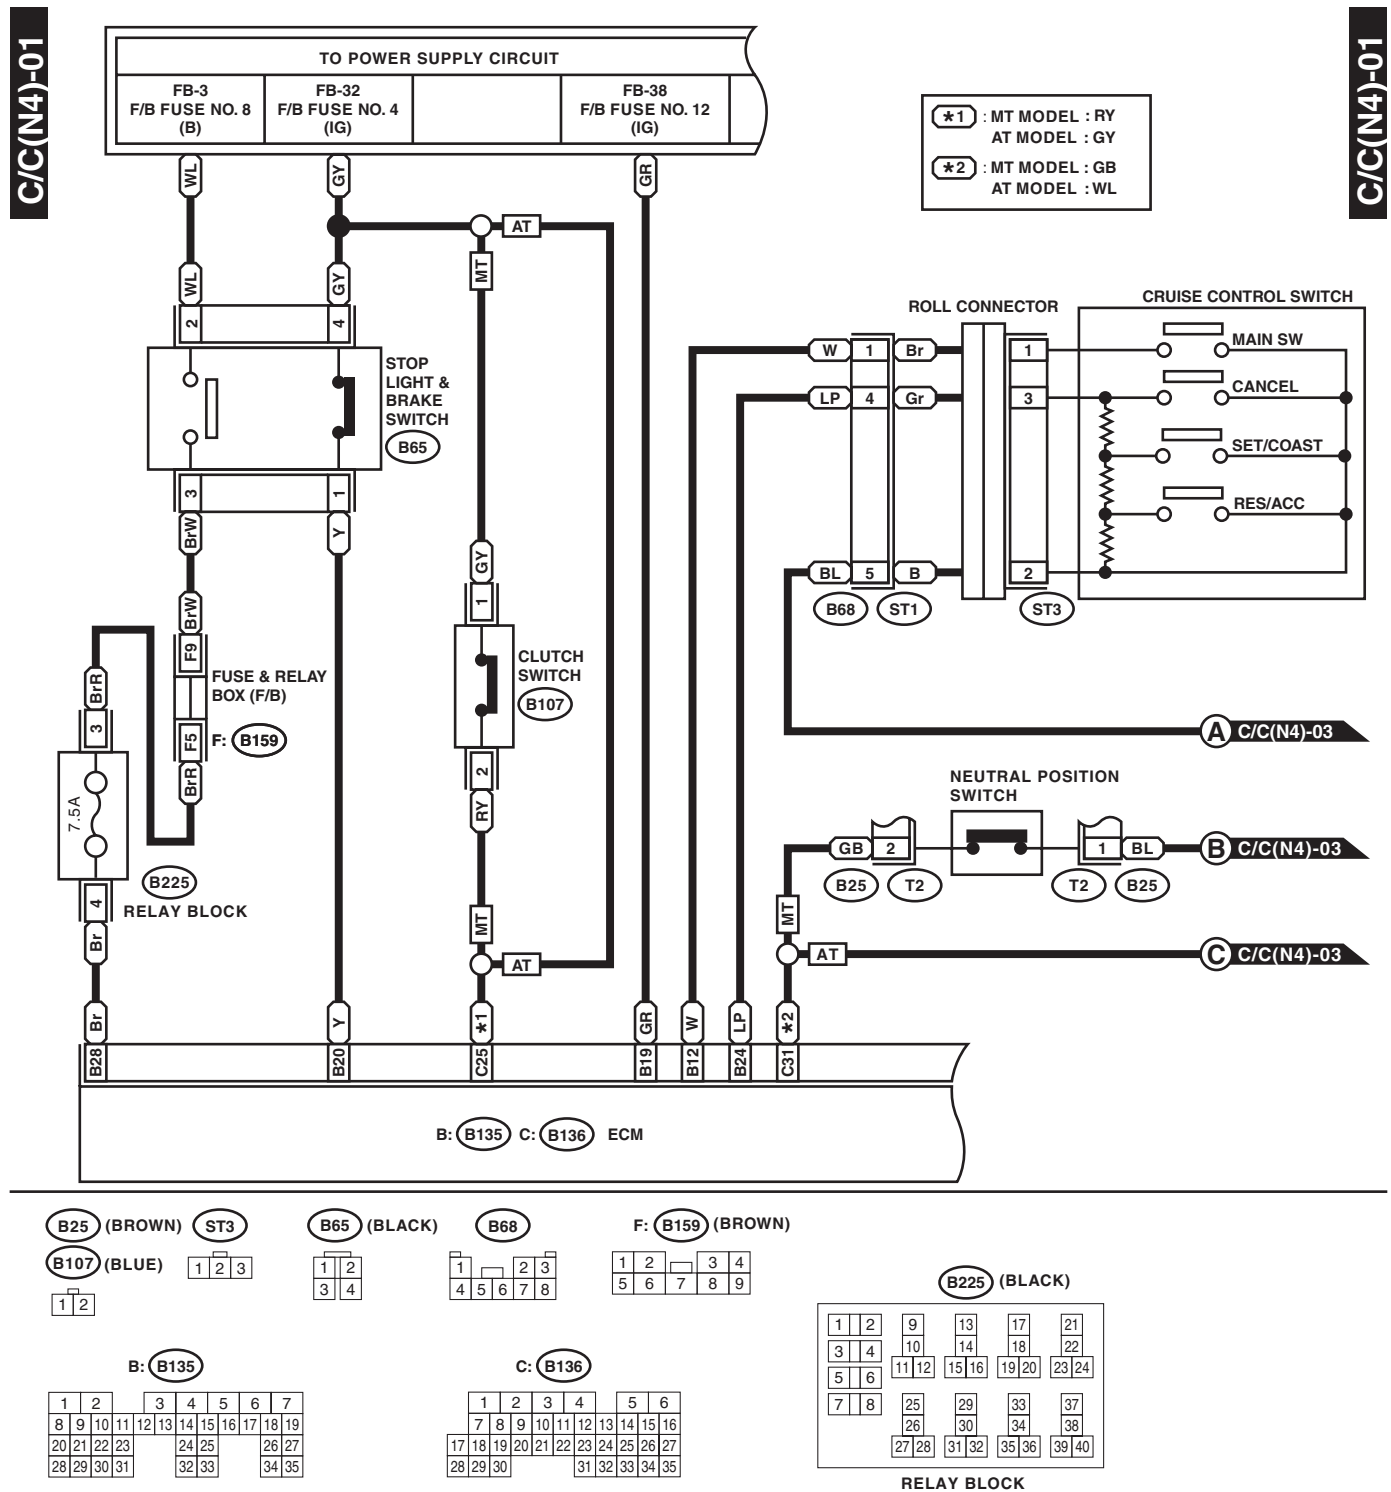


WI-13292

Cruise Control System

WIRING SYSTEM

C/C(N4)-02

C/C(N4)-02

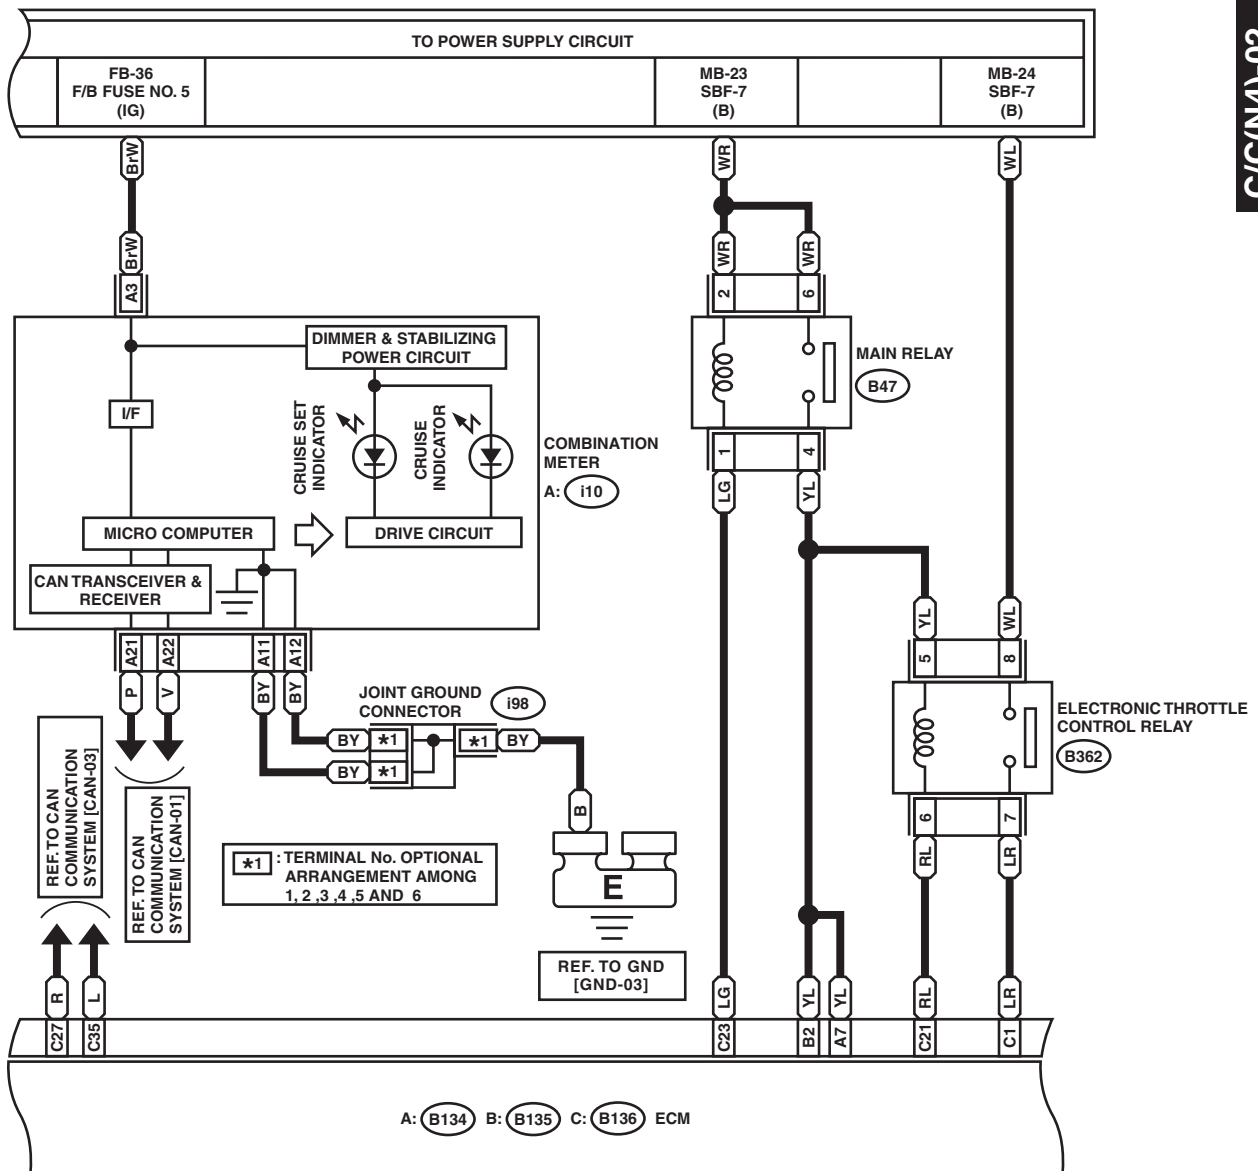

(B47) (BROWN)

1	2
3	4
5	6

(B362) (BLACK)

1	2	3
4	5	6
7	8	9

RELAY HOLDER

(I98)

1	2	3	4	5	6
7	8	9	10	11	12

A: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22	23	24	25	26	27	28	29	30

A: B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35


B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35

C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	36


WI-13293

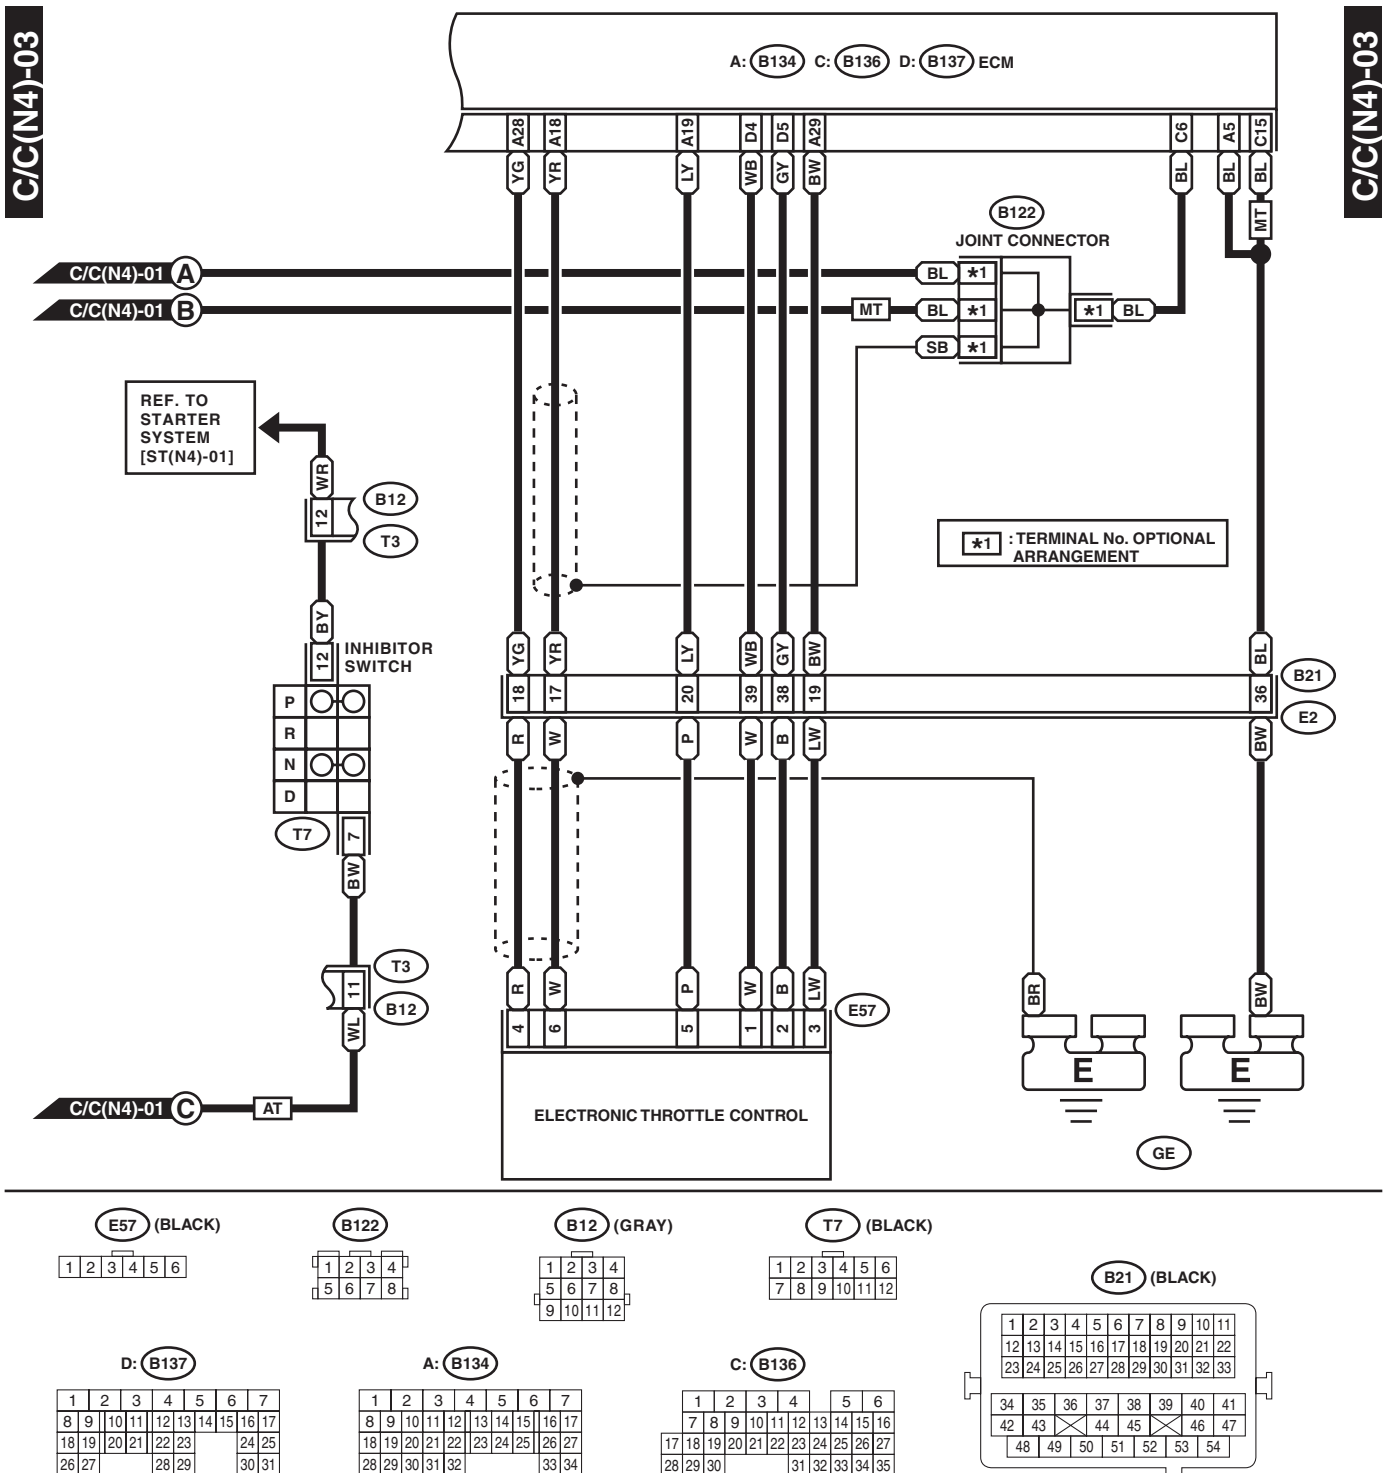

Cruise Control System

WIRING SYSTEM

2. 2.5L TURBO MODEL AND 3.0 L MODEL

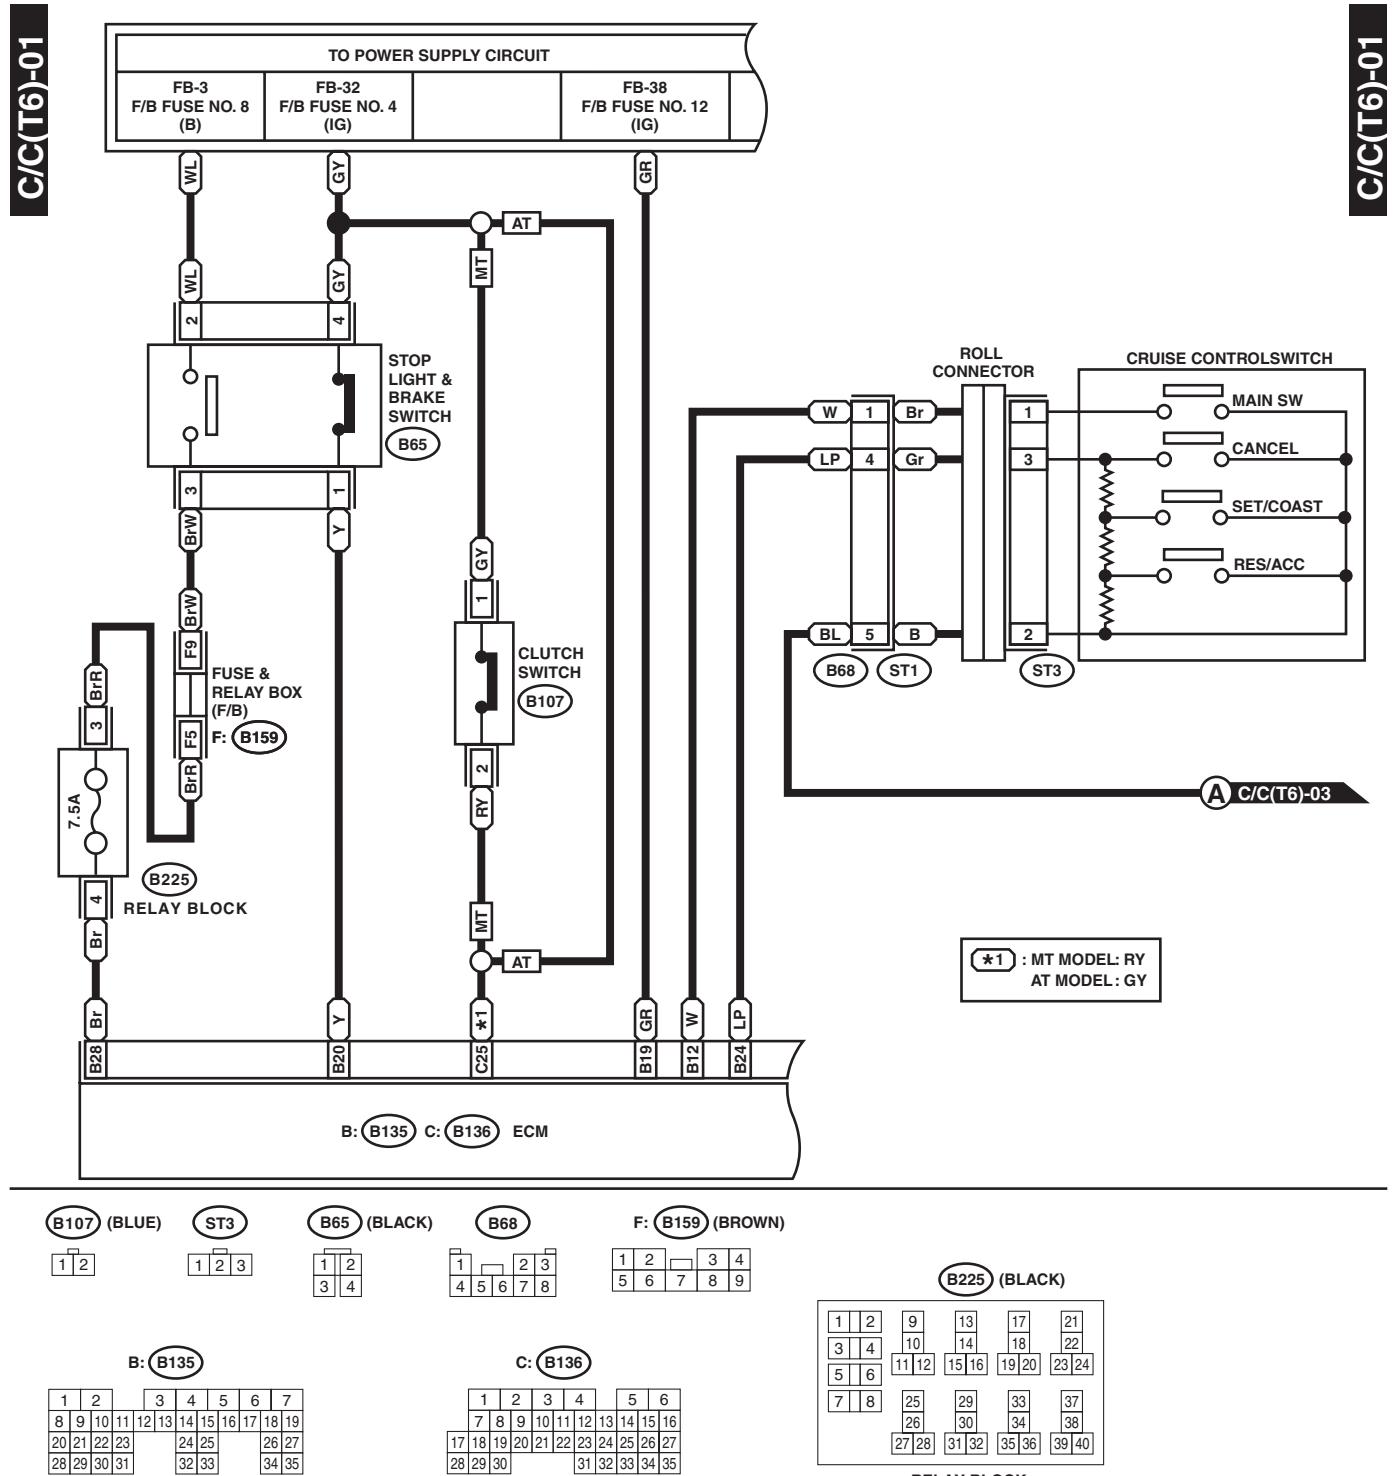


WI-13295

Cruise Control System

WIRING SYSTEM

C/C(T6)-02

C/C(T6)-02

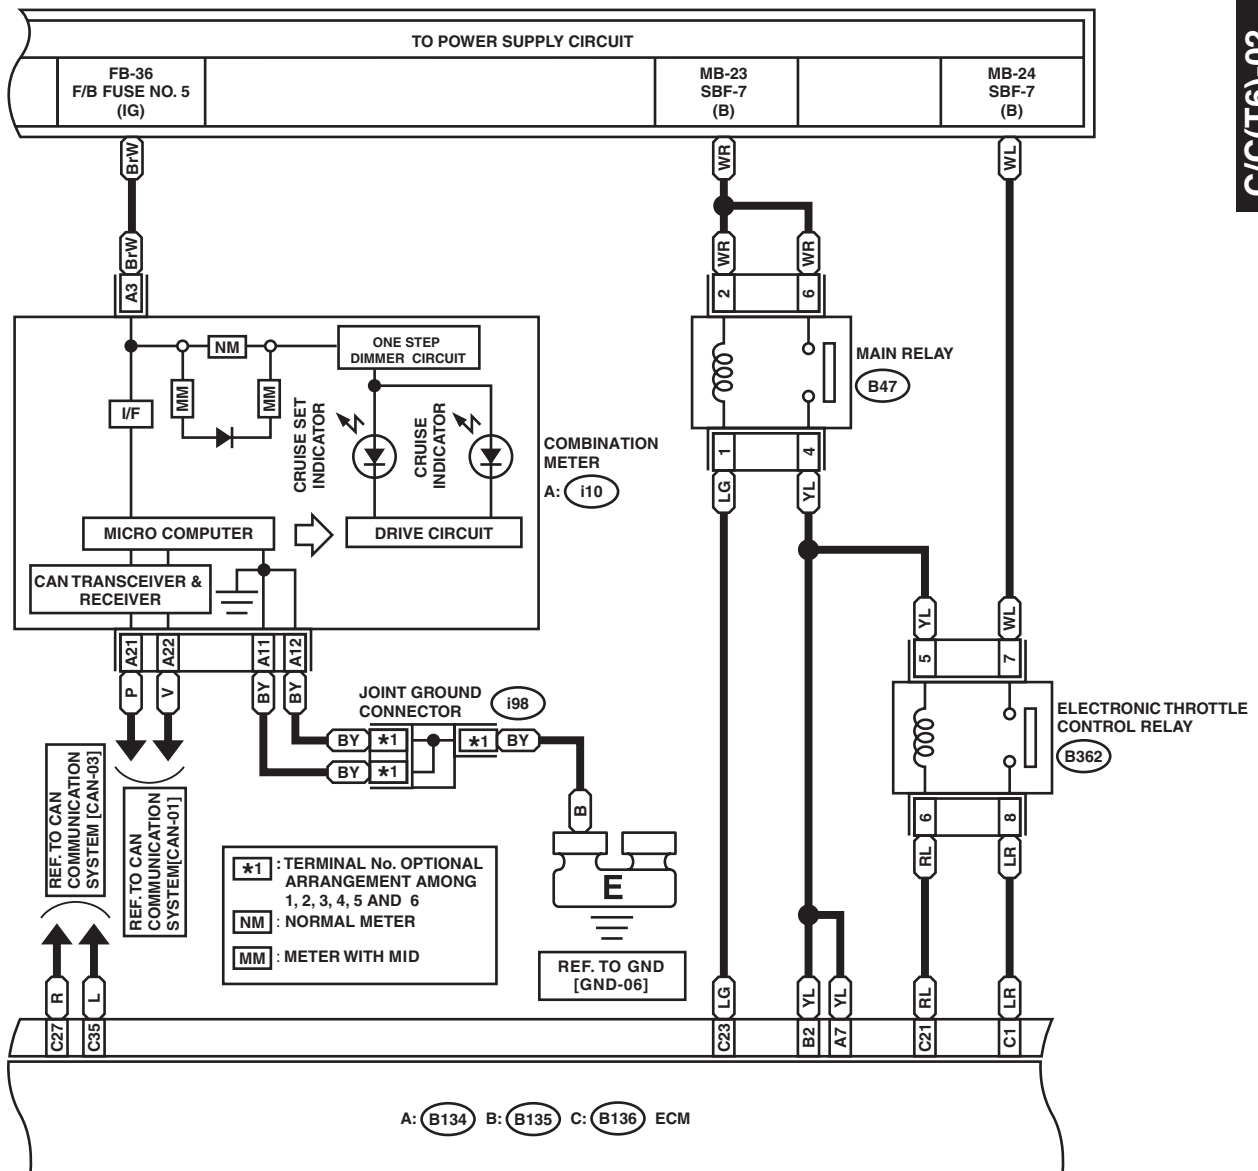

B47 (BROWN)

1	2
3	4
5	6

B362 (BLACK)

1	2	3	4
5	6	7	8

RELAY HOLDER

I98

1	2	3	4	5	6
7	8	9	10	11	12

A: i10 (GREEN)

1	2	3	4	5	6	7	8	9	10
11	12	13	14	15	16	17	18	19	20
21	22								

A: B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

B: B135

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35


C: B136

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32	33	34	35	

WI-13296

Cruise Control System

WIRING SYSTEM

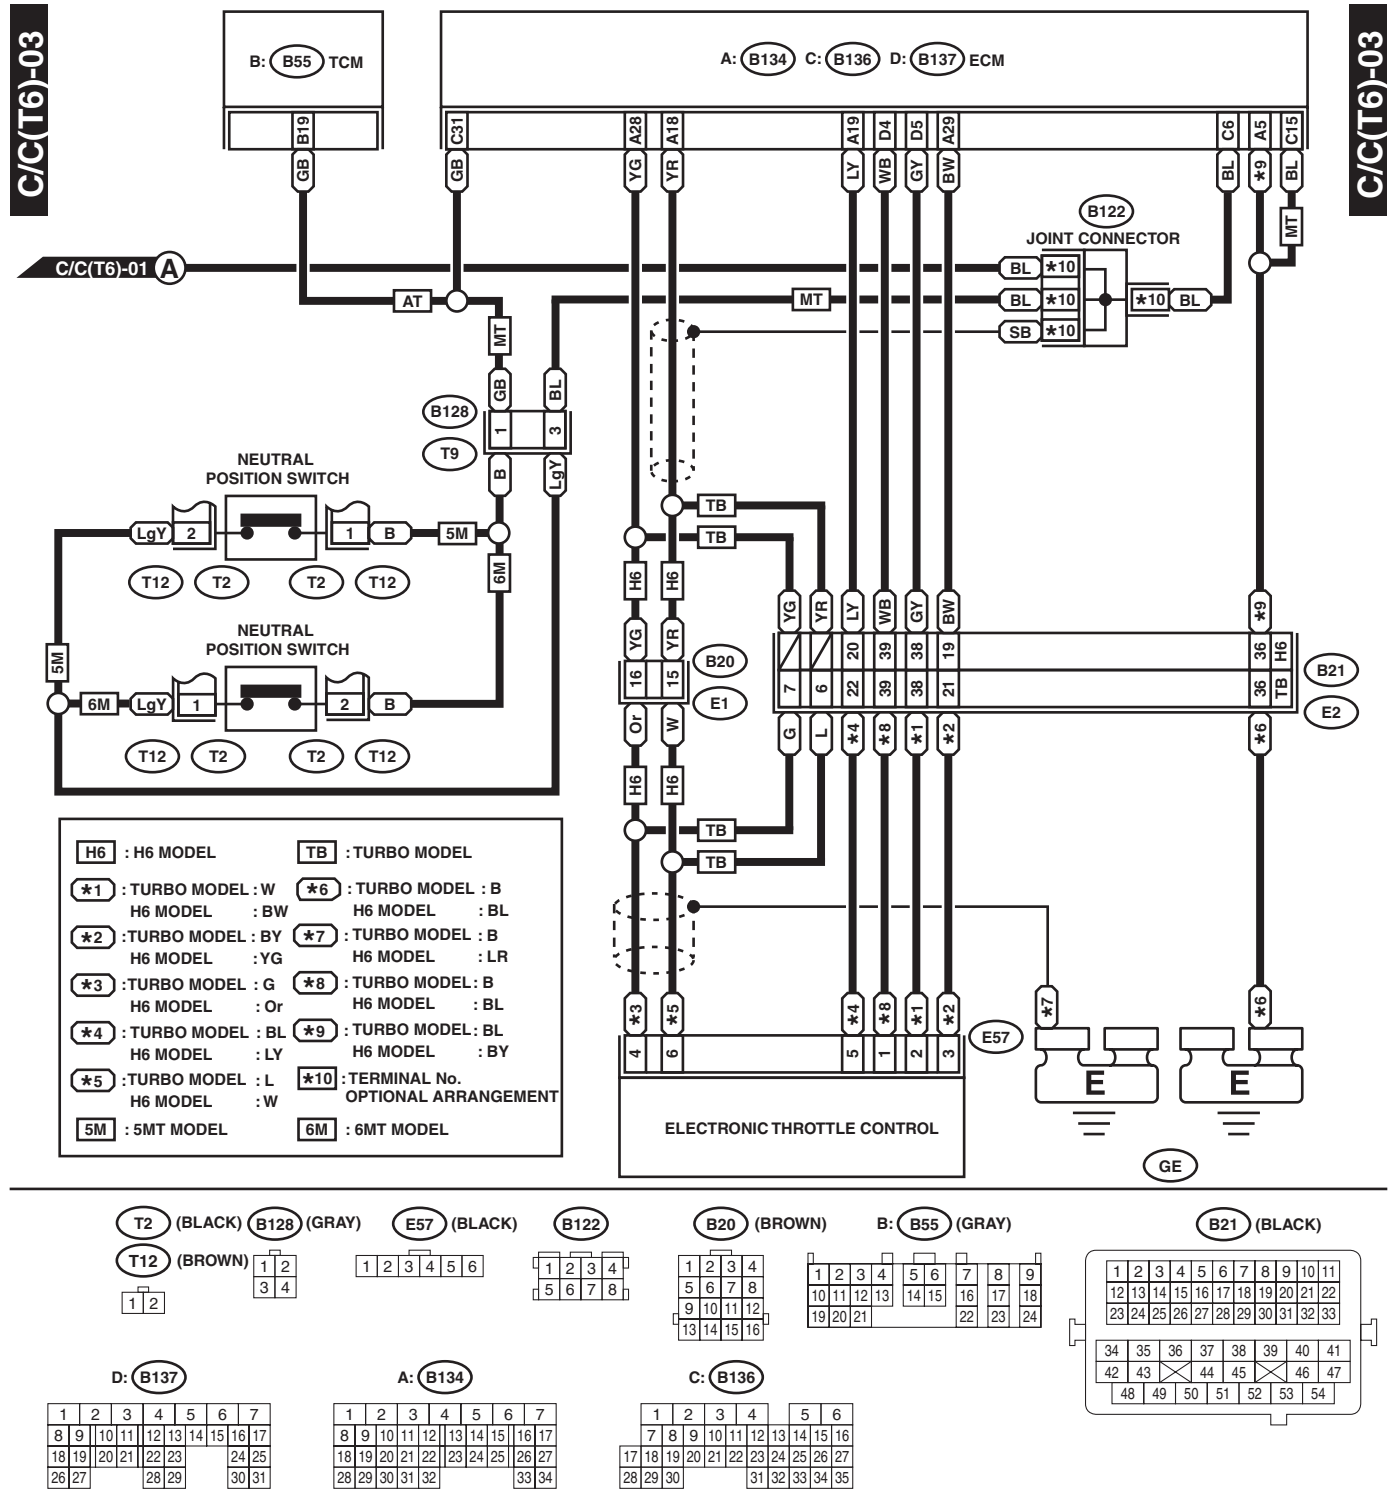

WI-13297