


Harness Components Location

WIRING SYSTEM

53.Harness Components Location

A: LOCATION


1. SEDAN MODEL

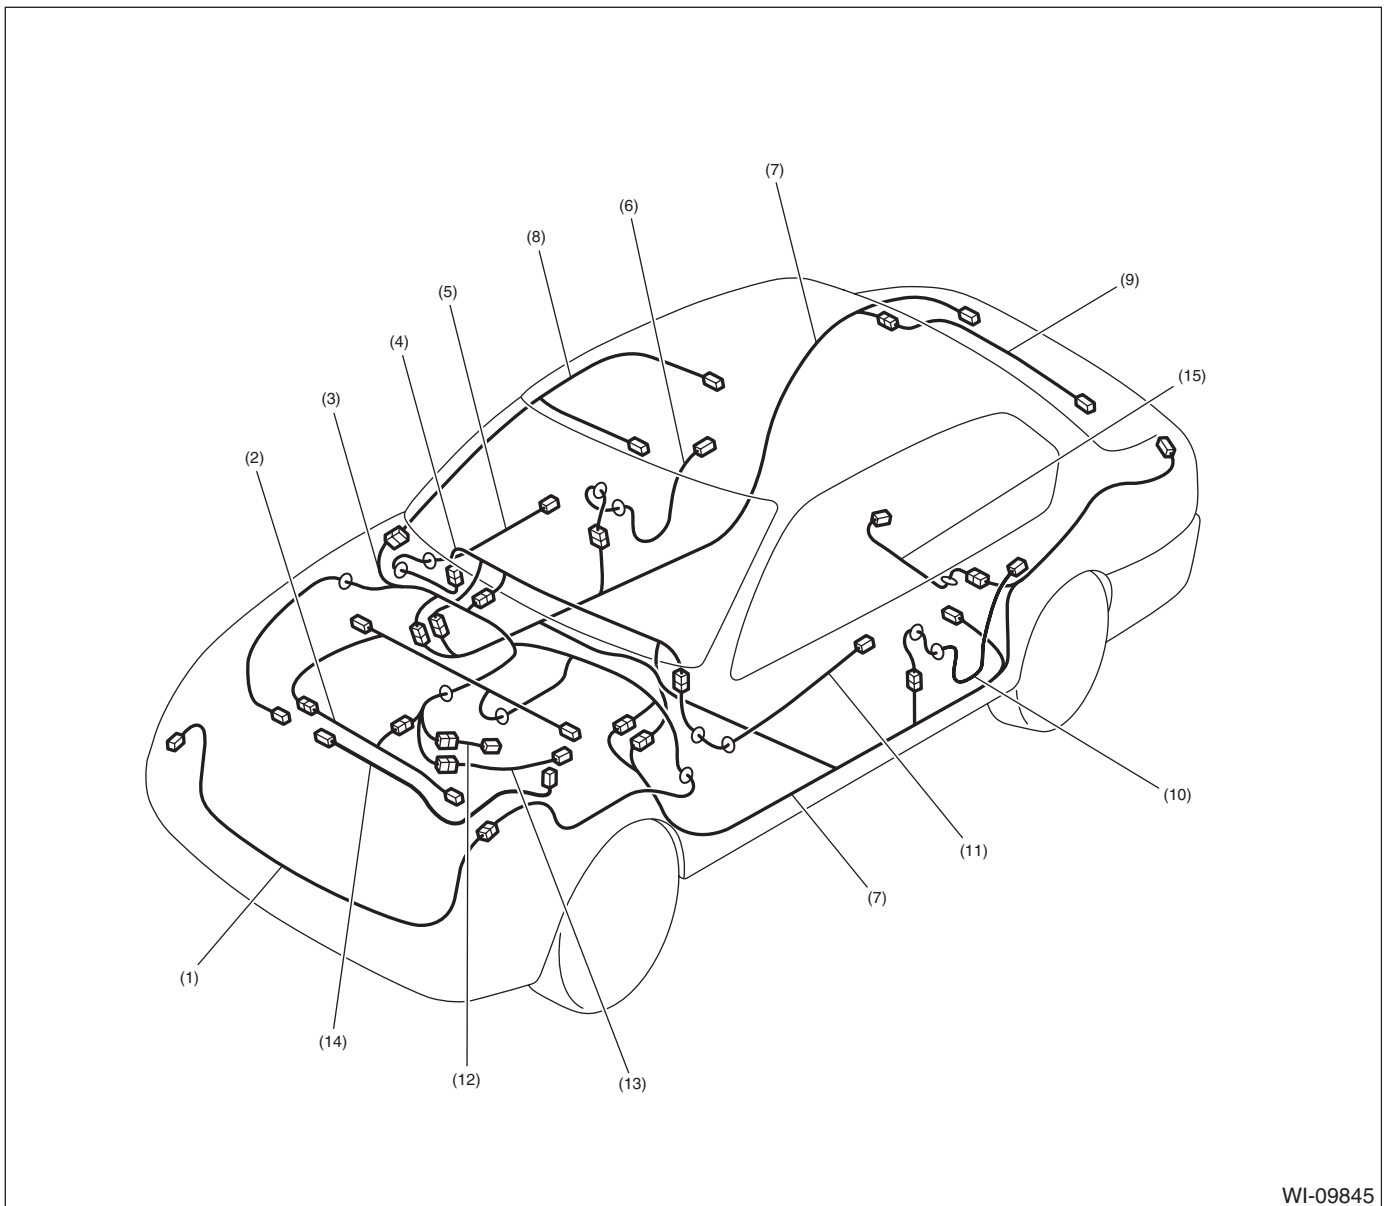

WI-09845

- | | | |
|-------------------------------------|-------------------------|------------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Front door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness | (12) Transmission cord |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Rear oxygen sensor cord |
| (4) Instrument panel wiring harness | (9) Trunk lid cord | (14) Generator cord |
| (5) Front door cord RH | (10) Rear door cord LH | (15) Fuel cord |

2. WAGON MODEL

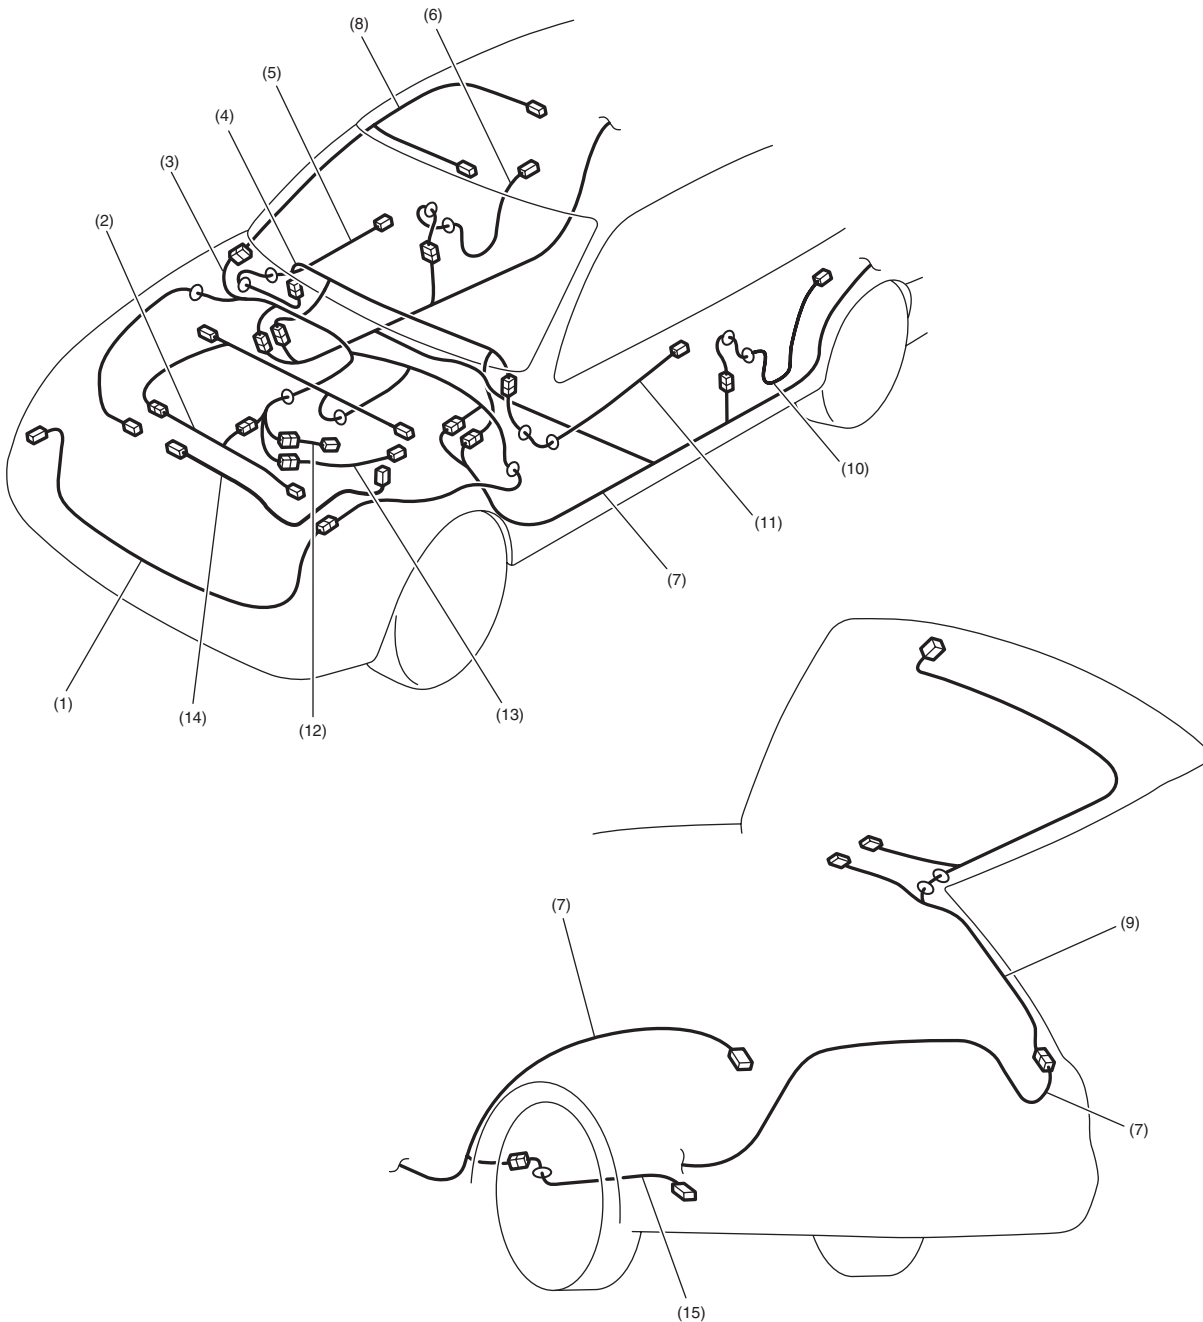

WI-09846

- | | | |
|-------------------------------------|-------------------------|------------------------------|
| (1) Front wiring harness | (6) Rear door cord RH | (11) Front door cord LH |
| (2) Engine wiring harness | (7) Rear wiring harness | (12) Transmission cord |
| (3) Bulkhead wiring harness | (8) Roof cord | (13) Rear oxygen sensor cord |
| (4) Instrument panel wiring harness | (9) Rear gate cord | (14) Generator cord |
| (5) Front door cord RH | (10) Rear door cord LH | (15) Fuel cord |