


## 35. Transmission Control Device

### A: REMOVAL


- 1) Remove the transmission assembly from the vehicle. <Ref. to 5AT-38, REMOVAL, Automatic Transmission Assembly.>
- 2) Pull out the torque converter assembly. <Ref. to 5AT-64, REMOVAL, Torque Converter Assembly.>
- 3) Lift up the lever on the rear side of transmission harness connector, and then disconnect it from the stay.
- 4) Wrap vinyl tape around the nipple attached to the air breather hose.
- 5) Remove the transmission hanger COMPL.
- 6) Remove the control valve body assembly. <Ref. to 5AT-56, REMOVAL, Control Valve Body.>
- 7) Pull out the straight pin of manual plate.

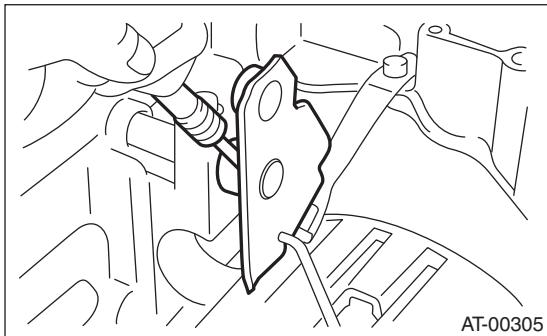

- 8) Remove the bolts securing range select lever, and then remove the select lever, manual plate and parking rod.


#### NOTE:

Be careful not to damage the lips of press-fitted oil seal in the case.

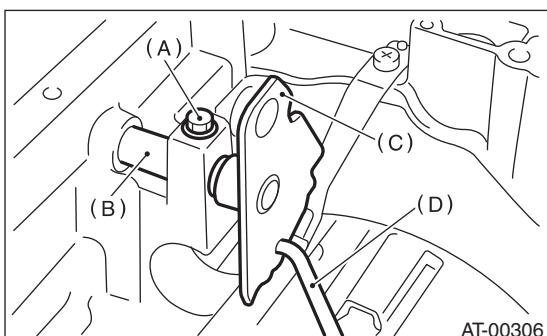

- (A) Bolt
- (B) Range select lever
- (C) Manual plate
- (D) Parking rod

- 9) Remove the detent spring.

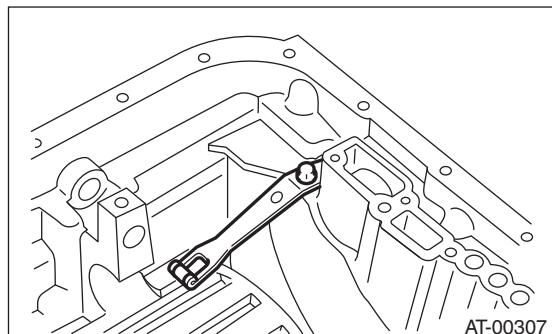


### B: INSTALLATION

- 1) Install the detent spring to the transmission case.

#### Tightening torque:


**7 N·m (0.7 kgf-m, 5.2 ft-lb)**

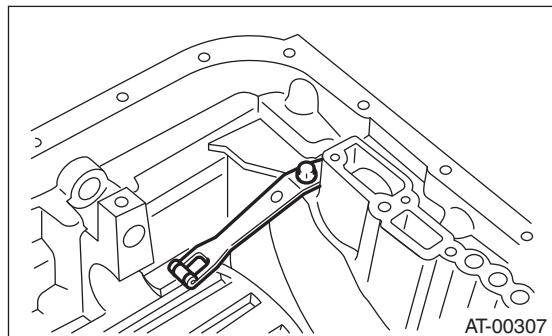

- 2) Insert the range select lever, and tighten the bolts.

#### Tightening torque:


**6 N·m (0.6 kgf-m, 4.4 ft-lb)**

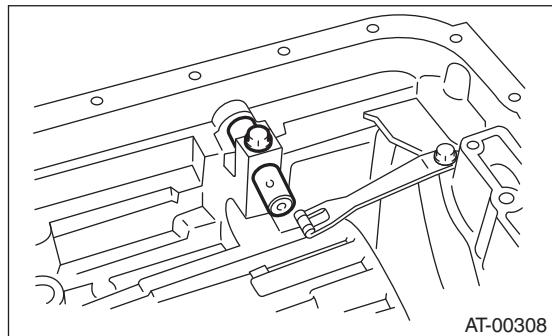


# Transmission Control Device

## AUTOMATIC TRANSMISSION

3) Insert the manual plate and parking rod.

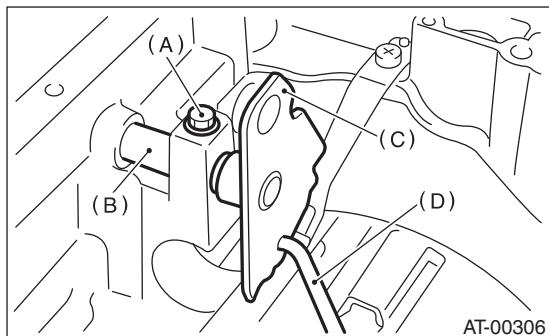

4) Insert the straight pin to the manual plate.

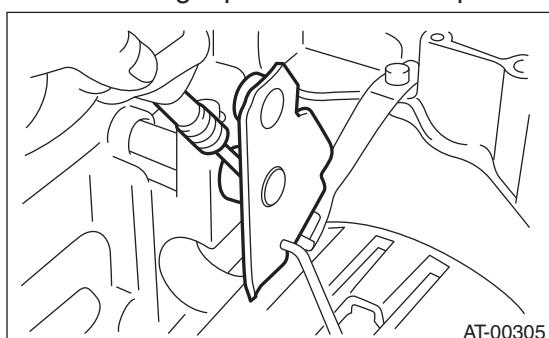

5) Install the oil pan and the control valve body assembly. <Ref. to 5AT-56, INSTALLATION, Control Valve Body.>

6) Install the transmission hanger COMPL.

### ***Tightening torque:***

**41 N·m (4.2 kgf·m, 30.2 ft-lb)**

7) Insert the transmission connector to the stay.  
8) Install the air breather hose. <Ref. to 5AT-62, INSTALLATION, Air Breather Hose.>  
9) Install the torque converter assembly. <Ref. to 5AT-64, INSTALLATION, Torque Converter Assembly.>  
10) Install the transmission assembly to the vehicle. <Ref. to 5AT-42, INSTALLATION, Automatic Transmission Assembly.>

## **C: INSPECTION**

Make sure the manual lever and detent spring are not worn or otherwise damaged.