

17. Front & Rear Differential Gear Oil

A: INSPECTION

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "Transmission Gear Oil" for replacement procedure. <Ref. to 6MT-24, INSPECTION, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (AT MODEL)

Refer to "5AT" section for inspection of AT model front differential gear oil. <Ref. to 5AT-31, INSPECTION, Differential Gear Oil.>

3. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for inspection of CVT model front differential gear oil. <Ref. to CVT-41, INSPECTION, Differential Gear Oil.>

4. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil inspection. <Ref. to DI-23, INSPECTION, Differential Gear Oil.>

B: REPLACEMENT

1. FRONT DIFFERENTIAL (MT MODEL)

Front differential gear oil of MT model lubricates the transmission and differential together. Refer to "6MT" section for replacement procedure. <Ref. to 6MT-24, REPLACEMENT, Transmission Gear Oil.>

2. FRONT DIFFERENTIAL (AT MODEL)

Refer to "5AT" section for front differential gear oil replacement. <Ref. to 5AT-31, REPLACEMENT, Differential Gear Oil.>

3. FRONT DIFFERENTIAL (CVT MODEL)

Refer to "CVT" section for front differential gear oil replacement. <Ref. to CVT-42, REPLACEMENT, Differential Gear Oil.>

4. REAR DIFFERENTIAL

Refer to "DI" section for rear differential gear oil replacement. <Ref. to DI-23, REPLACEMENT, Differential Gear Oil.>