

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. U.S.

- Other than U5 model

			Maintenance interval [Number of months or km (miles), whichever occurs first]															Remarks		
Months			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
x 1,000 km			4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
x 1,000 miles			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L		R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug									R									R	
4	Drive belt(s)				I				I					I		R				
5	Camshaft drive belt				I				I				I		R					
6	Fuel line				(I)				(I)					(I)					I	Note 1.
7	Air cleaner element				R				R				R					R	Note 2.	
8	Cooling system				I				I				I					I		
9	Engine coolant																			
10	Clutch system			I		I		I		I		I		I		I		I		
11	Transmission gear oil				I				I				I					I		
12	ATF				I				I				I					I		
13	CVTF				I				I				I					I		
14	Front & rear differential gear oil				I				I				I					I		
15	Brake line			I		I		I		I		I		I		I		I		
16	Brake fluid				R				R				R					R		
17	Disc brake pad and disc			I		I		I		I		I		I		I		I		
18	Parking brake			I		I		I		I		I		I		I		I		
19	Suspension			I		I		I		I		I		I		I		I		
20	Wheel bearing								(I)									(I)		
21	Axle boots and joints			I		I		I		I		I		I		I		I		
22	Tire rotation		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 3.	
23	Steering system (power steering)		I		I		I		I		I		I		I		I			
24	A/C filter																			

Symbols used:

R: Replace

I: Inspection

(R): Recommended service for maintaining the better vehicle performance

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

Schedule

PERIODIC MAINTENANCE SERVICES

- U5 model

			Maintenance interval [Number of months or km (miles), whichever occurs first]												Remarks	
	Months		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	To be continued to the next table.		
	x 1,000 km		4.8	12	24	36	48	60	72	81.4	96	108	120			
	x 1,000 miles		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75			
1	Engine oil	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R			
		2.5 L		R	R	R	R	R	R	R	R	R	R			
2	Engine oil filter	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R			
		2.5 L		R	R	R	R	R	R	R	R	R	R			
3	Spark plug										R					
4	Drive belt(s)						I				I					
5	Camshaft drive belt						I				I					
6	Fuel line						(I)				(I)				Note 1.	
7	Air cleaner element						R				R				Note 2.	
8	Cooling system						I				I					
9	Engine coolant						Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter									
10	Clutch system				I		I		I		I		I			
11	Transmission gear oil						I				I					
12	ATF					I				I						
13	CVTF					I				I						
14	Front & rear differential gear oil					I				I						
15	Brake line			I		I		I		I		I				
16	Brake fluid					R				R						
17	Disc brake pad and disc			I		I		I		I		I				
18	Parking brake			I		I		I		I		I				
19	Suspension			I		I		I		I		I				
20	Wheel bearing									(I)						
21	Axle boots and joints			I		I		I		I		I				
22	Tire rotation		I	I	I	I	I	I	I	I	I	I	I		Note 3.	
23	Steering system (power steering)		I		I		I		I		I		I			
24	A/C filter						Replace every 15 months or 24,000 km (15,000 miles).									

Symbols used:

R: Replace

I: Inspection

(R): Recommended service for maintaining the better vehicle performance

(I): Inspections recommended for vehicle safety

NOTE:

- This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
- When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
- A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

Schedule

PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]										
Months	Continued from previous table	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	Remarks
	× 1,000 km	132	144	156	168	180	192	204	216	228	240	
	× 1,000 miles	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
1	Engine oil	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	R	R	R	R	R	R	R	R	R	R	
3	Spark plug						R					
4	Drive belt(s)		I		R				I			
5	Camshaft drive belt		I		R				I			
6	Fuel line		(I)				I			(I)	Note 1.	
7	Air cleaner element		R				R				R	Note 2.
8	Cooling system		I				I				I	
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter										
10	Clutch system		I		I		I				I	
11	Transmission gear oil		I				I				I	
12	ATF		I				I				I	
13	CVTF		I				I				I	
14	Front & rear differential gear oil		I				I				I	
15	Brake line		I		I		I		I		I	
16	Brake fluid		R				R				R	
17	Disc brake pad and disc		I		I		I		I		I	
18	Parking brake		I		I		I		I		I	
19	Suspension		I		I		I		I		I	
20	Wheel bearing						(I)				(I)	
21	Axle boots and joints		I		I		I		I		I	
22	Tire rotation	I	I	I	I	I	I	I	I	I	I	Note 3.
23	Steering system (power steering)		I		I		I		I		I	
24	A/C filter	Replace every 15 months or 24,000 km (15,000 miles).										

Symbols used:

R: Replace

I: Inspection

(R): Recommended service for maintaining the better vehicle performance

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

Schedule

PERIODIC MAINTENANCE SERVICES

2. CANADA

			Maintenance interval [Number of months or km (miles), whichever occurs first]																	
Months			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	Remarks
x 1,000 km			4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192	
x 1,000 miles			3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	
1	Engine oil	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter	3.6 L	(R)	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		2.5 L	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug									R									R	
4	Drive belt(s)					I				I					I		R			
5	Camshaft drive belt				I				I					I		R				
6	Fuel line				(I)				(I)					(I)				I	Note 1.	
7	Air cleaner element					R				R				R				R	Note 2.	
8	Cooling system				I				I					I				I		
9	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter																	
10	Clutch system		I		I		I		I		I		I		I		I		I	
11	Transmission gear oil			I				I			I			I				I		
12	ATF				I				I				I			I		I		
13	CVTF				I				I				I			I		I		
14	Front & rear differential gear oil				I				I				I			I		I		
15	Brake line		I		I		I		I		I		I		I		I	I		
16	Brake fluid				R				R				R			R			R	
17	Disc brake pad and disc		I		I		I		I		I		I		I		I		I	
18	Parking brake		I		I		I		I		I		I		I		I		I	
19	Suspension		I		I		I		I		I		I		I		I		I	
20	Wheel bearing								(I)									(I)		
21	Axle boots and joints		I		I		I		I		I		I		I		I		I	
22	Tire rotation	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note 3.
23	Steering system (power steering)		I		I		I		I		I		I		I		I		I	
24	A/C filter		Replace every 15 months or 24,000 km (15,000 miles).																	

Symbols used:

R: Replace

I: Inspection

(R): Recommended service for maintaining the better vehicle performance

(I): Inspections recommended for vehicle safety

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it dose not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Transmission gear oil	15 months						R
	24,000 km						
	15,000 miles						
ATF	15 months						R
	24,000 km						
	15,000 miles						
CVTF	40,000 km						R
	24,855 miles						
Front and rear Differential Gear Oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Parking brake	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
A axle boots and joints	7.5 months	I	I	I	I		I
	12,000 km						
	7,500 miles						
Steering system (power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						