

Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


4. Canister

A: REMOVAL


- 1) Remove the rear wheel LH.
- 2) Lift up the vehicle.
- 3) Remove the rear mud guard LH. <Ref. to EI-38, REMOVAL, Mud Guard.>
- 4) Disconnect the quick connectors of the vent tube (A), canister drain tube (B) and charge tube (C), and remove the tubes from clips (D).

NOTE:


Disconnect the quick connector as shown in the figure.

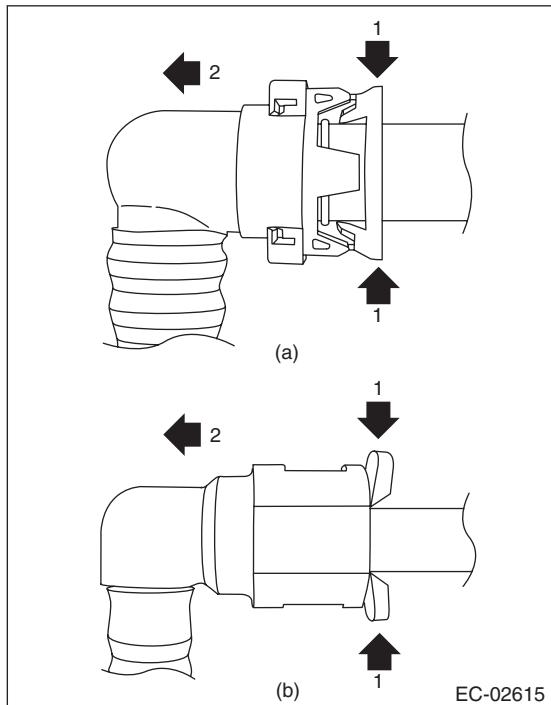


- (a) Vent tube (A) and canister drain tube (B)
- (b) Charge tube (C)

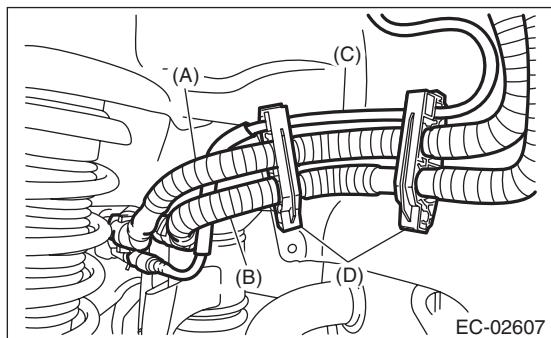


- 5) Remove the clip holding the rear wiring harness.

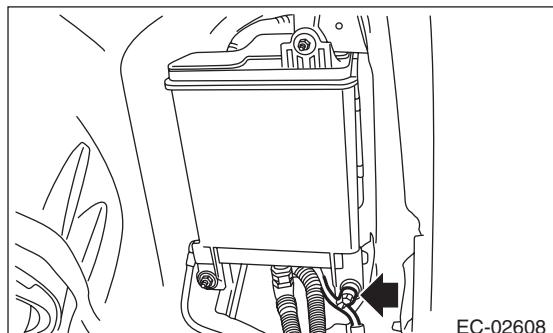

- 6) Remove the canister from vehicle.

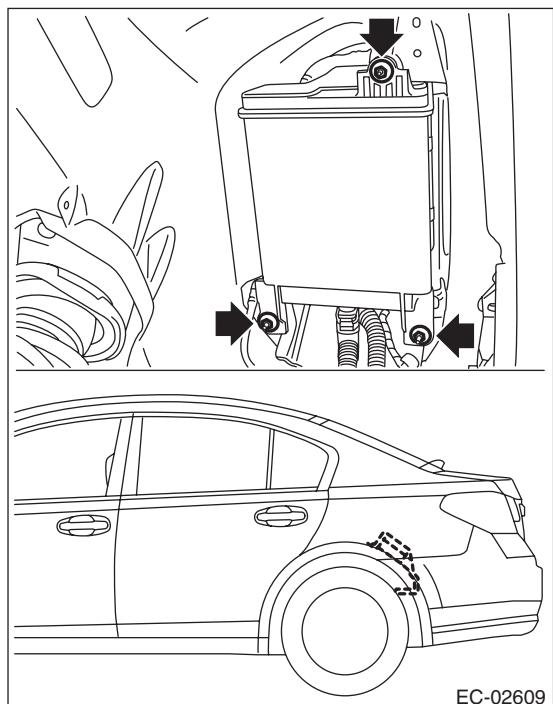

- 7) Disconnect the connector from drain valve.

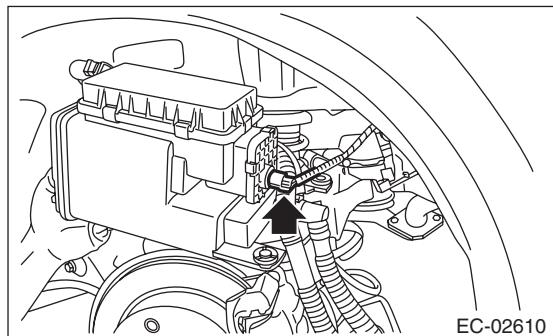


Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


8) Disconnect the vent tube (A), canister drain tube (B) and charge tube (C), and remove the canister drain tube (B) from clip (D).

NOTE:

Disconnect the quick connector as shown in the figure.

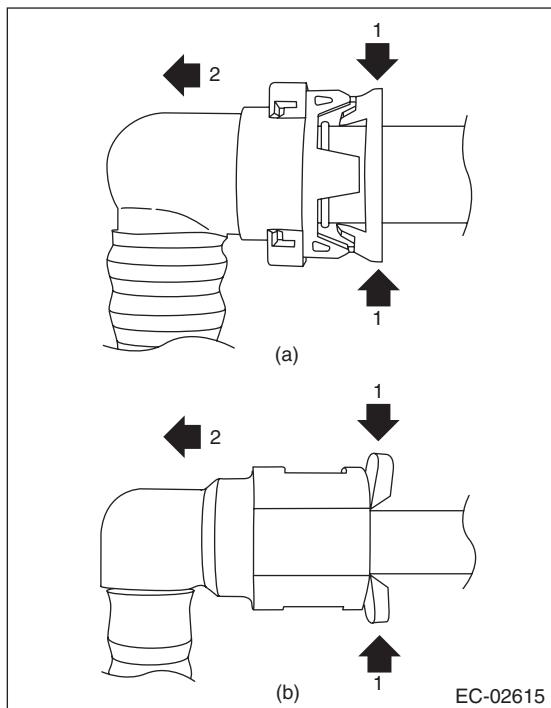

- (a) Vent tube (A) and canister drain tube (B)
- (b) Charge tube (C)

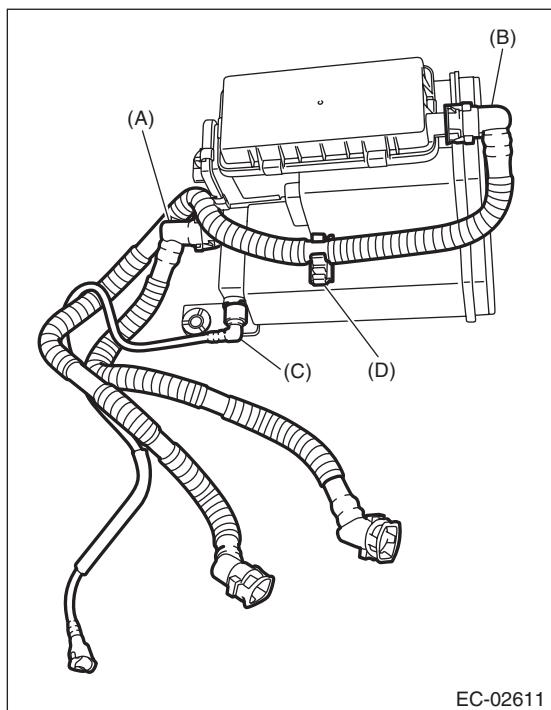

B: INSTALLATION


1) Install the vent tube (A), canister drain tube (B) and charge tube (C), and install the canister drain tube (B) to clip (D).

CAUTION:

- Make sure there are no damage or dust on connections. If necessary, clean the seal surface of the pipe.
- Make sure that the quick connector is securely connected.

NOTE:


Connect the quick connector as shown in the figure.

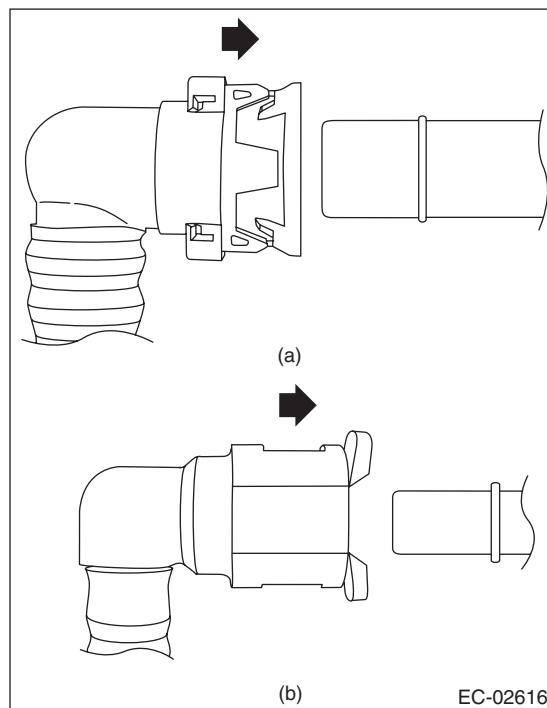

- (a) Vent tube (A) and canister drain tube (B)
- (b) Charge tube (C)

Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

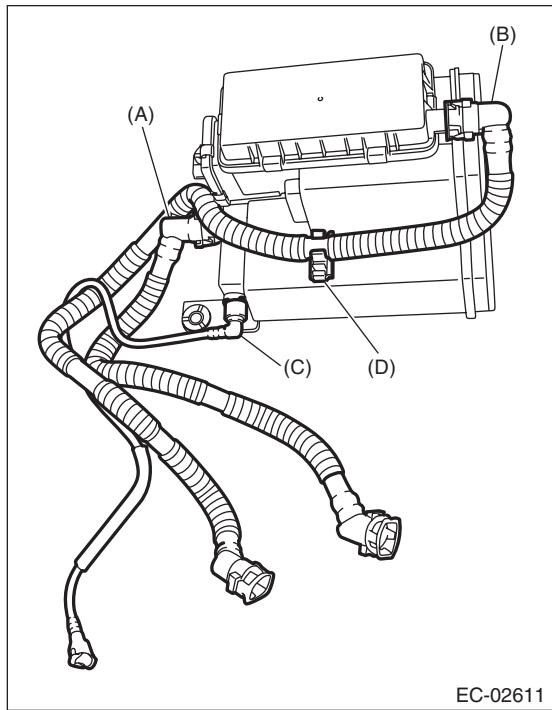


3) Install the canister to the vehicle.

Tightening torque:


8 N·m (0.8 kgf·m, 5.9 ft-lb)



2) Connect the connector to the drain valve.

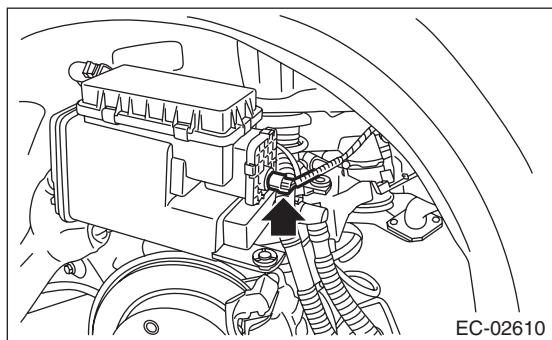

4) Secure the rear wiring harness with clip.

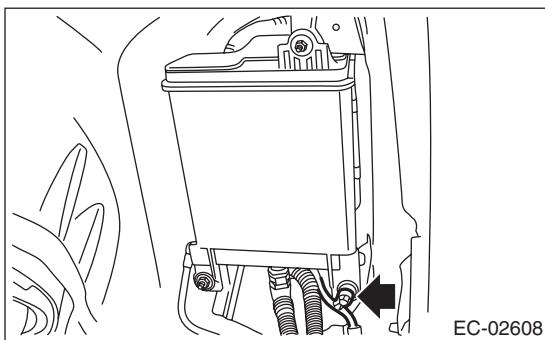

Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


5) Attach all tubes to clips (D), and connect the quick connectors of the vent tube (A), canister drain tube (B) and charge tube (C).

CAUTION:


- Make sure there are no damage or dust on connections. If necessary, clean the seal surface of the pipe.
- Make sure that the quick connector is securely connected.

NOTE:

Connect the quick connector as shown in the figure.

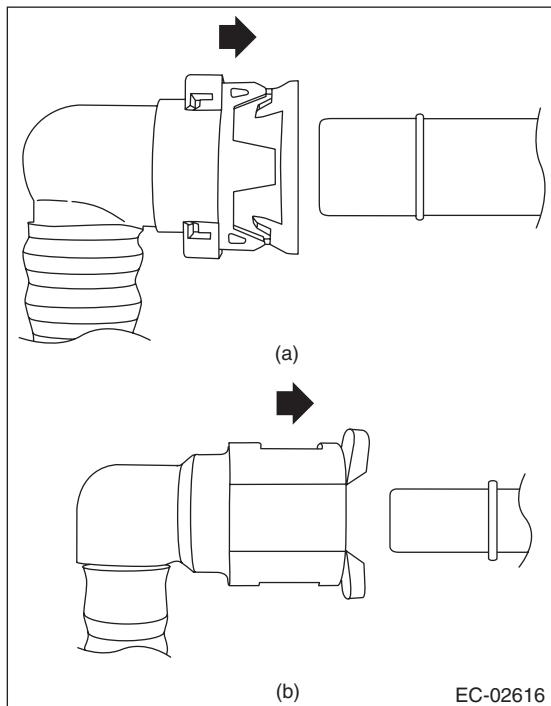

- (a) Vent tube (A) and canister drain tube (B)
- (b) Charge tube (C)

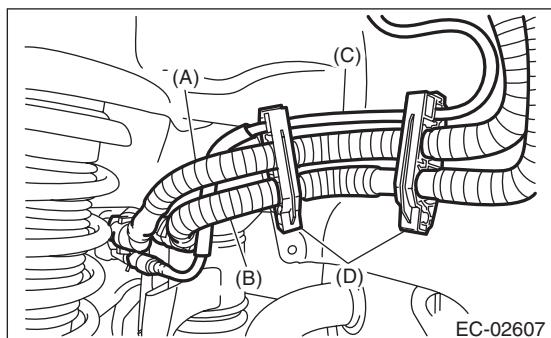

6) Install the rear mud guard LH. <Ref. to EI-38, INSTALLATION, Mud Guard.>

7) Lower the vehicle.

8) Install the rear wheel LH.

Tightening torque:

120 N·m (12.2 kgf·m, 88.5 ft-lb)

C: INSPECTION

- 1) Check that the canister has no deformation, cracks or other damages.
- 2) Check that the tube has no cracks, damage or loose part.