

## **6. EGR Valve**

### **A: REMOVAL**

For removal procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-33, REMOVAL, EGR Valve.>

### **B: INSTALLATION**

For installation procedure, refer to “FU(H4SO)” section. <Ref. to FU(H4SO)-33, INSTALLATION, EGR Valve.>

### **C: INSPECTION**

For inspection procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-33, INSPECTION, EGR Valve.>