

## 7. Fuel Level Sensor

### A: REMOVAL

For removal procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-62, REMOVAL, Fuel Level Sensor.>

### B: INSTALLATION

For installation procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-62, INSTALLATION, Fuel Level Sensor.>

### C: INSPECTION

For inspection procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-62, INSPECTION, Fuel Level Sensor.>