



## 14. Oil Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

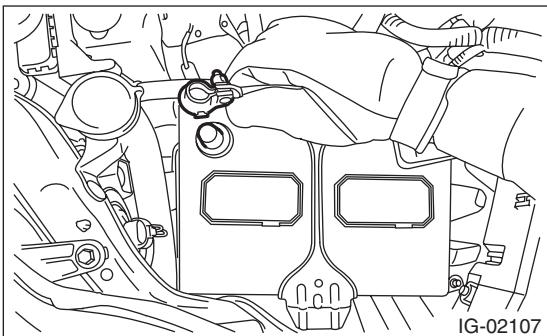

- 2) Remove the air intake boot assembly. <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Boot.>
- 3) Disconnect the connector from oil temperature sensor.
- 4) Remove the oil temperature sensor.

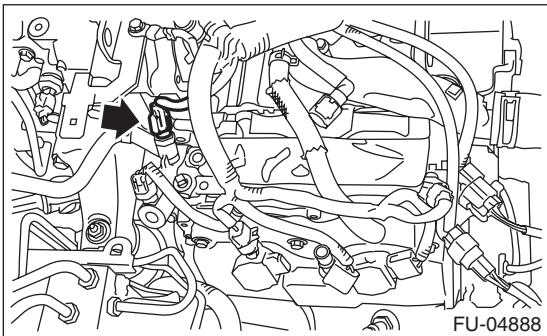

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**


Apply liquid gasket to the oil temperature sensor threads.

**Liquid gasket:**

**THREE BOND 1324 (Part No. 004403042) or equivalent**


**Tightening torque:**

**18 N·m (1.8 kgf·m, 13.3 ft-lb)**

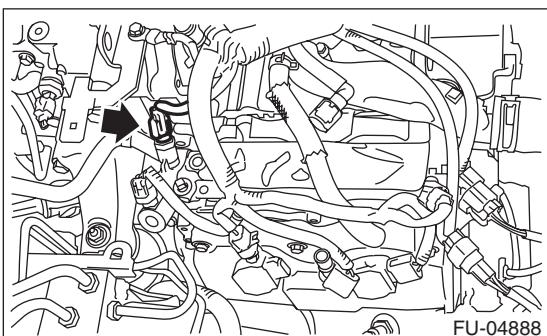

### C: INSPECTION

- 1) Check that the oil temperature sensor has no deformation, cracks or other damages.
- 2) Check the resistance between the oil temperature sensor terminals.

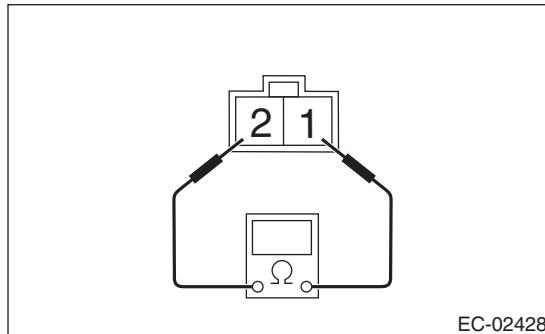

Terminal No.	Standard
1 and 2	$2.45 \pm 0.2$ (when $20^\circ\text{C}$ ( $68^\circ\text{F}$ ))